


11. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Raise the door glass to the top position.
- 2) Disconnect the ground cable from battery.
- 3) Remove the rear door trim. <Ref. to EI-36, REMOVAL, Door Trim.>
- 4) Remove the cable from rear inner remote. <Ref. to SL-36, REMOVAL, Rear Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
- 6) Remove the rear sash. <Ref. to GW-18, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Remove the three screws and one bolt.

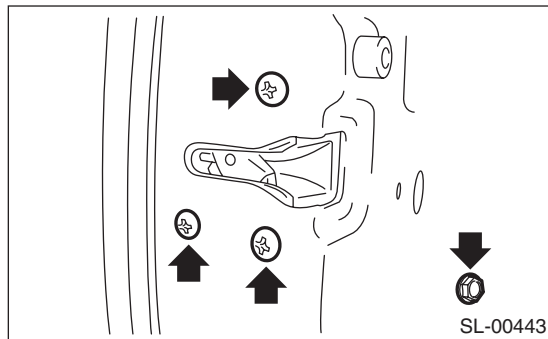

- 8) Disconnect the connectors, and then remove the rear door latch and door lock actuator assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

<Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

- 1) Check cable for deformation. If any deformation is found, correct the deformation, as this may cause the improper operation. Replace the rear door latch and door lock actuator assembly, if the deformation can not be corrected.
- 2) Check the lever and cable for smooth operation.