


7. Front Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Disconnect the ground cable from battery.
- 3) Remove the front door trim. <Ref. to EI-36, RE-MOVAL, Door Trim.>
- 4) Remove the cable from the front inner remote. <Ref. to SL-32, REMOVAL, Front Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-17, RE-MOVAL, Front Sealing Cover.>
- 6) Remove the door sash. <Ref. to GW-10, RE-MOVAL, Front Door Glass.>
- 7) Remove the connection rod of the key cylinder lever. (Driver's side only)
- 8) Remove the three screws.

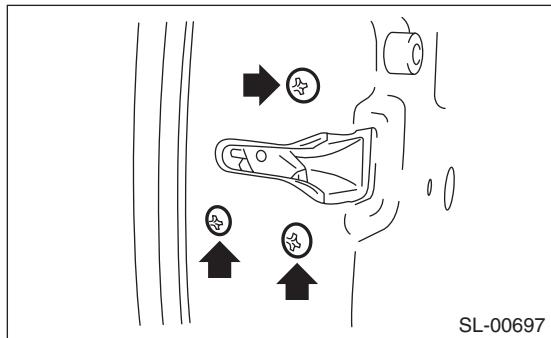

- 9) Remove the front door latch and actuator assembly, and disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

<Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

- 1) Check rod and cable for deformation. If any deformation is found, correct the deformation, as this may cause the improper operation. Replace the front door latch and actuator assembly, if the deformation can not be corrected.
- 2) Check the lever, rod, and cable for smooth operation.