


### 10. Rear Wiper Arm


#### A: REMOVAL

- 1) Detach the wiper arm cover (A).
- 2) Remove the nut (B) to remove the wiper arm.

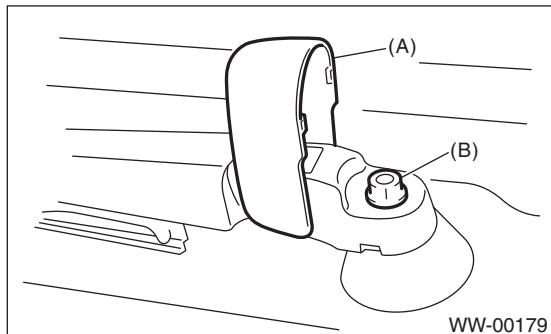

#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade with the marking (A) of the glass.

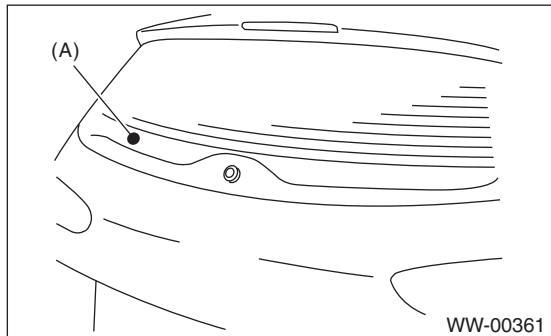

#### *Tightening torque:*

Refer to "COMPONENT" of "General Description". <Ref. to WW-3, REAR WIPER, COMPONENT, General Description.>

#### C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade with the marking (A) of the glass.

