

# Wiper and Washer System

## WIPER AND WASHER SYSTEMS

## 2. Wiper and Washer System

### A: WIRING DIAGRAM

#### 1. WIPER AND WASHER (FRONT)

<Ref. to WI-111, WIRING DIAGRAM, Front Wiper and Washer System.>

#### 2. WIPER AND WASHER (REAR)

<Ref. to WI-112, WIRING DIAGRAM, Rear Wiper and Washer System.>

### B: INSPECTION

Symptom	Repair order
Wiper and washers do not operate.	1. Wiper fuse (Front: F/B No. 30, Rear: F/B No. 23) 2. Combination switch 3. Wiper motor assembly 4. Wiring harness 5. Wiper relay unit 6. Body integrated unit (rear wiper only)
Wipers do not operate in LO or HI.	1. Combination switch 2. Wiper motor assembly 3. Wiring harness 4. Wiper relay unit
Wipers do not operate in INT.	1. Combination switch 2. Wiper motor assembly 3. Wiring harness 4. Body integrated unit (rear wiper only)
Washer motor does not operate.	1. Washer switch 2. Washer motor 3. Wiring harness
Wipers do not operate when washer switch is ON.	1. Wiper motor assembly 2. Wiring harness
Washer fluid spray does not operate properly.	1. Washer motor 2. Washer hose and nozzle

### C: NOTE

For the wiper and washer system component parts, refer to the corresponding section for each component.

- Combination Switch (Wiper) <Ref. to WW-7, Combination Switch (Wiper).>
- Wiper blade <Ref. to WW-11, Wiper Blade.>
- Front wiper arm <Ref. to WW-16, Front Wiper Arm.>
- Front wiper motor and link <Ref. to WW-17, Front Wiper Motor and Link.>
- Rear wiper arm <Ref. to WW-19, Rear Wiper Arm.>
- Rear wiper motor <Ref. to WW-20, Rear Wiper Motor.>
- Washer tank and motor <Ref. to WW-13, Washer Tank and Motor.>
- Front washer nozzle <Ref. to WW-18, Front Washer Nozzle.>
- Rear washer nozzle <Ref. to WW-21, Rear Washer.>