

List of Diagnostic Trouble Code (DTC)

BRAKE VACUUM CONTROL(BVC) (DIAGNOSTICS)

10. List of Diagnostic Trouble Code (DTC)

A: LIST

| DTC | Display | Content of diagnosis | Reference |
|-----|-------------------------------|---|--|
| 11 | Sensor Output Out of Range | Brake vacuum sensor output error | <Ref. to BVC(diag)-15, DTC 11 SENSOR OUTPUT OUT OF RANGE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 12 | Compare Error in Other Sensor | Error in comparison with other brake booster relative pressure | <Ref. to BVC(diag)-17, DTC 12 COMPARE ERROR IN OTHER SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 13 | Pressure Sensor Output | Brake vacuum sensor seizure malfunction | <Ref. to BVC(diag)-19, DTC 13 PRESSURE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 21 | Discrepancy in Relay (ON) | Drive does not match between the brake vacuum pump relay and the brake vacuum pump. | <Ref. to BVC(diag)-22, DTC 21 DISCREPANCY IN RELAYS (ON), Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 22 | Discrepancy in Relay (OFF) | Drive does not match between the brake vacuum pump relay and the brake vacuum pump. | <Ref. to BVC(diag)-25, DTC 22 DISCREPANCY IN RELAYS (OFF), Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 23 | Pump Continuous Work | Malfunction in brake vacuum pump continuous operation | <Ref. to BVC(diag)-27, DTC 23 PUMP CONTINUOUS WORK, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |