

## 6. Rear Differential Side Oil Seal


### A: INSPECTION

Make sure that there is no leakage from side oil seal. If there is any leakage, replace the oil seal.

### B: REPLACEMENT

- 1) Remove the rear differential. <Ref. to DI-17, REMOVAL, Rear Differential (VA-type).>
- 2) Remove the rear differential side oil seal using a screwdriver wrapped with vinyl tape to prevent the side retainer from scratches.
- 3) Using the ST, install the oil seal to the side retainer.

ST 398437700 DRIFT

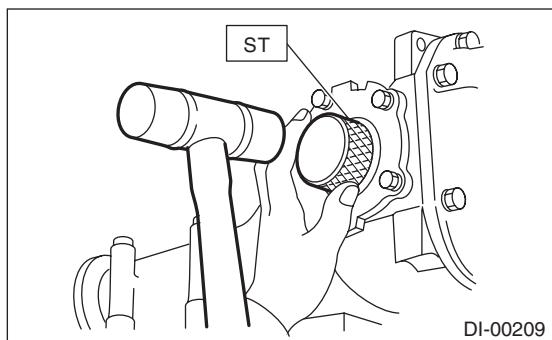

- 4) Install the rear differential. <Ref. to DI-19, INSTALLATION, Rear Differential (VA-type).>