


## 3. Front Crossmember Support Plate

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the front under cover. <Ref. to EI-18, REMOVAL, Front Under Cover.>
- 3) Remove the bolt and remove front crossmember support plate.

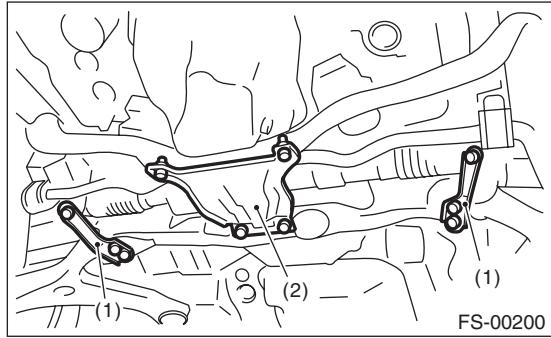

(1) Crossmember support plate  
(2) Jack-up plate

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

*Crossmember support plate*  
*60 N·m (6.1 kgf-m, 44.3 ft-lb)*

*Jack-up plate*  
*60 N·m (6.1 kgf-m, 44.3 ft-lb)*