



4. Front Stabilizer

A: REMOVAL

- 1) Lift up the vehicle, and then remove the front wheels.
- 2) Remove the front under cover. <Ref. to EI-18, REMOVAL, Front Under Cover.>
- 3) Remove the front crossmember support plate. <Ref. to FS-15, REMOVAL, Front Crossmember Support Plate.>
- 4) Remove the stabilizer link.

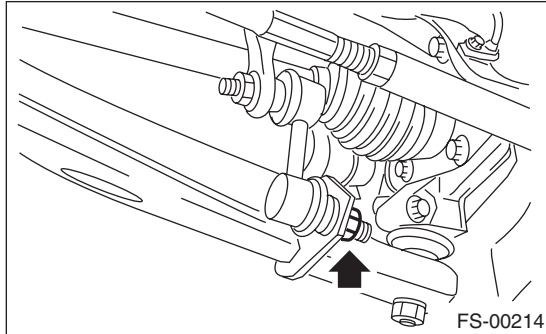

- 5) Remove the stabilizer clamp.

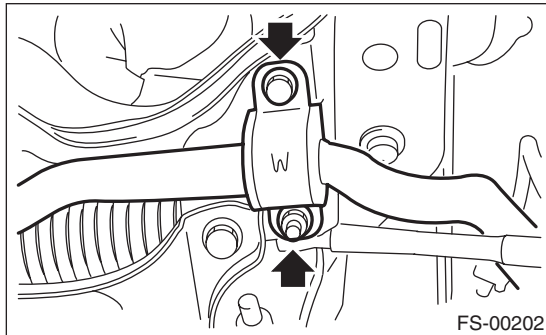

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Be sure to use a new flange nut.
- Install so that the paint mark on the stabilizer is on the left side of the vehicle.
- Install the stabilizer bushing (front crossmember side) while aligning it with the paint mark on stabilizer.

Tightening torque:

Stabilizer link:

60 N·m (6.1 kgf-m, 44.3 ft-lb)

Stabilizer clamp:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

C: INSPECTION

- 1) Check the bushing for cracks, fatigue or damage.
- 2) Check the stabilizer link for damage.