


### 4. Rear Trailing Link


#### A: REMOVAL

- 1) Lift up the vehicle, and then remove the rear wheels.
- 2) Remove the bracket, and remove the parking brake cable from the guide.

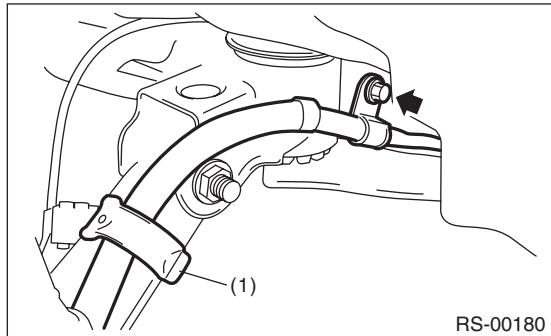

(1) Guide

- 3) Remove the ABS wheel speed sensor harness from the trailing link.
- 4) Remove the trailing link.

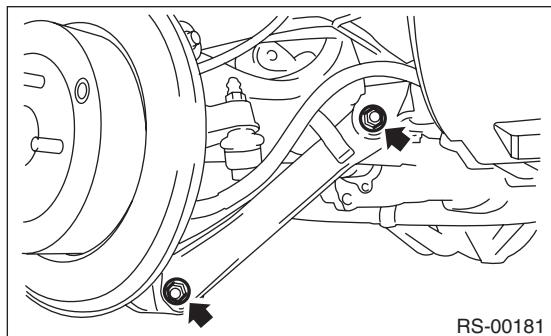

#### B: INSTALLATION

##### CAUTION:

- Be sure to use a new self-locking nut.
- Always tighten bushings with wheels in full contact with the ground and the vehicle at curb weight.

Install in the reverse order of removal.

##### *Tightening torque:*

###### *Trailing link*

*80 N·m (8.2 kgf-m, 59 ft-lb)*


###### *Parking Brake Cable bracket*

*33 N·m (3.4 kgf-m, 24 ft-lb)*

#### C: DISASSEMBLY

##### 1. REAR TRAILING LINK BUSHING

Using the ST and a pipe, press the bushing out.  
ST 20099PA010 INSTALLER & REMOVER

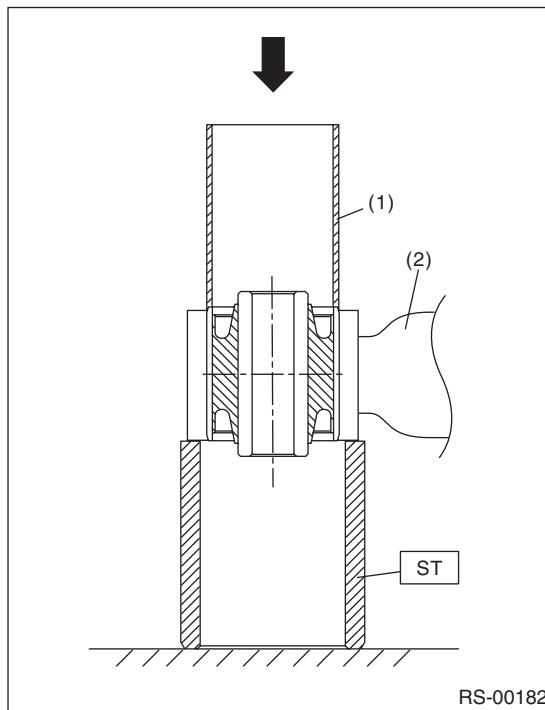



(1) 39 mm (1.54 in) dia., 50 mm (1.97 in) length pipe

(2) Trailing link

### 2. REAR HOUSING BUSHING

- 1) Remove the rear housing. <Ref. to DS-17, REMOVAL, Rear Axle.>
- 2) Using the ST and a hydraulic press, push out the bushing.

ST1 20099FG000 BUSHING REMOVER  
 ST2 20099PA110 INSTALLER & REMOVER  
 (BASE)

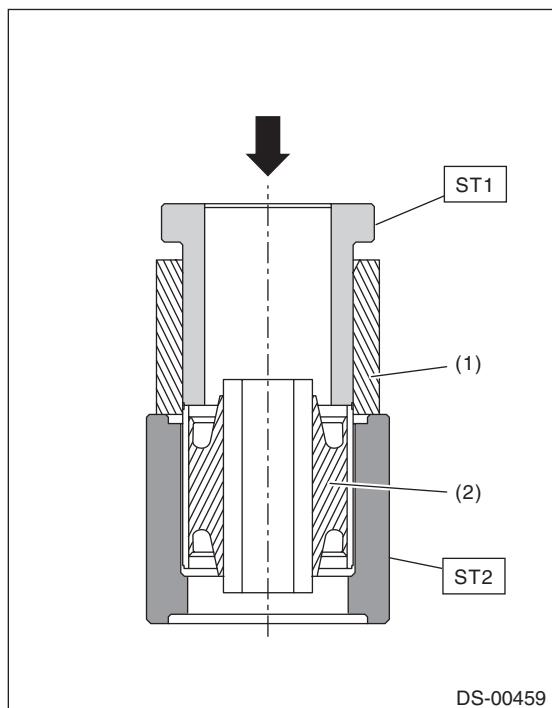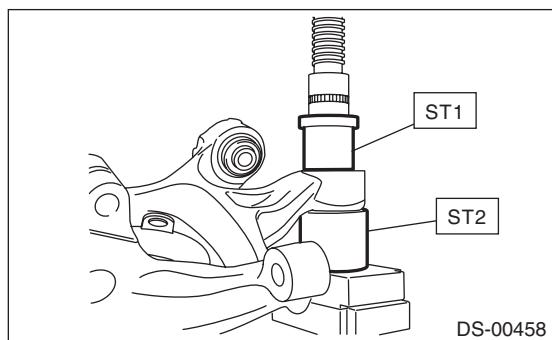


(1) Rear housing  
 (2) Bushing

### D: ASSEMBLY

#### 1. REAR TRAILING LINK BUSHING

Using the ST A and ST B, press-fit the bushing.  
 STA 20099AE040 INSTALLER & REMOVER  
 STB 20099PA010 INSTALLER & REMOVER

**CAUTION:**  
 Press the bushing straight in.

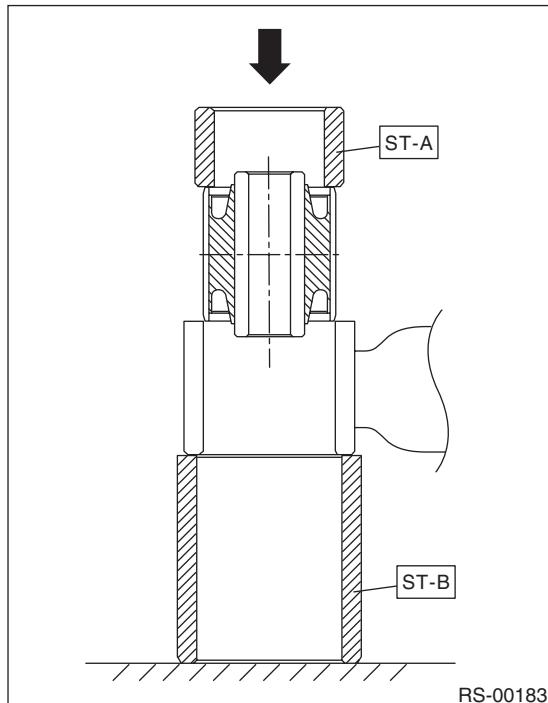

# Rear Trailing Link

## REAR SUSPENSION


### 2. REAR HOUSING BUSHING

Using the ST and a hydraulic press, press the bushing into place.


ST1 20099FG000 BUSHING REMOVER  
ST2 20099PA110 INSTALLER & REMOVER  
(BASE)

#### CAUTION:

Press the bushing straight in.

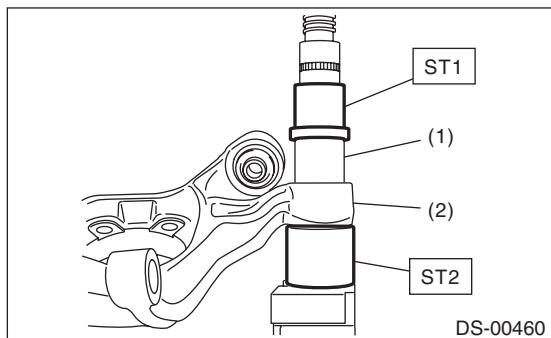

- (1) Bushing
- (2) Rear housing

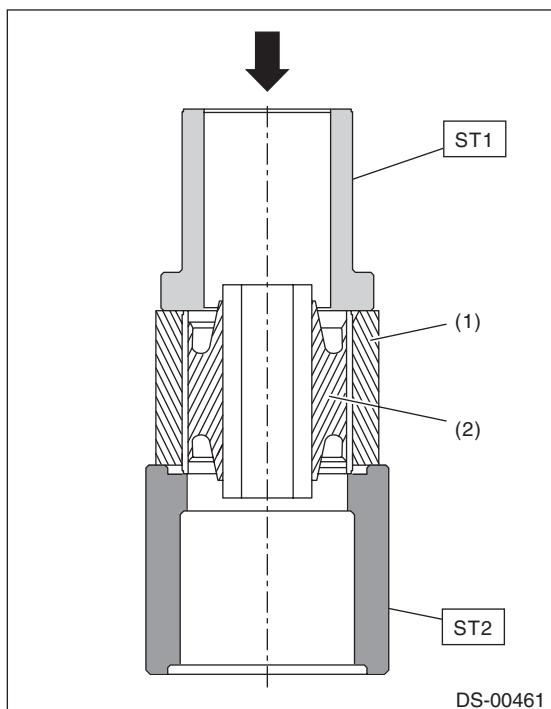

- (1) Rear housing
- (2) Bushing

### E: INSPECTION

Check the trailing link for bending, corrosion or damage.