

# General Diagnostic Table

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## 13.General Diagnostic Table

### A: INSPECTION

Symptom		Main probable cause	Other probable cause
Poor brake performance	Long braking/stopping distance	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Brake pad</li> <li>• Aeration to brake line</li> <li>• Tire specifications, tire wear and air pressures</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Master cylinder</li> <li>• Brake caliper</li> <li>• Disc rotor</li> <li>• Brake pipe</li> <li>• Brake booster</li> </ul>
	Wheel locks.	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Brake caliper</li> <li>• Brake pipe</li> </ul>
	Brake drag	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Master cylinder</li> <li>• Brake caliper</li> <li>• Parking brake</li> <li>• Axle &amp; wheels</li> <li>• Brake pedal play</li> </ul>	<ul style="list-style-type: none"> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Brake pad</li> <li>• Brake pipe</li> </ul>
	Long brake pedal stroke	<ul style="list-style-type: none"> <li>• Aeration to brake line</li> <li>• Brake pedal play</li> </ul>	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Master cylinder</li> <li>• Brake caliper</li> <li>• Brake pad</li> <li>• Brake pipe</li> <li>• Brake booster</li> </ul>
	Vehicle vertical pitching	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Road surface (uneven)</li> <li>• Suspension play or fatigue (poor damping)</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> </ul>
Poor brake performance	Unstable or uneven braking	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Brake caliper</li> <li>• Brake pad</li> <li>• Road surface (uneven)</li> <li>• Tire specifications, tire wear and air pressures</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Master cylinder</li> <li>• Disc rotor</li> <li>• Brake pipe</li> <li>• Axle &amp; wheels</li> <li>• Road with crowns or banks</li> <li>• Suspension play or fatigue (poor damping)</li> </ul>

## General Diagnostic Table

### VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

Symptom		Main probable cause	Other probable cause
Vibration or noise <ul style="list-style-type: none"> <li>• When braking suddenly</li> <li>• When accelerating suddenly</li> <li>• While driving on a slippery road</li> </ul>	Excessive brake pedal vibration	<ul style="list-style-type: none"> <li>• Road surface (uneven)</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Brake booster</li> <li>• Suspension play or fatigue (poor damping)</li> </ul>
	Noise from VDCH/U	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U (mount bushing)</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Brake pipe</li> </ul>	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> </ul>
	Noise from the front side of vehicle	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U (mount bushing)</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Master cylinder</li> <li>• Brake caliper</li> <li>• Brake pad</li> <li>• Disc rotor</li> <li>• Brake pipe</li> <li>• Brake booster</li> <li>• Suspension play or fatigue (poor damping)</li> </ul>	<ul style="list-style-type: none"> <li>• Axle &amp; wheels</li> <li>• Tire specifications, tire wear and air pressures</li> </ul>
	Noise inside passenger seat		<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> </ul>
	Noise from the rear side of vehicle	<ul style="list-style-type: none"> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Brake caliper</li> <li>• Brake pad</li> <li>• Disc rotor</li> <li>• Parking brake</li> <li>• Brake pipe</li> <li>• Suspension play or fatigue (poor damping)</li> </ul>	<ul style="list-style-type: none"> <li>• Axle &amp; wheels</li> <li>• Tire specifications, tire wear and air pressures</li> </ul>
Engine does not accelerate or goes into a stall when accelerating suddenly or driving on a slippery surface.		<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Master cylinder</li> <li>• Brake caliper</li> <li>• Parking brake</li> <li>• Incorrect wiring or piping</li> </ul>	<ul style="list-style-type: none"> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Brake pad</li> <li>• Brake pipe</li> </ul>

# General Diagnostic Table

## VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

Symptom		Main probable cause	Other probable cause
Poor change-direction-operation stability of TCS	Deviation to right or left direction	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Brake caliper</li> <li>• Brake pad</li> <li>• Wheel alignment</li> <li>• Road surface (uneven)</li> <li>• Road with crowns or banks</li> <li>• Tire specifications, tire wear and air pressures</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• Disc rotor</li> <li>• Brake pipe</li> <li>• Axle &amp; wheels</li> <li>• Suspension play or fatigue (poor damping)</li> </ul>
	Vehicle spins.	<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Brake pad</li> <li>• Tire specifications, tire wear and air pressures</li> <li>• Incorrect wiring or piping connections</li> </ul>	<ul style="list-style-type: none"> <li>• Brake caliper</li> <li>• Brake pipe</li> </ul>
Steering wheel drag while driving		<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Incorrect wiring or piping connections</li> <li>• Power steering system</li> </ul>	<ul style="list-style-type: none"> <li>• Brake caliper</li> <li>• Brake pad</li> <li>• Disc rotor</li> <li>• Wheel alignment</li> <li>• Road surface (uneven)</li> <li>• Road with crowns or banks</li> <li>• Suspension play or fatigue (poor damping)</li> <li>• Tire specifications, tire wear and air pressures</li> </ul>
VDC operates while driving normally.		<ul style="list-style-type: none"> <li>• VDCCM&amp;H/U</li> <li>• Defective ABS wheel speed sensor or sensor gap</li> <li>• Defective steering angle sensor or improper neutral position</li> <li>• Defective yaw rate &amp; lateral G sensor or improper installation</li> <li>• Wheel alignment</li> <li>• Road surface (uneven)</li> <li>• Road with crowns or banks</li> <li>• Suspension play or fatigue (poor damping)</li> <li>• Tire specifications, tire wear and air pressures</li> <li>• Incorrect wiring or piping connections</li> <li>• Power steering system</li> </ul>	

## General Diagnostic Table

### VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

Symptom	Main probable cause	Other probable cause
<p>TCS OFF indicator light does not come on when the TCS OFF switch is depressed.</p> <p>NOTE: When pressing the TCS OFF switch for 10 seconds or more, the TCS OFF indicator light turns off and operation cannot be continued. When turning the ignition switch from OFF to ON, the previous status is restored.</p>	<ul style="list-style-type: none"><li>• Harness</li><li>• Indicator light bulb</li><li>• TCS OFF switch</li></ul>	

# BRAKE

**BR**

---

	Page
1. General Description .....	2
2. Front Brake Pad .....	12
3. Front Disc Rotor .....	14
4. Front Disc Brake Assembly .....	15
5. Rear Brake Pad .....	19
6. Rear Disc Rotor .....	21
7. Rear Disc Brake Assembly .....	23
8. Master Cylinder .....	26
9. Brake Booster .....	28
10. Brake Fluid .....	33
11. Air Bleeding .....	34
12. Brake Hose .....	36
13. Brake Pipe .....	38
14. Brake Pedal .....	39
15. Stop Light Switch .....	40
16. Brake Vacuum Pump .....	42
17. Brake Vacuum Sensor .....	43
18. General Diagnostic Table .....	44