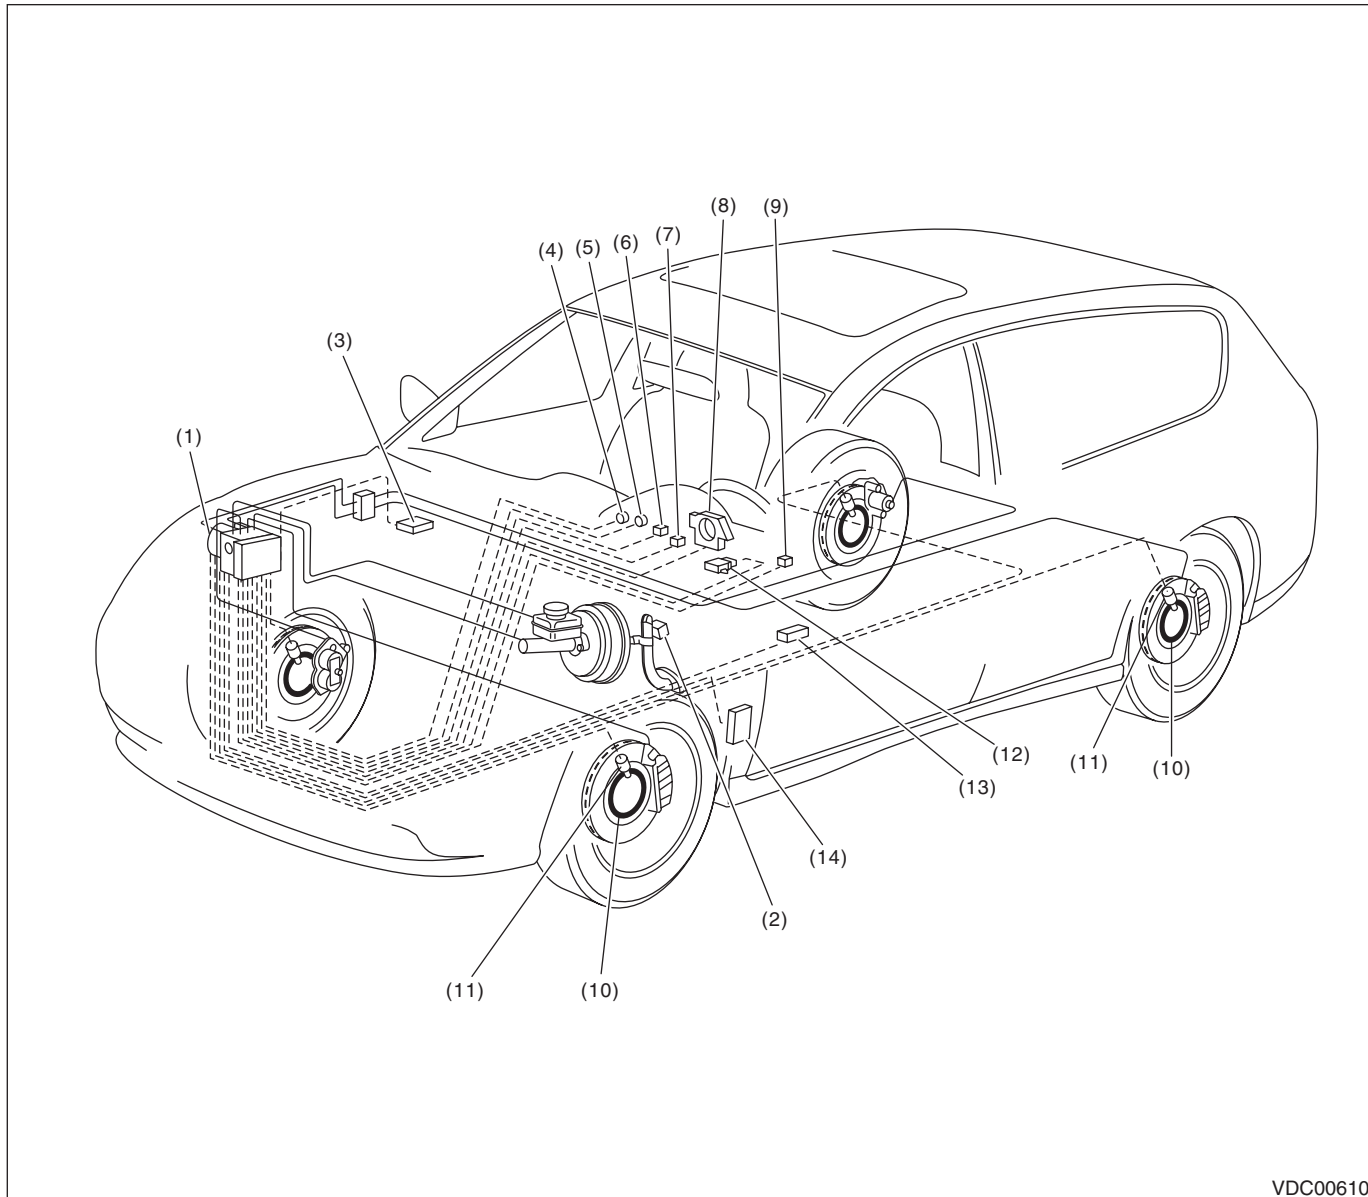


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

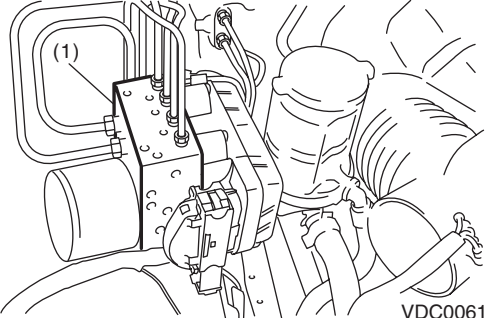
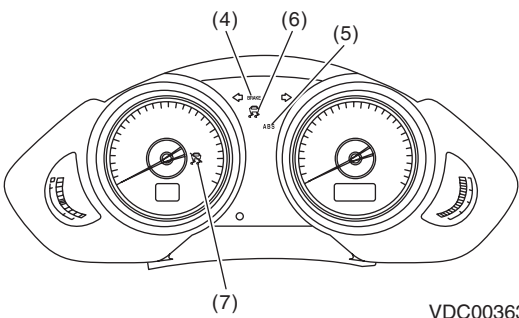
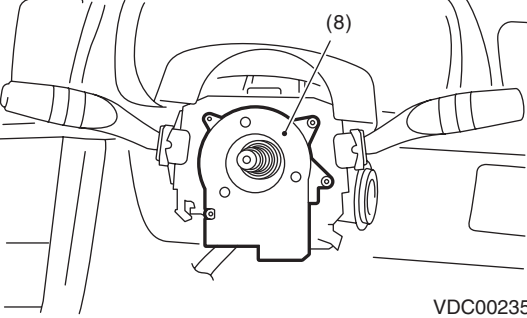
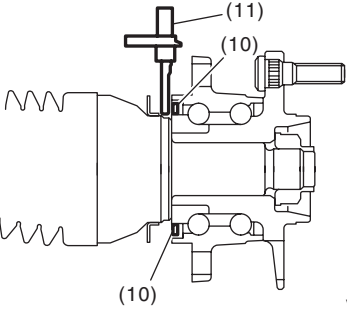
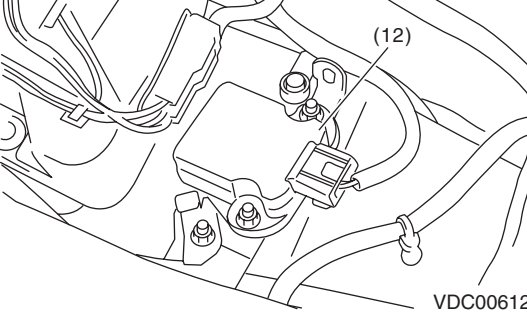
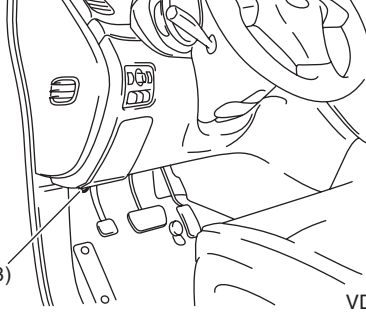


VDC00610

- | | | |
|---|---|--|
| (1) VDC control module & hydraulic control unit (VDCCM&H/U) | (5) ABS warning light | (10) Magnetic encoder |
| (2) Stop light switch | (6) VDC indicator light | (11) ABS wheel speed sensor |
| (3) Engine control module (ECM) | (7) VDC warning light and TCS OFF indicator light | (12) Yaw rate & lateral G sensor |
| (4) Brake warning light (EBD warning light) | (8) Steering angle sensor | (13) Data link connector |
| | (9) TCS OFF switch | (14) Transmission control module (TCM) |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

 VDC00611	 VDC00363
 VDC00235	 VDC00234
 VDC00612	 VDC00364