

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu», select the {Brake Control System}.
- 3) Click the [OK] button after the {VDC} is displayed.
- 4) On the «Brake Control Diagnosis» display screen, select the {Diagnostic Code(s) Display}.
- 5) Record DTCs and data.

NOTE:

- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTCs, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to VDC(diag)-36, List of Diagnostic Trouble Code (DTC).>
- DTCs are displayed up to three in detected order.

Display	Contents to be displayed
(Latest)	Indicate the latest malfunction DTC on the Subaru Select Monitor display.
(Old)	The latest DTC from the history of previous problems is displayed on Subaru Select Monitor display screen.
(Older)	The second latest DTC from the history of previous problems is displayed on the Subaru Select Monitor display screen.