


11.TCS OFF Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws, and then remove the TCS OFF switch.

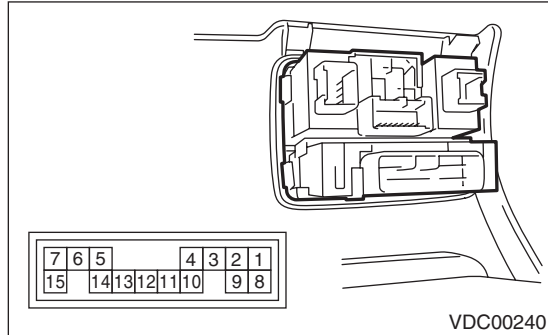

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between the TCS OFF switch terminals.

Switch position	Terminal No.	Standard value
ON	5 — 15	Less than 1 Ω
OFF	5 — 15	1 M Ω or more

If NG, replace the TCS OFF switch.

TCS OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	8
4. Electrical Component Location	10
5. Control Module I/O Signal	12
6. Subaru Select Monitor	16
7. Read Diagnostic Trouble Code (DTC)	22
8. Inspection Mode	23
9. Clear Memory Mode	24
10. Warning Light Illumination Pattern	25
11. List of Diagnostic Trouble Code (DTC)	36
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	40
13. General Diagnostic Table	87