


10. Reservoir Tank


A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Remove the collector cover.
- 3) Lift up the vehicle.
- 4) Remove the under cover.
- 5) Remove the bolts on the underside of the radiator stay.

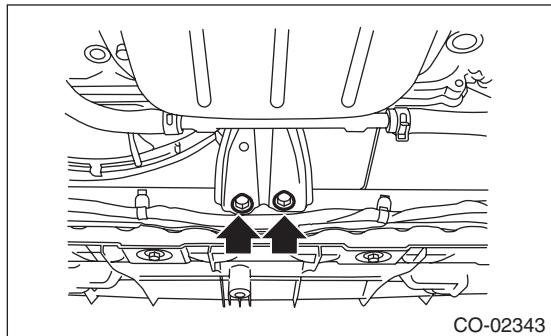


CO-02343

- 6) Lower the vehicle lift.
- 7) Remove the air intake duct. <Ref. to IN(H6DO)-8, REMOVAL, Air Intake Duct.>
- 8) Remove the front upper cover.

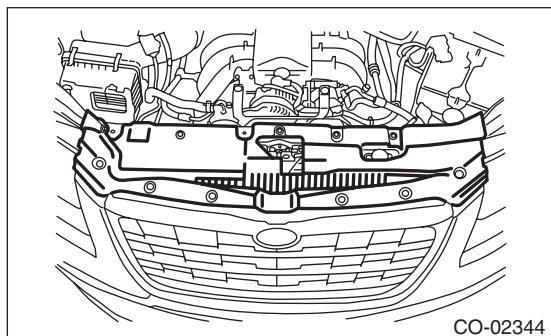

CO-02344


- 9) Remove the radiator upper brackets.

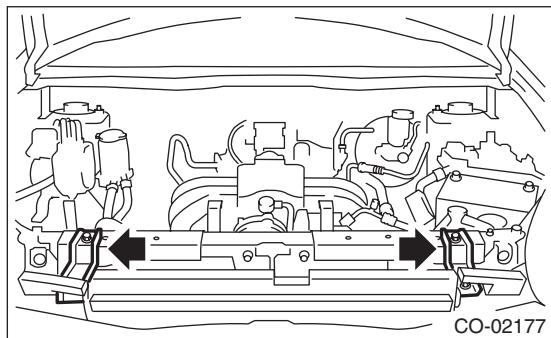

CO-02177


- 10) Remove the radiator stay.

- (1) Remove the latch.

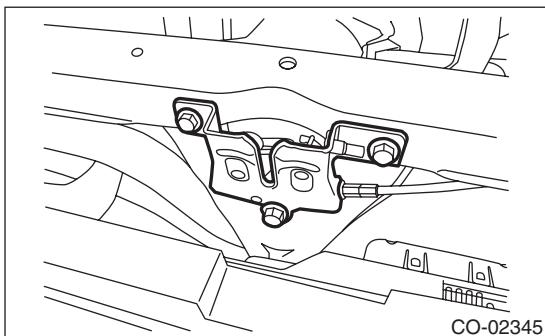


CO-02345

- (2) Remove the radiator hose bracket.
- (3) Remove the clip holding the harness.
- (4) Remove the bolts on the left side of the radiator stay.

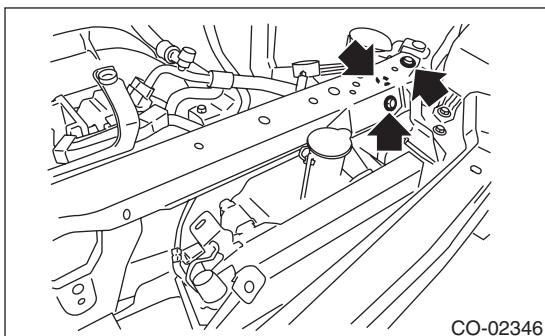


CO-02346

- (5) Remove the bolts on the right side of the radiator stay.

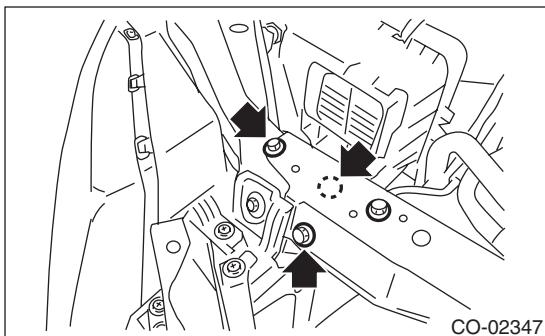

CO-02347

- 11) Remove the reservoir tank.

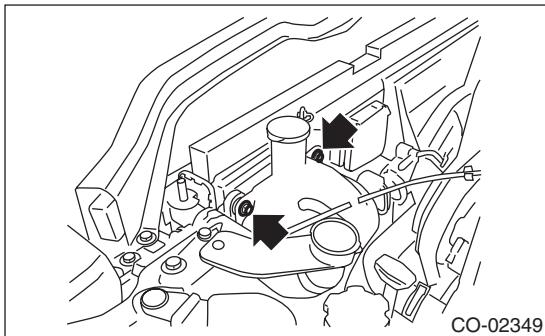


CO-02349

B: INSTALLATION

1) Install the reservoir tank.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft·lb)

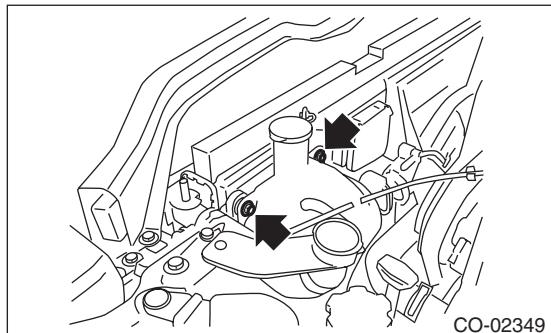


CO-02349

2) Install the radiator stay.

(1) Install the latch.

Tightening torque:

33 N·m (3.4 kgf·m, 24.3 ft·lb)

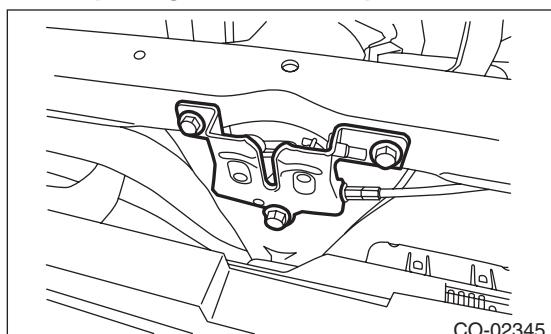

CO-02345


(2) Install the radiator hose bracket.

(3) Hold the harness to the radiator stay with a clip.

(4) Tighten the bolts on the left side of the radiator stay.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft·lb)

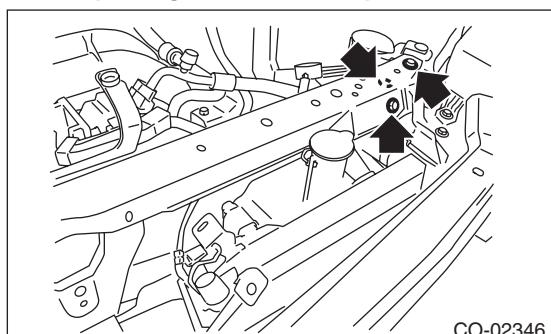


CO-02346

(5) Tighten the bolts on the right side of the radiator stay.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft·lb)

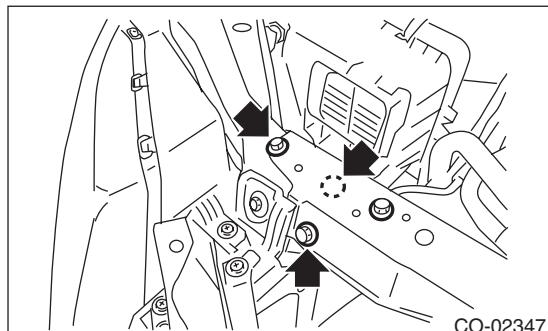


CO-02347

3) Install the radiator upper brackets.


Tightening torque:

12 N·m (1.2 kgf·m, 8.9 ft·lb)

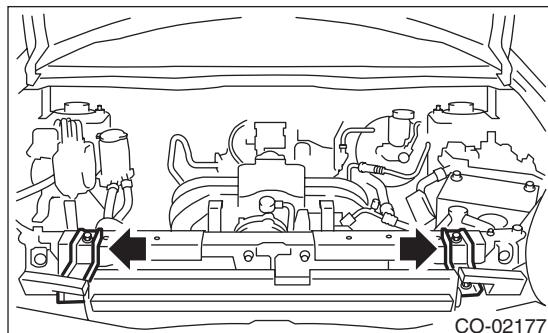

CO-02177

4) Install the front upper cover.

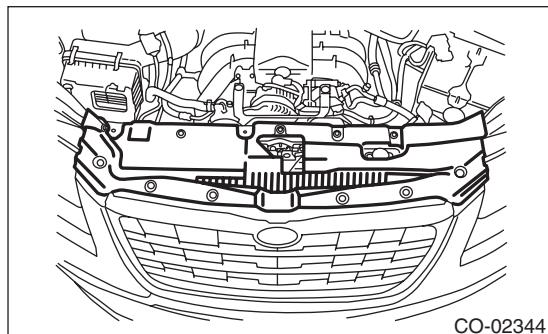

CO-02344

5) Install the air intake duct. <Ref. to IN(H6DO)-8, INSTALLATION, Air Intake Duct.>

6) Lift up the vehicle.


Reservoir Tank

COOLING

- 7) Tighten the bolts on the lower side of the radiator stay.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

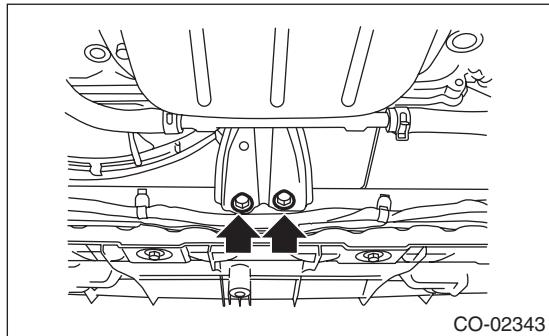

- 8) Install the under cover.
- 9) Lower the vehicle lift.
- 10) Install the collector cover.

C: INSPECTION

Make sure the engine coolant level is between "FULL" and "LOW".