



8. Radiator Main Fan and Fan Motor

A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Remove the collector cover.
- 3) Disconnect the ground cable from battery.
- 4) Lift up the vehicle.
- 5) Remove the under cover.
- 6) Remove the bolts on the underside of the radiator stay.

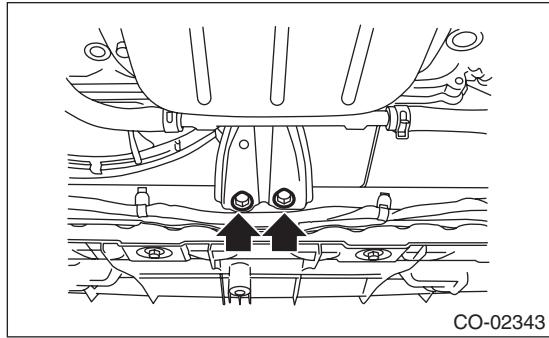


- 7) Remove the bolts on the underside of the radiator fan shroud.

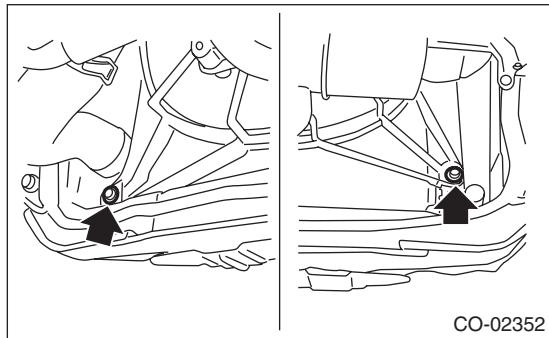

- 8) Lower the vehicle lift.
- 9) Remove the air intake duct. <Ref. to IN(H6DO)-8, REMOVAL, Air Intake Duct.>
- 10) Remove the front upper cover.

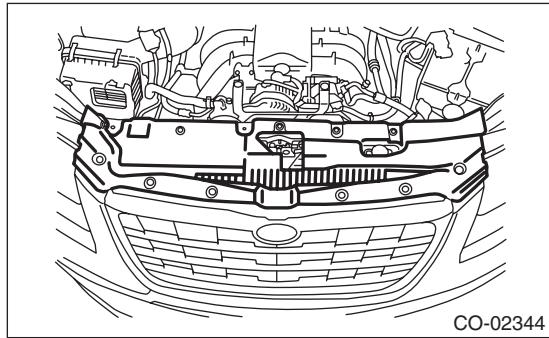


- 11) Remove the radiator upper brackets.

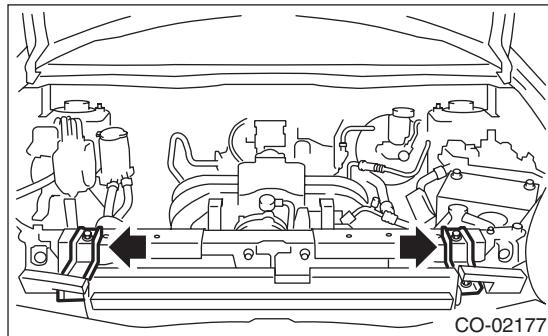


- 12) Remove the radiator stay.


- (1) Remove the latch.

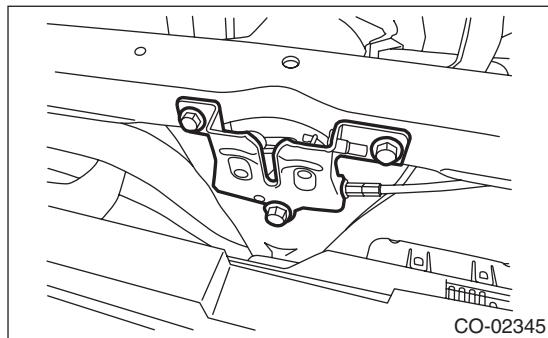

- (2) Remove the radiator hose bracket.
- (3) Remove the clip holding the harness.
- (4) Remove the bolts on the left side of the radiator stay.

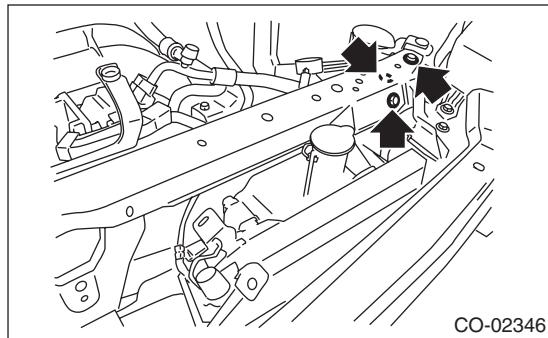


- (5) Remove the bolts on the right side of the radiator stay.

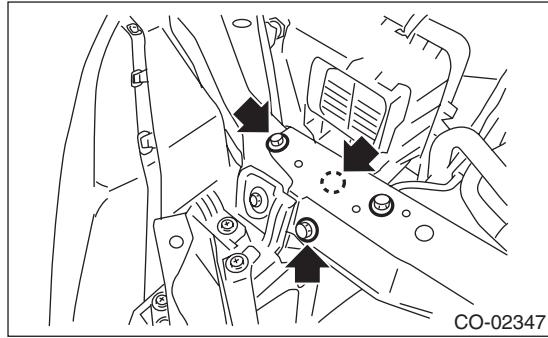


Radiator Main Fan and Fan Motor

COOLING


13) Disconnect the connector from radiator fan control unit.

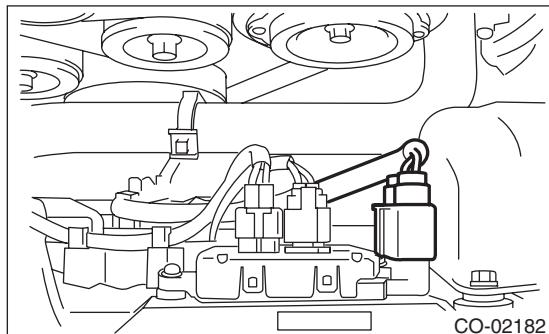

14) Remove the reservoir tank.

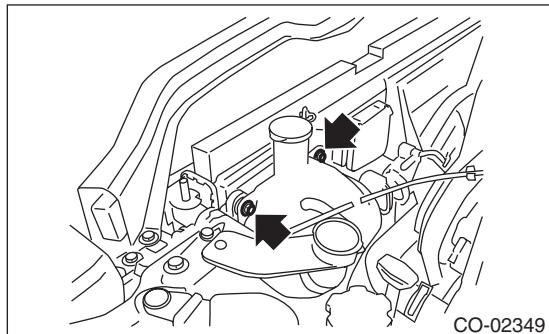

15) Remove the bolts on the upper side of the radiator fan shroud.

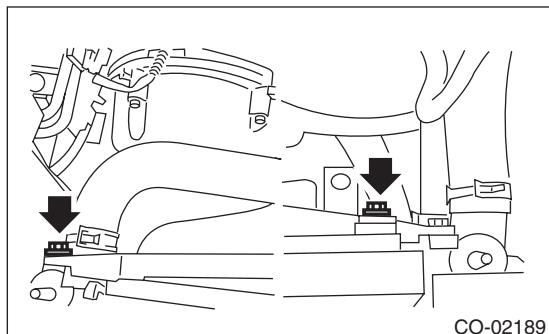

16) Remove the radiator fan shroud.

NOTE:

When pulling the radiator fan shroud up, be careful not to hit and damage the radiator and ATF hoses.

B: INSTALLATION


CAUTION:

Check if the radiator hose and the over flow hose or ATF hose are properly connected.

1) Tighten the bolts on the top side of the radiator fan shroud.

Tightening torque:


7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

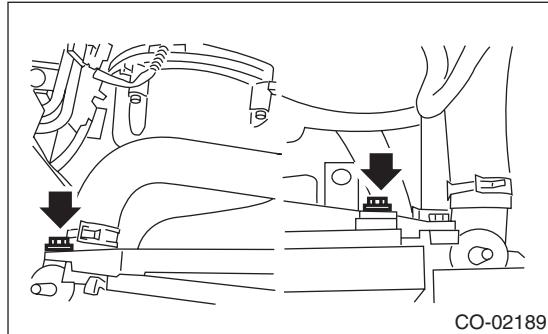


2) Install the reservoir tank.

Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

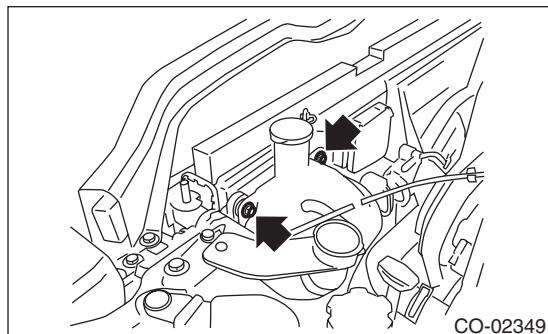

3) Connect the connector to radiator fan control unit.

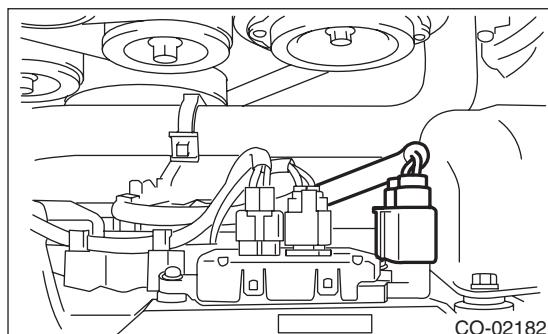

Radiator Main Fan and Fan Motor


COOLING

4) Install the radiator stay.

(1) Install the latch.

Tightening torque:

33 N·m (3.4 kgf-m, 24.3 ft-lb)

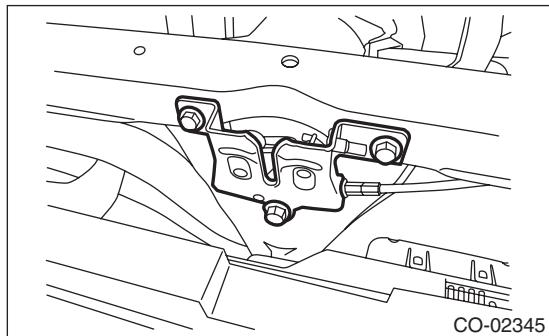


(2) Connect the radiator hose brackets.

(3) Hold the harness to the radiator stay with a clip.

(4) Tighten the bolts on the left side of the radiator stay.

Tightening torque:


18 N·m (1.8 kgf-m, 13.3 ft-lb)

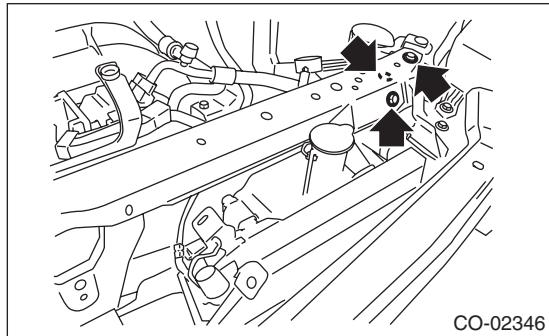

(5) Tighten the bolts on the right side of the radiator stay.

Tightening torque:


18 N·m (1.8 kgf-m, 13.3 ft-lb)

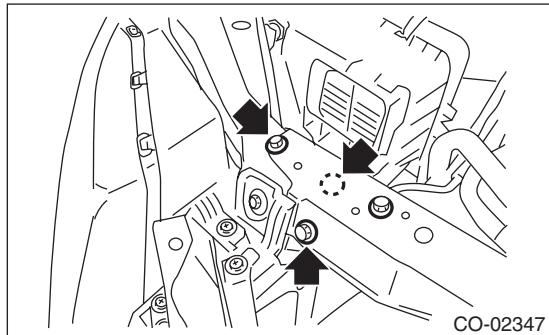


5) Install the radiator upper brackets.

Tightening torque:

12 N·m (1.2 kgf-m, 8.9 ft-lb)

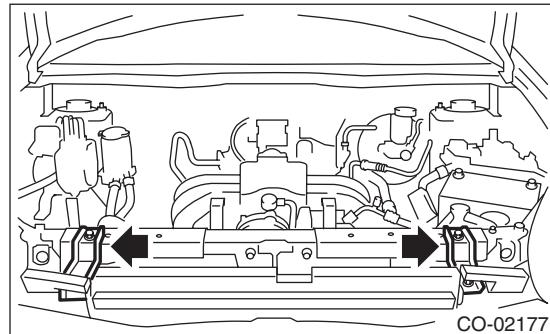

6) Install the front upper cover.

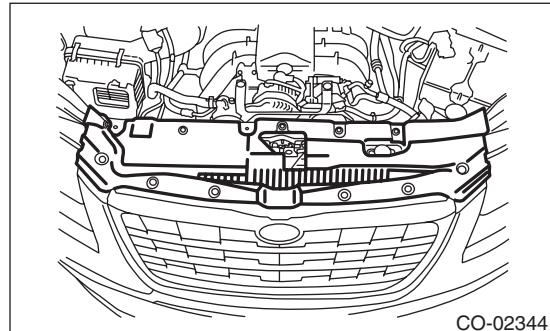


7) Install the air intake duct. <Ref. to IN(H6DO)-8, INSTALLATION, Air Intake Duct.>

8) Lift up the vehicle.

9) Tighten the bolts on the lower side of the radiator stay.

Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)

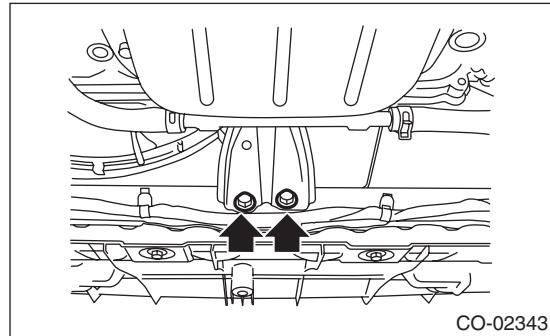


Radiator Main Fan and Fan Motor

COOLING

10) Tighten the bolts on the lower side of the radiator fan shroud.

Tightening torque:


7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

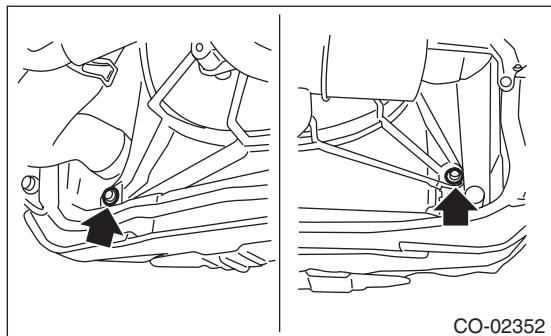


- 11) Install the under cover.
- 12) Lower the vehicle lift.
- 13) Connect the ground cable to battery.
- 14) Install the collector cover.

C: DISASSEMBLY

- 1) Remove the radiator main fan.

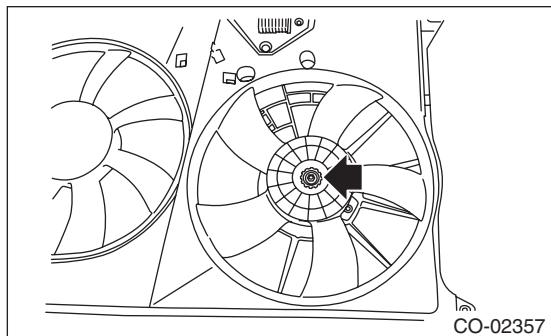

- 2) Remove the radiator main fan motor.

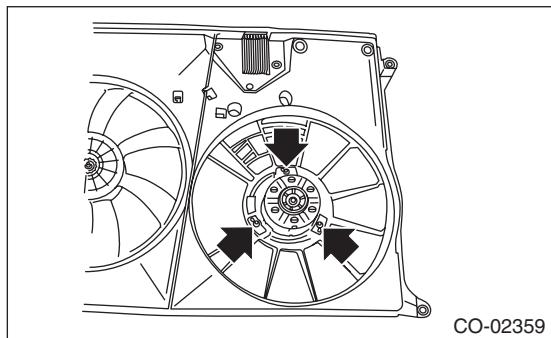


D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:

3.8 N·m (0.4 kgf-m, 2.8 ft-lb)

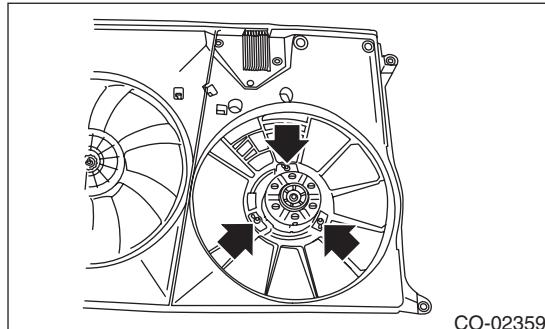

Tightening torque:

6.3 N·m (0.6 kgf-m, 4.6 ft-lb)

