


10. Fuel Tank Pressure Sensor

A: REMOVAL

WARNING:

Place "NO OPEN FLAMES" signs near the working area.

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Open the fuel filler lid, and remove the fuel filler cap.
- 4) Lift up the vehicle.
- 5) Disconnect the connector from the fuel tank pressure sensor.
- 6) Disconnect the hose from the fuel tank pressure sensor.
- 7) Remove the fuel tank pressure sensor along with the bracket.

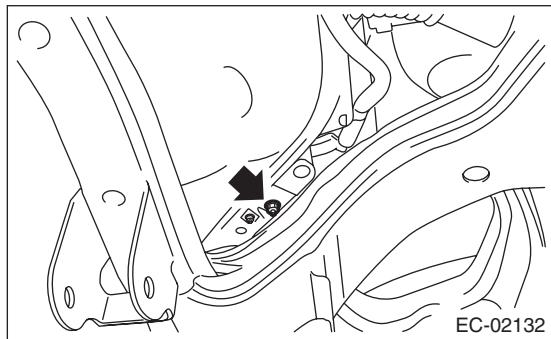


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.4 N·m (0.8 kgf·m, 5.5 ft-lb)

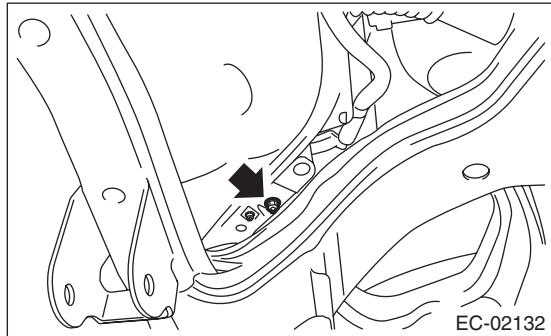

C: INSPECTION

Make sure the hoses are not cracked or loose.