

## PCV Valve


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---


### 13.PCV Valve

#### A: REMOVAL

1) Disconnect the PCV hose.

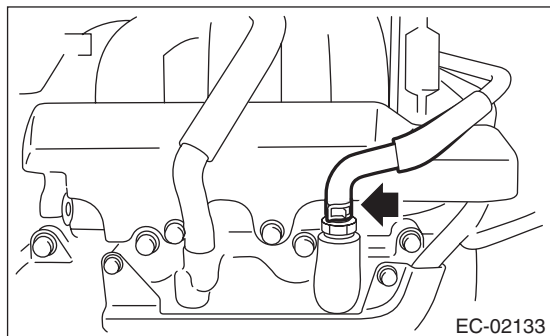

2) Remove the PCV valve from rocker cover.

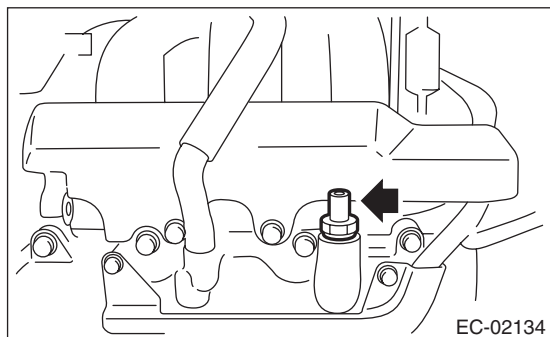

#### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

**Liquid gasket:**

**THREE BOND 1141 (Part No. 004403006) or equivalent**

**Tightening torque:**

**25 N·m (2.5 kgf-m, 18.4 ft-lb)**

# INTAKE (INDUCTION)

# *IN(H6DO)*

---

|                              | Page |
|------------------------------|------|
| 1. General Description ..... | 2    |
| 2. Air Cleaner Element ..... | 4    |
| 3. Air Cleaner Case .....    | 5    |
| 4. Air Intake Chamber .....  | 7    |
| 5. Air Intake Duct .....     | 8    |
| 6. Resonator Chamber .....   | 9    |