


2. Front Catalytic Converter

A: REMOVAL

The front and rear catalytic converters are integrated into the front exhaust pipe; therefore, refer to "Front Exhaust Pipe" for removal procedures. <Ref. to EX(H6DO)-4, REMOVAL, Front Exhaust Pipe.>

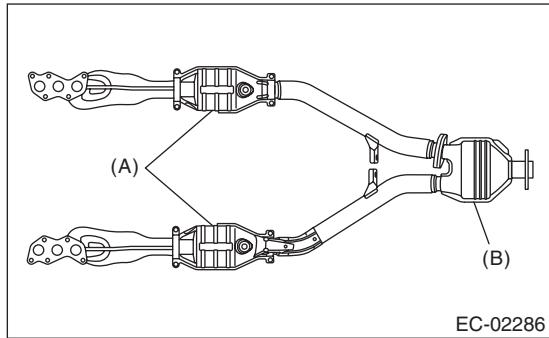


(A) Front catalytic converter

(B) Rear catalytic converter

B: INSTALLATION

The front and rear catalytic converters are integrated into the front exhaust pipe; therefore, refer to "Front Exhaust Pipe" for installation procedures. <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.>

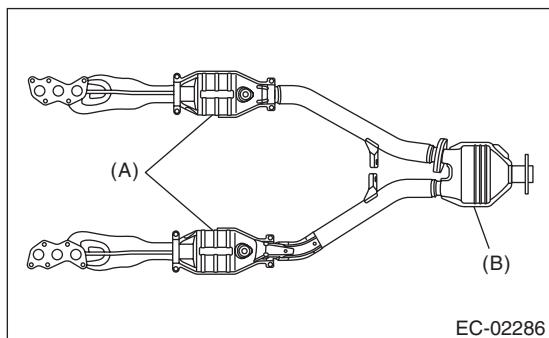

(A) Front catalytic converter

(B) Rear catalytic converter

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.