

8. Fuel Temperature Sensor

A: REMOVAL

The fuel temperature sensor is integrated into fuel level sensor as one unit; therefore, refer to “Fuel Level Sensor” for removal procedure. <Ref. to FU(H6DO)-52, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

The fuel temperature sensor and fuel level sensor are integrated into one unit; therefore, refer to “Fuel Level Sensor” for installation procedure. <Ref. to FU(H6DO)-52, INSTALLATION, Fuel Level Sensor.>