

13. Clear Memory Mode

A: OPERATION

NOTE:

When Clear Memory Mode is performed in OBD mode on the Subaru Select Monitor, only DTCs are cleared.

1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Engine Control System}.
- 3) Select [OK] after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select {Clearing Memory}.
- 5) When the “Clear Memory?” is shown on the screen, click the [Yes] button.
- 6) When “Done” and “Turn ignition switch to OFF” are shown on the display screen, turn the ignition switch to OFF.

NOTE:

- Initial diagnosis of electronic throttle control is performed after memory clearance. Therefore, start the engine after 10 seconds or more have passed since turning the ignition switch to ON.
- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.

2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Engine Control System}.
- 3) Select [OK] after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System}.
- 5) On the «OBD Menu» display screen, select the {Clear Diagnostic Code}.
- 6) When the “Clear Diagnostic Code?” is shown on the screen, click the [Yes] button.
- 7) When “Done” and “Turn ignition switch to OFF” are shown on the display screen, turn the ignition switch to OFF.

NOTE:

- Initial diagnosis of electronic throttle control is performed after memory clearance. Therefore, start the engine after 10 seconds or more have passed since turning the ignition switch to ON.
- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.

3. GENERAL SCAN TOOL

For procedures clearing memory using the general scan tool, refer to the general scan tool operation manual.

NOTE:

Initial diagnosis of electronic throttle control is performed after memory clearance. For this reason, start the engine after 10 seconds or more have elapsed since the ignition switch was turned to ON.