


3. Rear Exhaust Pipe

A: REMOVAL

CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Separate the rear exhaust pipe from front exhaust pipe.

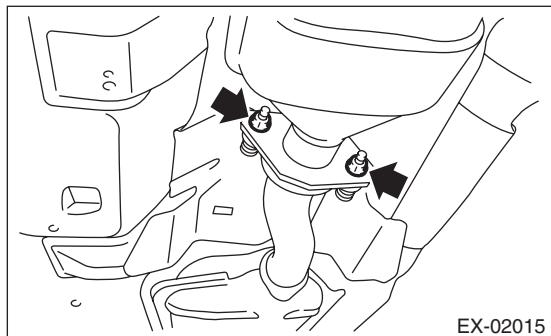


EX-02015

- 4) Separate the rear exhaust pipe from muffler.

CAUTION:


Be careful not to pull down the rear exhaust pipe.

- LH side

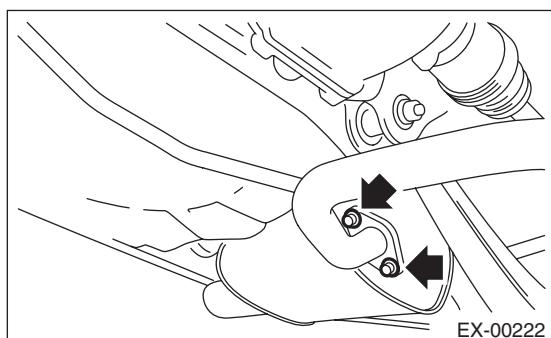

EX-00222


- RH side

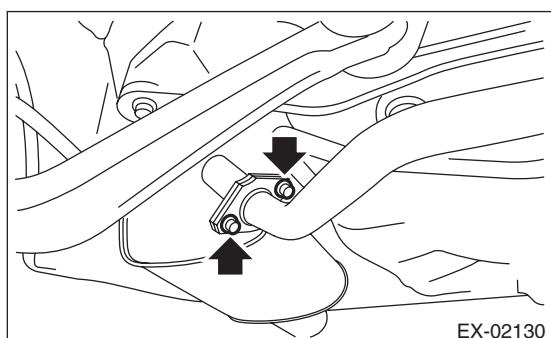

EX-02130

- 5) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 6) Remove the rear exhaust pipe bracket from cushion rubber.

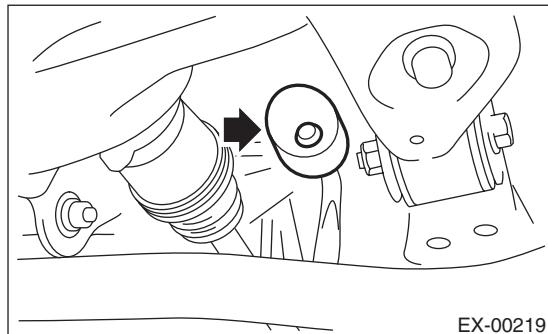

EX-00219

- 7) Remove the rear exhaust pipe.


B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 2) Install the rear exhaust pipe bracket to cushion rubber.

NOTE:

After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

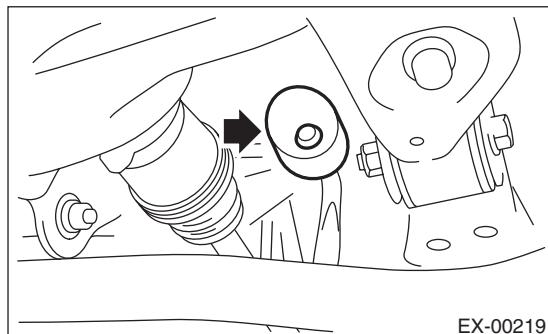

EX-00219

Rear Exhaust Pipe

EXHAUST

3) Install the rear exhaust pipe to muffler.


NOTE:

Use a new gasket and self-locking nut.


Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft-lb)

- LH side

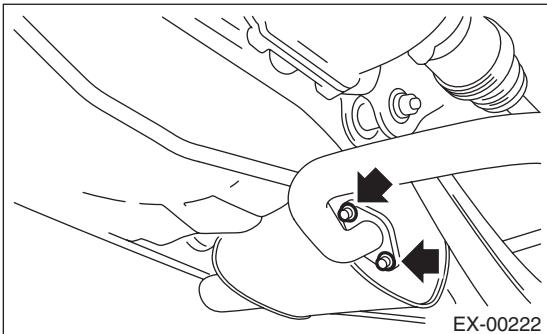

- RH side

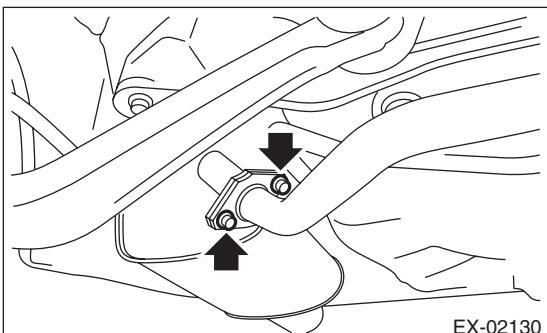


4) Install the rear exhaust pipe to center exhaust pipe.

NOTE:

Use a new gasket.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

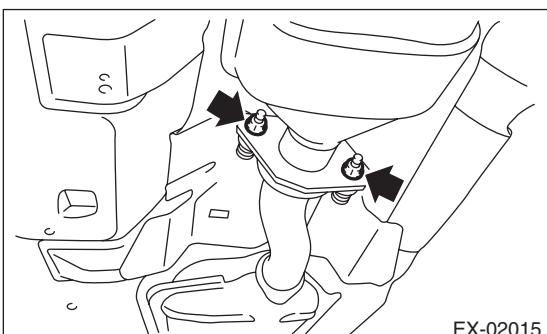

5) Lower the vehicle.

C: INSPECTION

1) Check the connections and welds for exhaust leaks.

2) Make sure there are no holes or rusting.

3) Check the cushion rubber for wear or crack.