


14.Oil Temperature Sensor

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the connector from the oil temperature sensor.

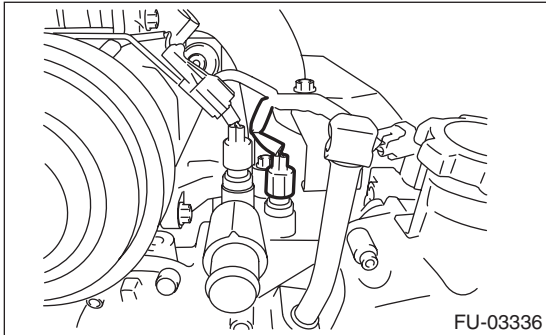

- 4) Remove the oil temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

22 N·m (2.2 kgf-m, 16.2 ft-lb)