



17. Engine Control Module (ECM)

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front pillar lower trim and console side panel lower RH of passenger's side.
- 3) Detach the floor mat of passenger's seat.
- 4) Remove the protect cover.

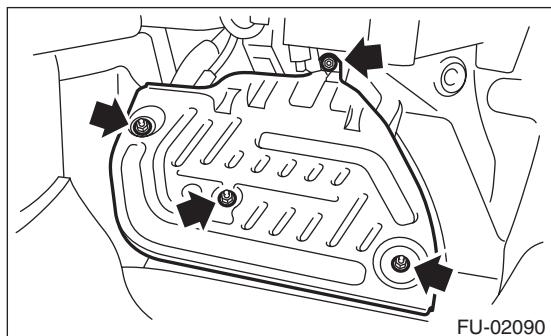

- 5) Remove the nuts which hold the ECM to the bracket.
- 6) Remove the clip (A) from bracket.

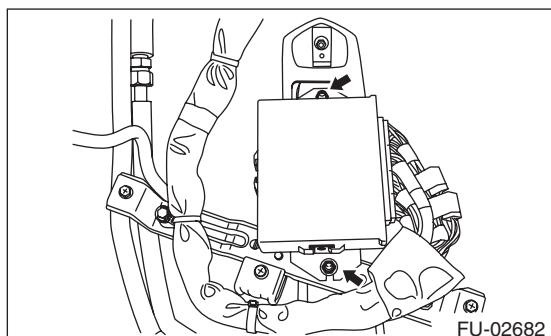

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When the ECM on a model with immobilizer has been replaced, be sure to perform registration of the immobilizer. (Refer to "PC application help for Subaru Select Monitor".)

NOTE:

When replacing the ECM, be careful not to use ECM with incorrect specification to avoid any damage on the fuel injection system.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)