

26. Fuel Level Sensor

A: REMOVAL

WARNING:

Place "NO OPEN FLAMES" signs near the working area.


CAUTION:

- Be careful not to spill fuel.
- When the fuel gauge pointer is at two third or more, the fuel may spill out. Be sure to drain the fuel before the operation.

NOTE:


The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H6DO)-50, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector (A) from fuel pump bracket.
- 3) Remove the fuel temperature sensor (B).
- 4) Remove the fuel level sensor (C).

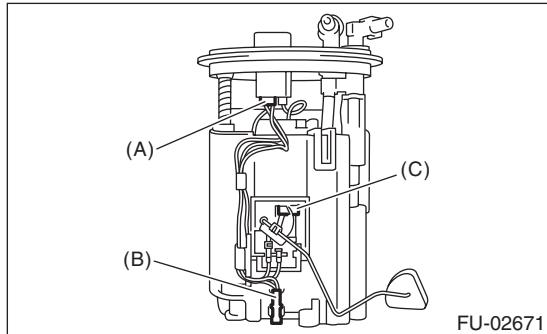

B: INSTALLATION

- 1) Attach the fuel level sensor (C).
- 2) Install the fuel temperature sensor (B).
- 3) Connect the connector (A) to fuel pump bracket.

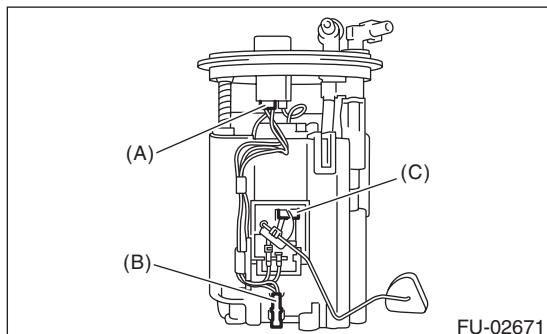

- 4) Install the fuel pump assembly. <Ref. to FU(H6DO)-50, INSTALLATION, Fuel Pump.>