



### 3. Intake Manifold

#### A: REMOVAL


- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-43, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Disconnect the ground cable from battery.
- 4) Open the fuel filler lid, and remove the fuel filler cap.
- 5) Remove the air cleaner case and air intake chamber. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.> <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Chamber.>
- 6) Remove the generator. <Ref. to SC(H6DO)-14, REMOVAL, Generator.>
- 7) Disconnect the connector (A) from the throttle body.
- 8) Disconnect the engine harness connector (B).

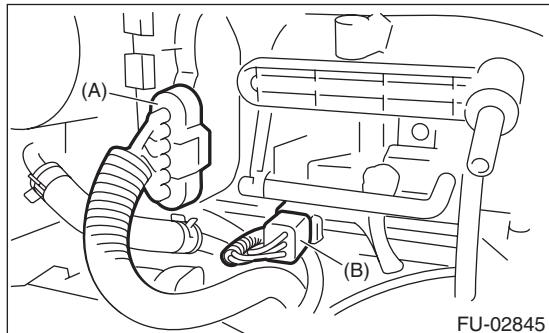


- 9) Disconnect the engine coolant hoses from the throttle body.

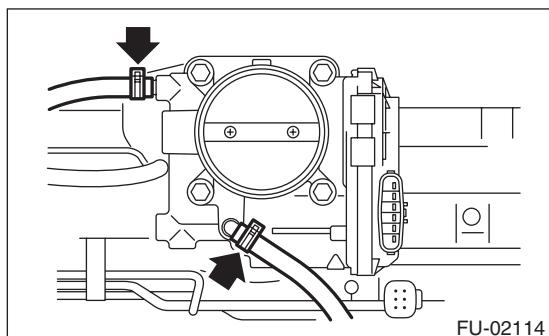

- 10) Disconnect the PCV hose.

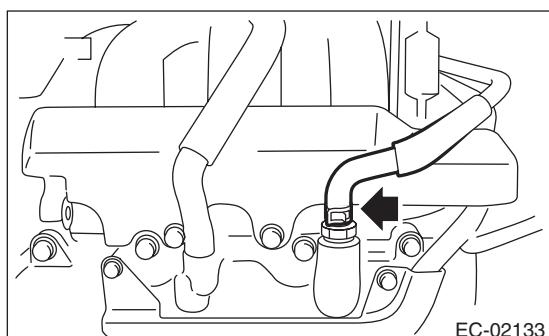


- 11) Disconnect the brake booster hose.

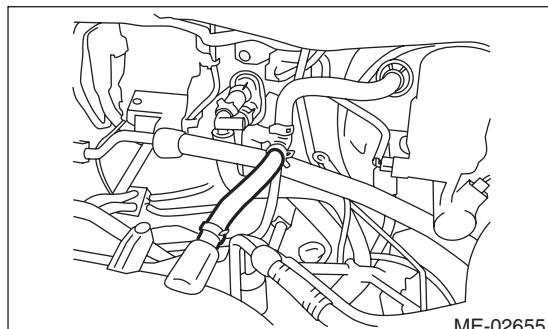


- 12) Disconnect the fuel hoses from the fuel pipe.
  - (1) Disconnect the connector of fuel pipe by pushing the ST in the direction of arrow.
  - ST 42099AE000 QUICK CONNECTOR RELEASE
  - (2) Remove the clip, and disconnect the evaporation hose from the pipe.

**CAUTION:**

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

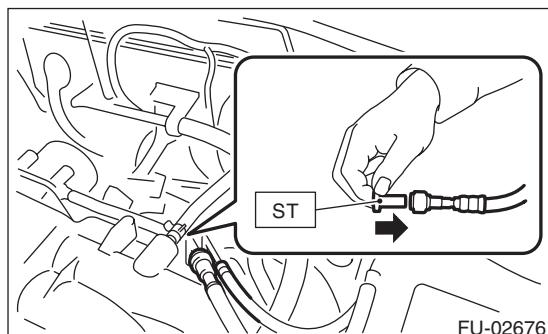


- 13) Remove the fuel pipe protector LH.

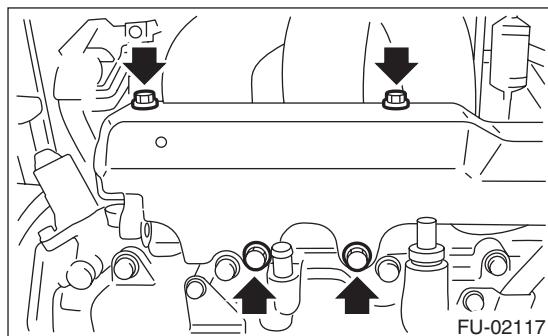

- 14) Remove the engine harness from the fuel injector pipe LH.


15) Disconnect the connectors of the oil temperature sensor, engine coolant temperature sensor, intake oil flow control solenoid valve LH.

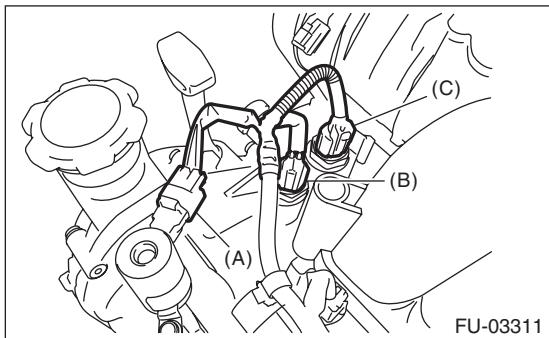

FU-03311


- (A) Intake oil flow control solenoid valve LH
- (B) Oil temperature sensor
- (C) Engine coolant temperature sensor

16) Remove the bolts which hold fuel injector pipe LH to cylinder head.

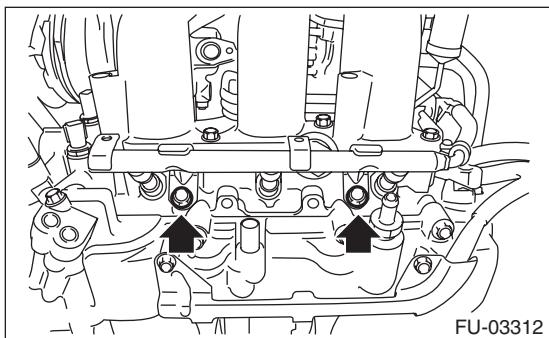


FU-03312

17) Disconnect the connector of intake oil flow control solenoid valve RH.

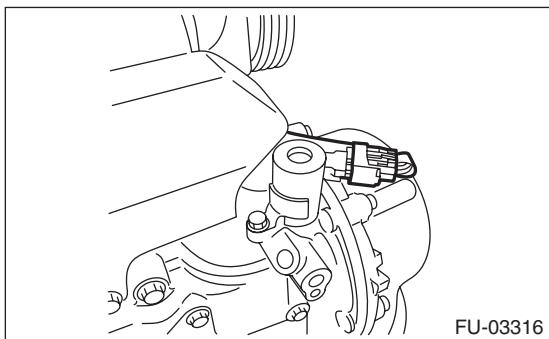

FU-03316


18) Remove the fuel pipe protector RH.

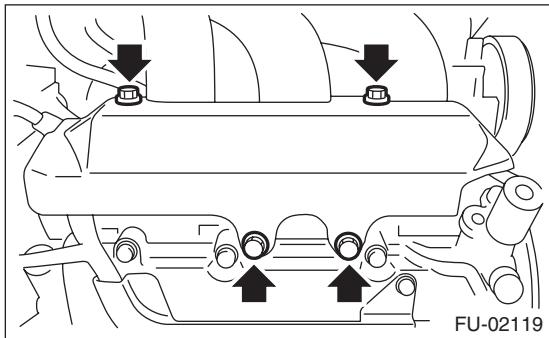

FU-02119

19) Remove the engine harness from the fuel injector pipe RH.


20) Remove the bolts which hold the fuel injector pipe RH to the cylinder head.

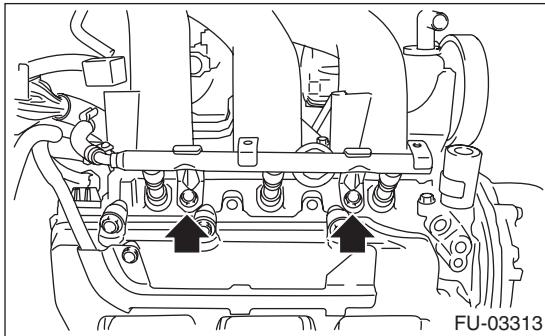

FU-03313


21) Remove the bolts which hold the intake manifold to the cylinder head.

- LH side

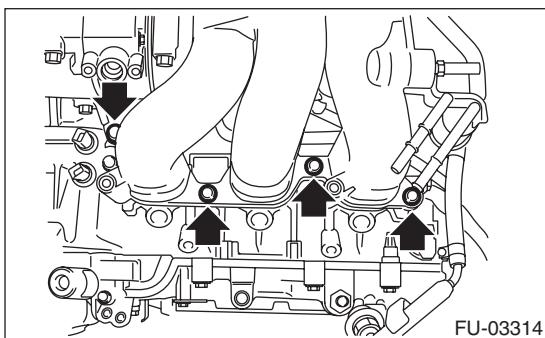


FU-03314

- RH side

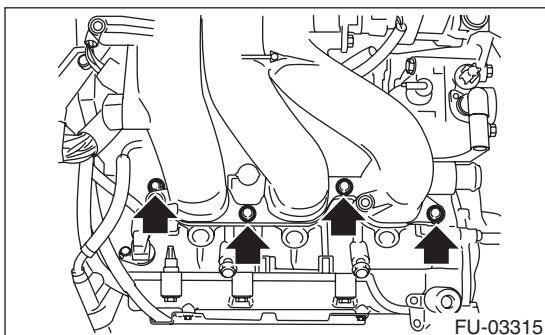

FU-03315

22) Remove the EGR pipe fixing bolt.

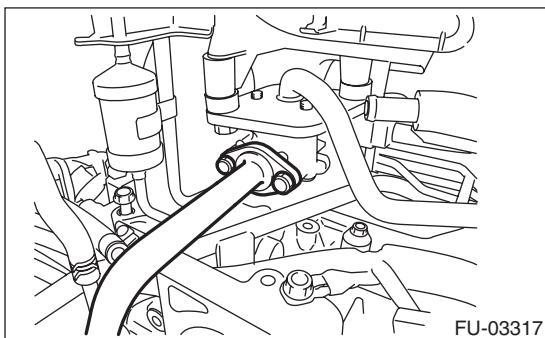

FU-03317

23) Remove the intake manifold.

# Intake Manifold

## FUEL INJECTION (FUEL SYSTEMS)

### B: INSTALLATION

1) Install the intake manifold onto cylinder heads.


NOTE:

Use new O-rings.


**Tightening torque:**

**25 N·m (2.5 kgf-m, 18.4 ft-lb)**

- RH side

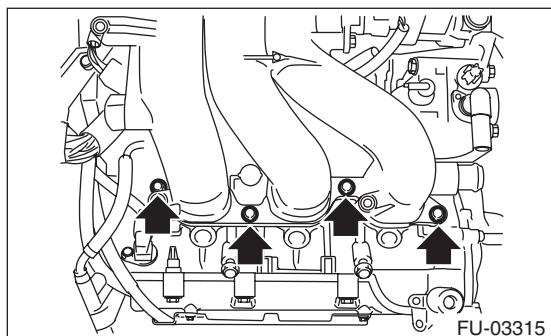

- LH side

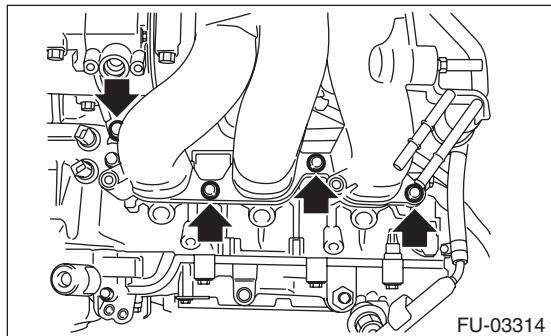


2) Install the EGR pipe fixing bolt.

NOTE:

Use a new gasket.

**Tightening torque:**

**6.4 N·m (0.7 kgf-m, 4.7 ft-lb)**

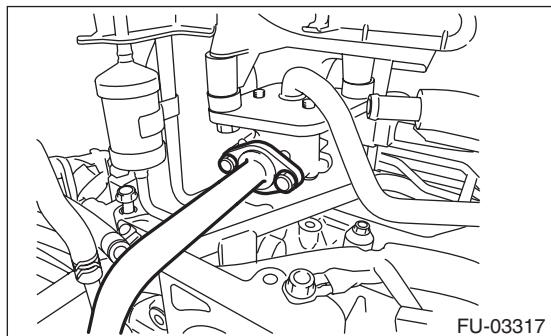


3) Install the bolts which hold fuel injector pipe RH to cylinder head.

NOTE:

Use new O-rings.

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

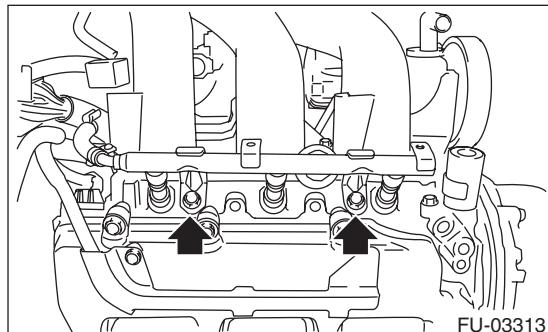


4) Install the engine harness to fuel injector pipe RH.


5) Install the fuel pipe protector RH.

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

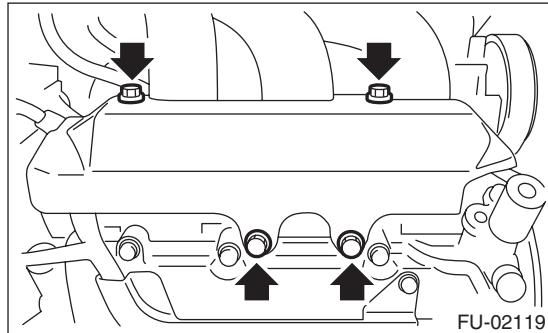

6) Connect the connector of intake oil flow control solenoid valve RH.

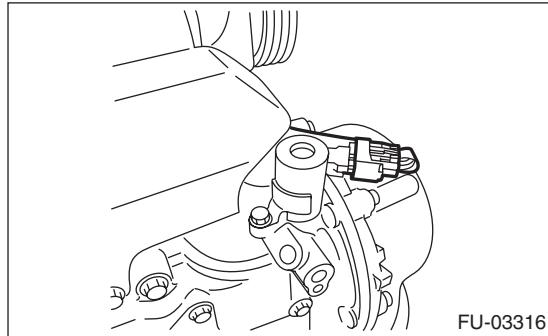


7) Install the bolts which hold fuel injector pipe LH to cylinder head.

NOTE:

Use new O-rings.


**Tightening torque:**

**19 N·m (1.9 kgf·m, 14.0 ft-lb)**

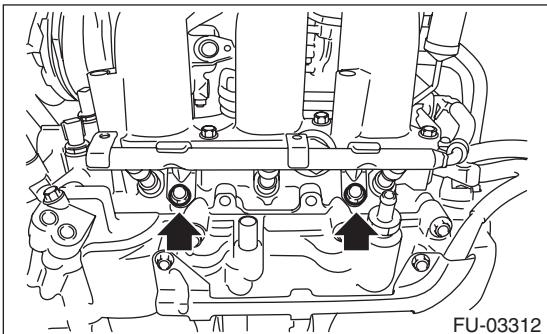

FU-03312

8) Connect the connectors of the oil temperature sensor, engine coolant temperature sensor, intake oil flow control solenoid valve LH.

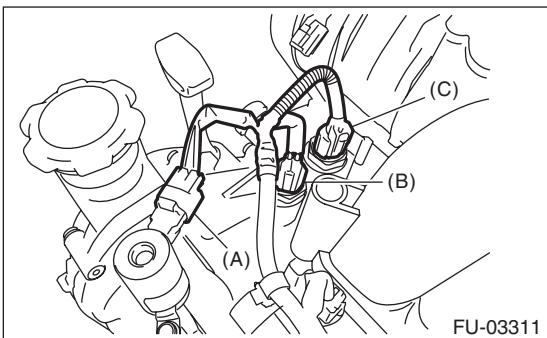

FU-03311


- (A) Intake oil flow control solenoid valve LH
- (B) Oil temperature sensor
- (C) Engine coolant temperature sensor

9) Install the engine harness to fuel injector pipe LH.

10) Install the fuel pipe protector LH.


**Tightening torque:**

**19 N·m (1.9 kgf·m, 14.0 ft-lb)**

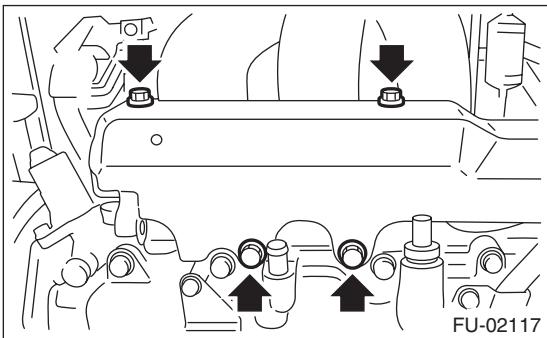


FU-02117

11) Connect the fuel hoses to fuel pipe.

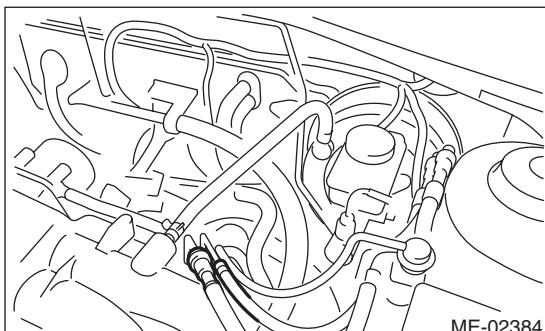


ME-02384

12) Connect the brake booster hose.

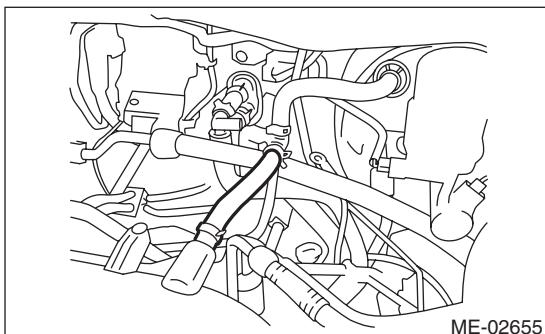


ME-02655

13) Connect the PCV hose.

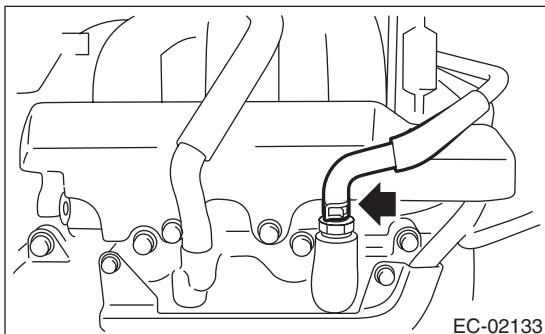

EC-02133

14) Connect the engine coolant hoses to throttle body.

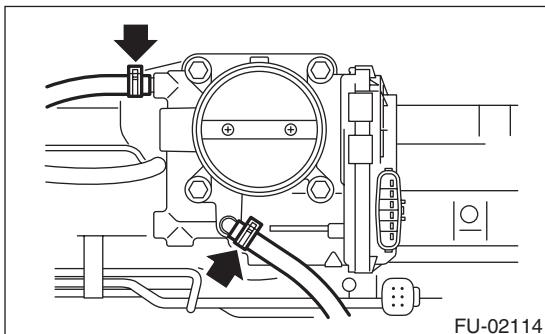


FU-02114

15) Connect the connector (A) to throttle body.

# Intake Manifold

## FUEL INJECTION (FUEL SYSTEMS)

16) Connect the engine harness connector (B).

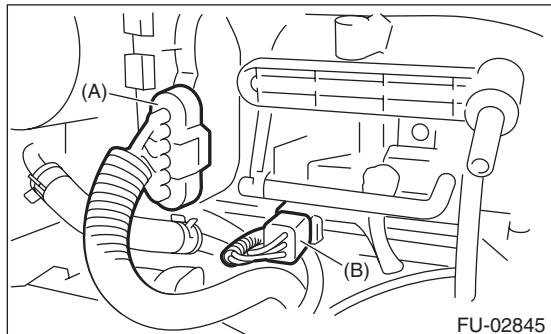

17) Install the generator. <Ref. to SC(H6DO)-14, INSTALLATION, Generator.>

18) Install the air cleaner case and air intake chamber. <Ref. to IN(H6DO)-6, INSTALLATION, Air Cleaner Case.> <Ref. to IN(H6DO)-7, INSTALLATION, Air Intake Chamber.>

19) Install the fuse of fuel pump to the main fuse box.

20) Connect the ground cable to battery.

21) Install the collector cover.

## C: DISASSEMBLY


1) Remove the engine harness from intake manifold. <Ref. to FU(H6DO)-7, ENGINE HARNESS, COMPONENT, General Description.>

2) Remove the throttle body. <Ref. to FU(H6DO)-15, REMOVAL, Throttle Body.>



3) Remove the manifold absolute pressure sensor. <Ref. to FU(H6DO)-27, REMOVAL, Manifold Absolute Pressure Sensor.>

4) Remove the purge control solenoid valve. <Ref. to EC(H6DO)-7, REMOVAL, Purge Control Solenoid Valve.>

5) Loosen the clamp which holds fuel injector pipe to the fuel hose, and then disconnect the pipe from fuel hose.

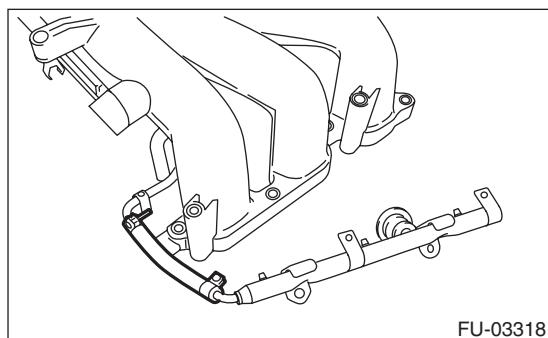

6) Remove the bolts which install fuel pipes on intake manifold.

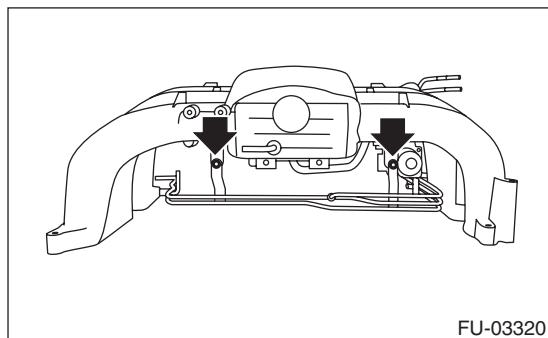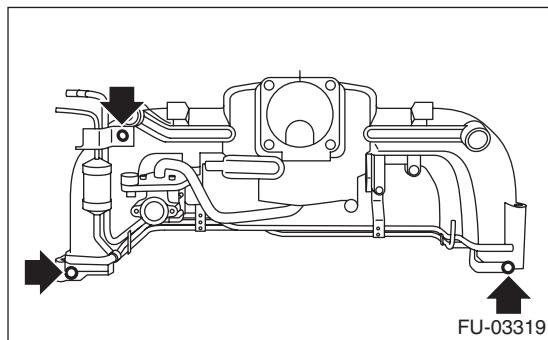

7) Remove the EGR valve. <Ref. to FU(H6DO)-29, REMOVAL, EGR Valve.>

## D: ASSEMBLY

### NOTE:

When assembling the nipple, apply liquid gasket.

### Liquid gasket:

**THREE BOND 1105 (Part No. 004403010) or equivalent**

### Tightening torque:


**17 N·m (1.7 kgf-m, 12.5 ft-lb)**

1) Install the EGR valve. <Ref. to FU(H6DO)-29, INSTALLATION, EGR Valve.>


2) Tighten the bolts which install fuel pipes on intake manifold.

### Tightening torque:

**6.4 N·m (0.7 kgf-m, 4.7 ft-lb)**

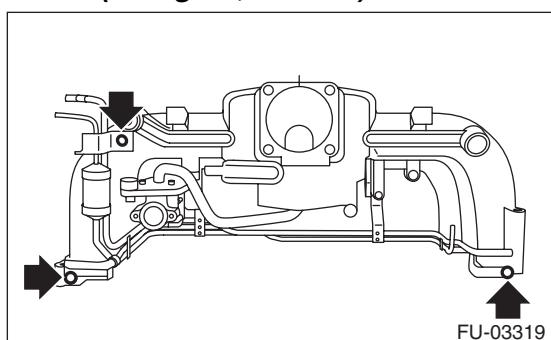

FU-03319

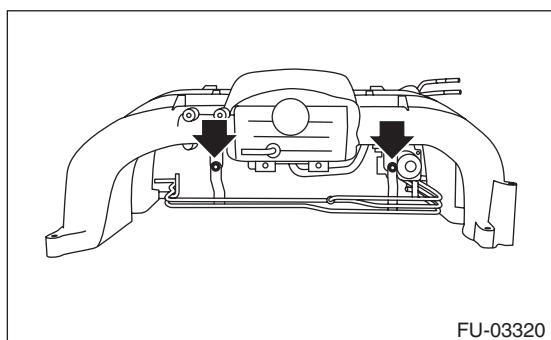


FU-03320

3) Connect the fuel injector pipe to fuel hose, and tighten the clamp screw.

### Tightening torque:

**1.25 N·m (0.1 kgf-m, 0.9 ft-lb)**

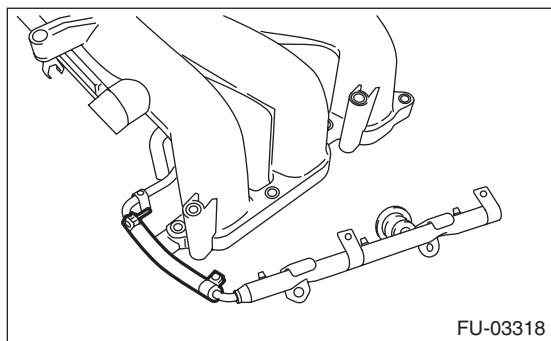

FU-03318

4) Install the purge control solenoid valve. <Ref. to EC(H6DO)-7, INSTALLATION, Purge Control Solenoid Valve.>

5) Install the manifold absolute pressure sensor. <Ref. to FU(H6DO)-27, INSTALLATION, Manifold Absolute Pressure Sensor.>

6) Install the throttle body to the intake manifold. <Ref. to FU(H6DO)-15, INSTALLATION, Throttle Body.>

7) Install the engine harness to the intake manifold. <Ref. to FU(H6DO)-7, ENGINE HARNESS, COMPONENT, General Description.>

## E: INSPECTION

Make sure the fuel pipe and fuel hoses are not damaged and the connections are tightened firmly.