

Camshaft Position Sensor


FUEL INJECTION (FUEL SYSTEMS)

6. Camshaft Position Sensor


A: REMOVAL

1. INTAKE SIDE


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.
- 3) Remove the generator harness from the fuel protector LH.
- 4) Remove the fuel protector LH.

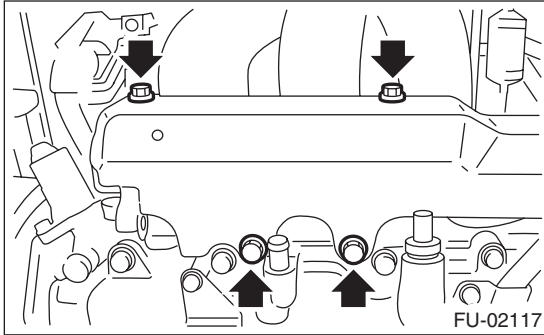

- 5) Disconnect the connector from intake camshaft position sensor LH.

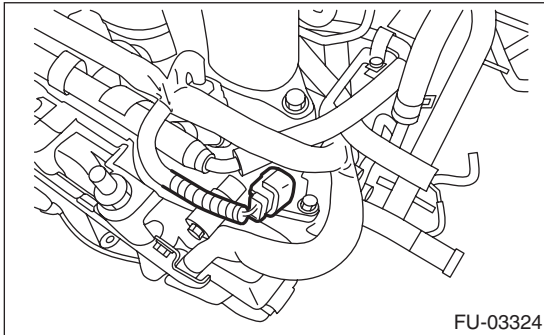


- 6) Remove the intake camshaft position sensor LH.

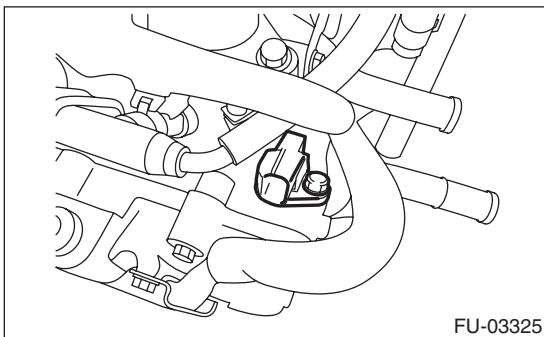


- 7) Remove the intake camshaft position sensor RH in the same procedure as LH.

2. EXHAUST SIDE

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover.
- 4) Disconnect the connector from exhaust camshaft position sensor LH.

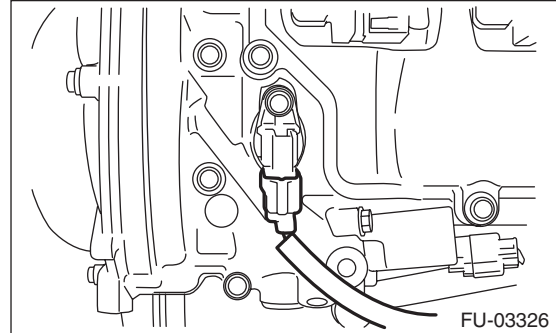

- 5) Remove the exhaust camshaft position sensor LH.

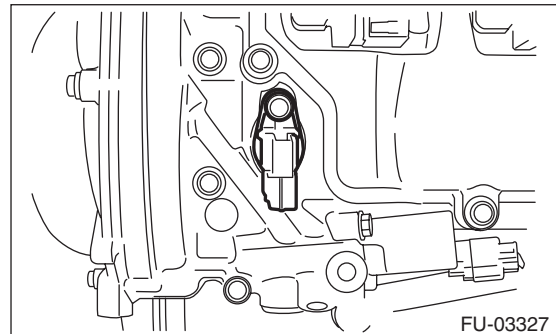

- 6) Remove the exhaust camshaft position sensor RH in the same procedure as LH.

B: INSTALLATION

1. INTAKE SIDE

Install in the reverse order of removal.

Tightening torque:

Intake camshaft position sensor

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

Fuel pipe protector

19 N·m (1.9 kgf-m, 14.0 ft-lb)

2. EXHAUST SIDE

Tightening torque:

Exhaust camshaft position sensor

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)