


9. Manifold Absolute Pressure Sensor

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Disconnect the connector from the manifold absolute pressure sensor (A), and remove the filter assembly (B) from the intake manifold.

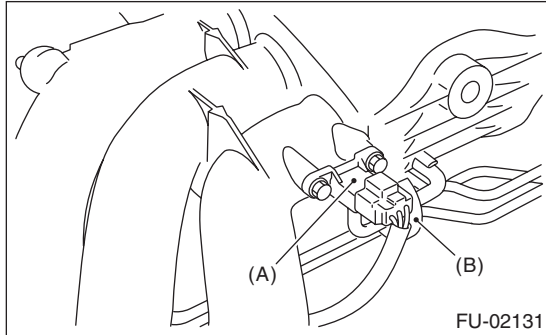

- 4) Remove the manifold absolute pressure sensor from intake manifold.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)