



### 3. Air Cleaner Case

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct. <Ref. to IN(H6DO)-8, REMOVAL, Air Intake Duct.>
- 3) Disconnect the connector from the mass air flow and intake air temperature sensor.

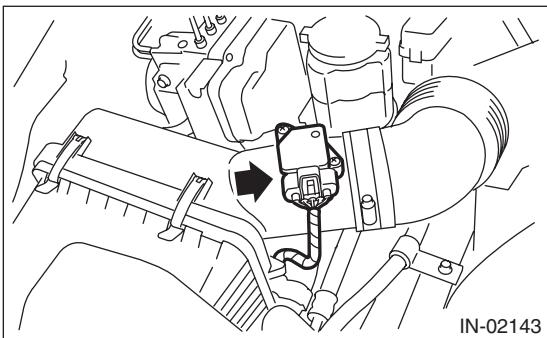


- 7) Remove the bolts (A) and nut (B) which secure the air cleaner case to body.

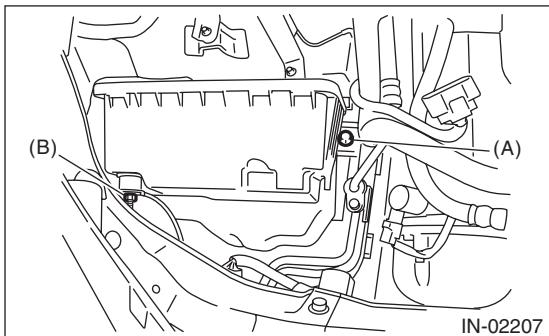


- 8) Remove the air cleaner case (front).

- 4) Loosen the clamps (A) which connect the air cleaner case (rear) to intake duct.
- 5) Remove the clip (B) securing the upper side of air cleaner case.

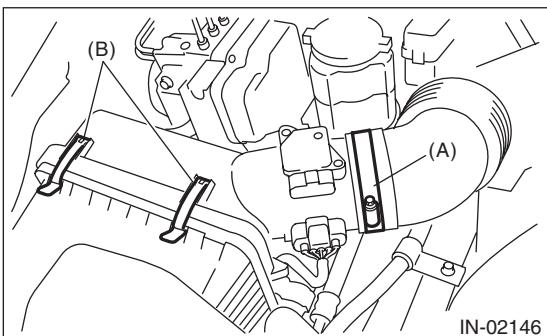

- 6) Remove the air cleaner case (rear) and air cleaner element.

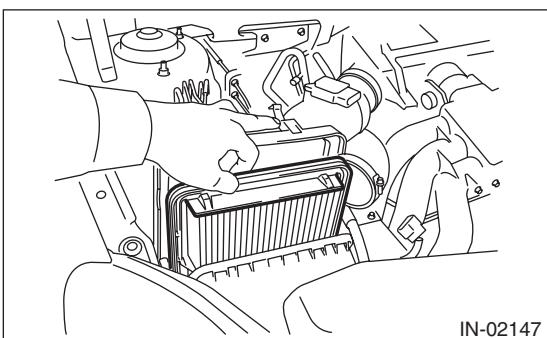

# Air Cleaner Case

## INTAKE (INDUCTION)

### B: INSTALLATION

Install in the reverse order of removal.


#### ***Tightening torque:***

##### **Bolt (A):**

**6 N·m (0.6 kgf·m, 4.4 ft-lb)**


##### **Nut (B):**

**7.5 N·m (0.8 kgf·m, 5.5 ft-lb)**

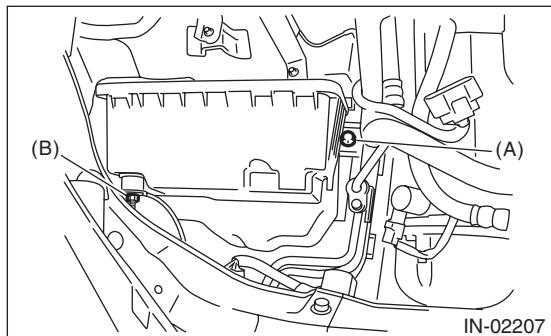

#### **NOTE:**


When installing the air cleaner case (rear), position the protrusion on the air cleaner case (rear) with the hole in the air cleaner case (front) to install the air cleaner case (rear).

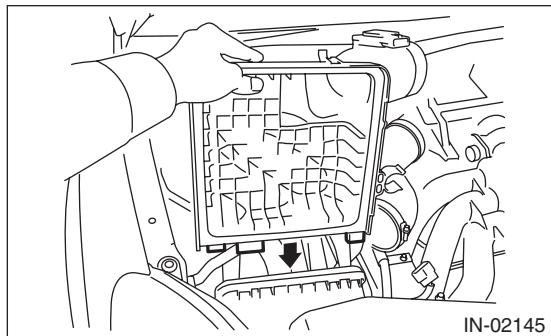

#### ***Tightening torque:***

##### **Clamp (A)**

**3 N·m (0.3 kgf·m, 2.2 ft-lb)**

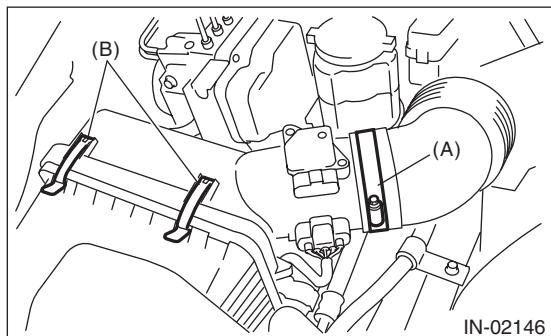

### C: INSPECTION

Check for cracks or loose connections.