

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for the removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H6DO)-6, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H6DO)

	Page
1. General Description	2
2. Compression	25
3. Idle Speed	26
4. Ignition Timing	27
5. Intake Manifold Vacuum	28
6. Engine Oil Pressure	29
7. Fuel Pressure	30
8. Valve Clearance	31
9. Engine Assembly	36
10. Engine Mounting	44
11. Preparation for Overhaul	45
12. V-belt	46
13. Crank Pulley	47
14. Chain Cover	48
15. Timing Chain Assembly	53
16. Cam Sprocket	73
17. Crank Sprocket	74
18. Camshaft	75
19. Cylinder Head	82
20. Cylinder Block	93
21. Oil Flow Control Solenoid Valve	116
22. Intake and Exhaust Valve	117
23. Piston	118
24. Connecting Rod	119
25. Crankshaft	120
26. Engine Trouble in General	121
27. Engine Noise	127