


6. Oil Pump Relief Valve

A: REMOVAL

- 1) Remove the oil pan. <Ref. to LU(H6DO)-10, REMOVAL, Oil Pan.>
- 2) Remove the relief plug, relief valve spring and relief valve.

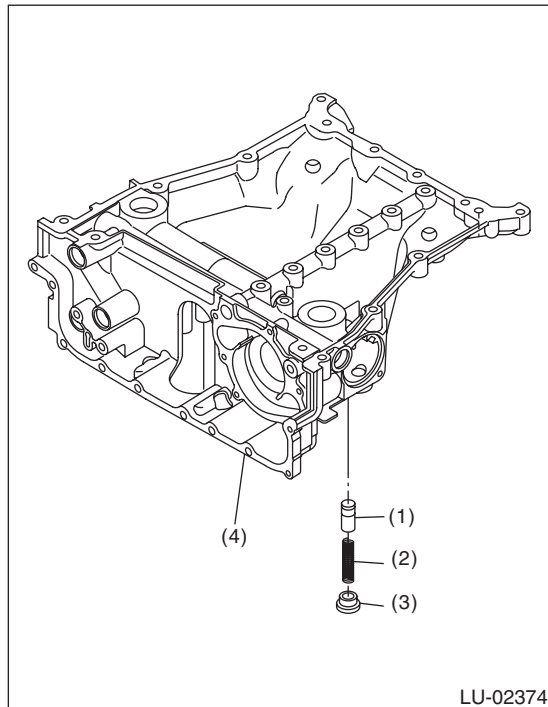

- (1) Relief valve
- (2) Relief valve spring
- (3) Relief plug
- (4) Oil pan upper

B: INSTALLATION


- 1) Install the relief valve, relief valve spring and relief plug.

NOTE:

Apply engine oil to the relief valve.

Tightening torque:

T: 44 N·m (4.5 kgf-m, 32.5 ft-lb)

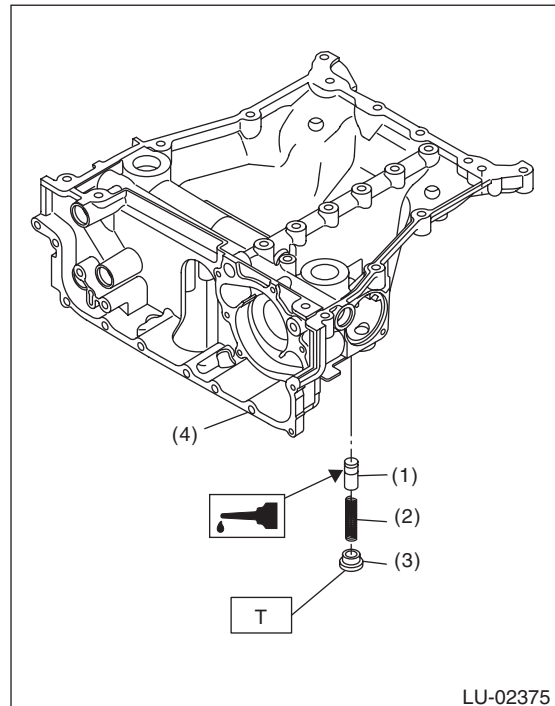

- (1) Relief valve
- (2) Relief valve spring
- (3) Relief plug
- (4) Oil pan upper

- 2) Install the oil pan. <Ref. to LU(H6DO)-10, INSTALLATION, Oil Pan.>

C: INSPECTION

Check the worn oil pump relief valve case, clogged oil passage, crank and other parts for faults.