



## 7. Oil Pressure Switch

### A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift up the vehicle.
- 4) Remove the under cover.
- 5) Disconnect the terminal from oil pressure switch.

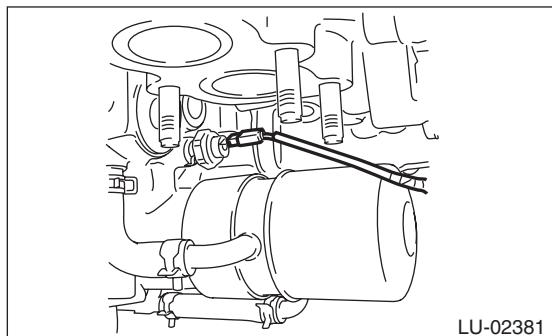

- 6) Remove the oil pressure switch.

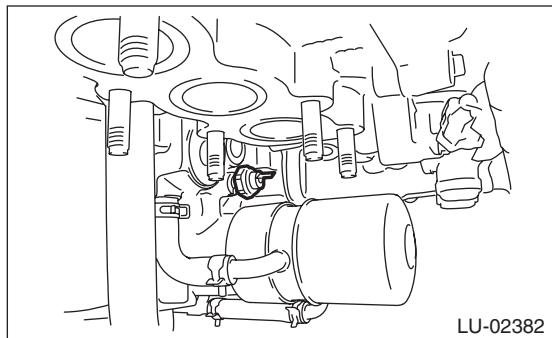


### B: INSTALLATION

- 1) Apply liquid gasket to the oil pressure switch threads.

*Liquid gasket:*


**THREE BOND 1324 (Part No. 004403042) or equivalent**

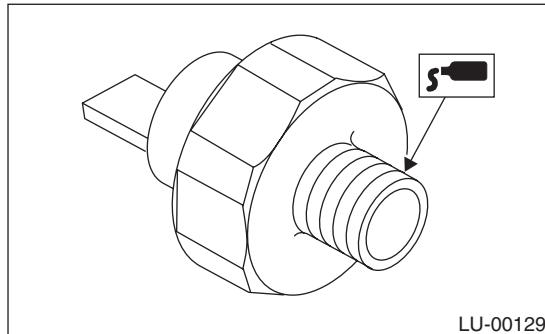


- 2) Install the oil pressure switch.

*Tightening torque:*

**25 N·m (2.5 kgf·m, 18.4 ft-lb)**

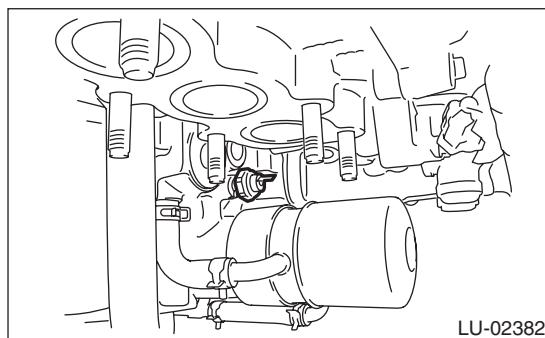

- 3) Connect the terminal of the oil pressure switch.

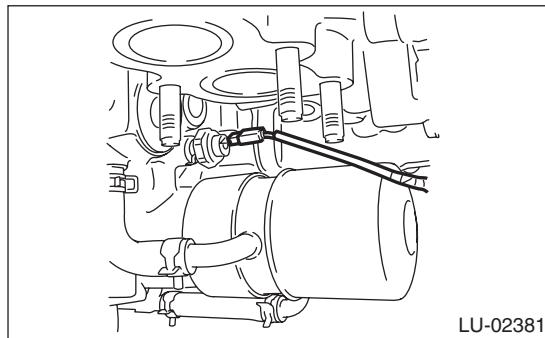

- 4) Install the under cover.

### C: INSPECTION

Make sure oil does not leak or seep from where the oil pressure switch is installed.