

24. Connecting Rod

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod. <Ref. to ME(H6DO)-93, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-99, INSTALLATION, Cylinder Block.>