

3. Idle Speed

A: INSPECTION

- 1) Before checking the idle speed, check the following item:
 - (1) Check the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and hoses are connected properly.
 - (2) Check the malfunction indicator light does not illuminate.
- 2) Idle the engine.
- 3) Read the engine idle speed using Subaru Select Monitor. <Ref. to EN(H6DO)(diag)-35, READ CURRENT DATA FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>
- 4) Check the idle speed when no-loaded. (Headlight, heater fan, rear defroster, radiator fan, A/C and etc. are OFF)

Idle speed [No load and gears in “P” or “N” range]:

700±100 rpm

- 5) Check the idle speed when loaded. (Turn the air conditioning switch “ON” and operate the compressor for at least one minute before measurement.)

Idle speed [A/C “ON” and gears in “P” or “N” range]:

805±100 rpm

NOTE:

Idle speed cannot be adjusted manually, because the idle speed is automatically adjusted. If the prescribed idle speed cannot be maintained, refer to General Diagnosis Table under “Engine Control System”. <Ref. to EN(H6DO)(diag)-2, Basic Diagnostic Procedure.>