

## 6. Engine Oil Pressure

### A: INSPECTION

- 1) Remove the oil pressure switch from the oil pan, upper. <Ref. to LU(H6DO)-14, REMOVAL, Oil Pressure Switch.>
- 2) Connect the oil pressure gauge hose to the oil pan upper.
- 3) Connect the ground cable to battery.
- 4) Start the engine, and measure the oil pressure.

***Oil pressure (at oil temperature of 80°C (176°F)):***

***Standard:***

***100 kPa (1.0 kgf/cm<sup>2</sup>, 15 psi) or more  
(at 700 rpm)***  
***500 kPa (5.1 kgf/cm<sup>2</sup>, 73 psi) or more  
(at 5,000 rpm)***

- If the oil pressure is out of specification, check the oil pump, oil filter and lubrication line. <Ref. to LU(H6DO)-17, INSPECTION, General Diagnostic Table.>
- If the oil pressure warning light is ON and oil pressure is within specification, check the oil pressure switch. <Ref. to LU(H6DO)-17, INSPECTION, General Diagnostic Table.>

5) After measuring the oil pressure, install the oil pressure switch. <Ref. to LU(H6DO)-14, INSTALLATION, Oil Pressure Switch.>