

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE 1

	Maintenance interval [Number of months or km (miles), whichever occurs first]																	Remarks	
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
	× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3	Spark plug								R								R		
4	Drive belt(s)					I				I				I		R			
5	Fuel line					(I)				(I)				(I)				I	Note (1)
6	Air cleaner element					R				R				R			R	Note (2)	
7	Cooling system					I				I				I			I		
8	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																	
9	ATF					I				I				I			I	Note (3)	
10	Front and rear differential oil					I				I				I			I		
11	Brake line		I		I		I		I		I		I		I		I		
12	Brake fluid				R				R				R				R		
13	Disc brake pad and disc		I		I		I		I		I		I		I		I		
14	Parking brake		I		I		I		I		I		I		I		I		
15	Suspension		I		I		I		I		I		I		I		I		
16	Wheel bearing							(I)									(I)		
17	Axle boots and joints		I		I		I		I		I		I		I		I		
18	Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note (4)	
19	Steering system (Power steering)		I		I		I		I		I		I		I		I		
20	Supplemental Restraint System "Airbag"	Inspect every 10 years																	
21	A/C filter	Replace every 15 months or 24,000 km (15,000 miles).																	Note (5)

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

- (1) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
- (2) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- (3) ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.
- (4) A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.8 mm (0.071 in) or less.
- (5) When the A/C filter is mounted

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
Front & rear differential oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months						R
	24,000 km						
	15,000 miles						
Disc brake pad & disc	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Parking brake	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
Axe boots & joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						