


15. Rear Vehicle Speed Sensor

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Lift up the vehicle.
- 4) Clean the transmission exterior.
- 5) Drain the ATF completely. <Ref. to 5AT-29, REPLACEMENT, Automatic Transmission Fluid.>
- 6) Remove the rear exhaust pipe and muffler. <Ref. to EX(H6DO)-7, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>
- 7) Remove the heat shield cover.

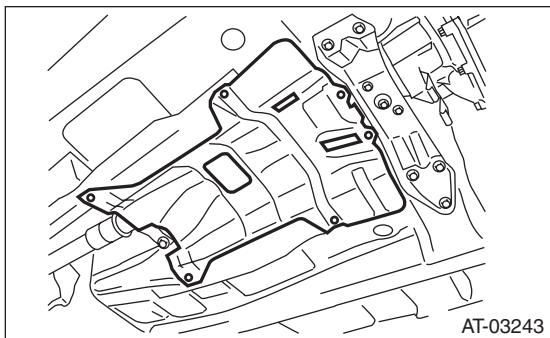


- 8) Remove the propeller shaft. <Ref. to DS-10, REMOVAL, Propeller Shaft.>
- 9) Place the transmission jack under the transmission.

NOTE:

Make sure that the support plate of transmission jack does not touch the cross.

- 10) Remove the transmission rear crossmember bolt.

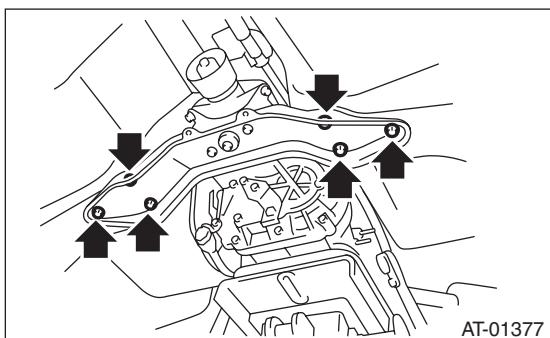


- 11) Lower the transmission jack.


NOTE:

Do not separate the transmission jack and transmission.

- 12) Disconnect the rear vehicle speed sensor connector.

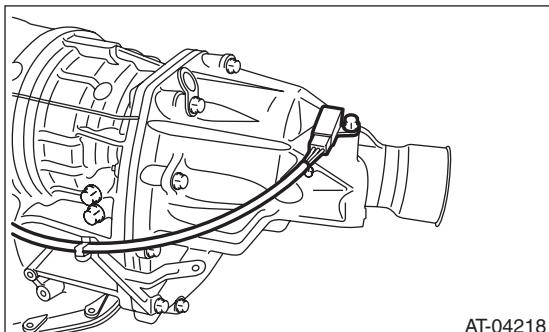

- 13) Remove the rear vehicle speed sensor.

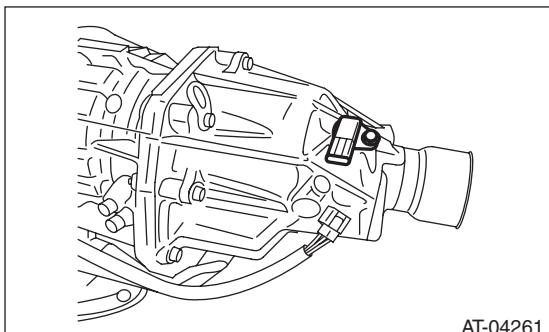


B: INSTALLATION


- 1) Install the rear vehicle speed sensor.

Tightening torque:

7 N·m (0.7 kgf·m, 5.2 ft-lb)

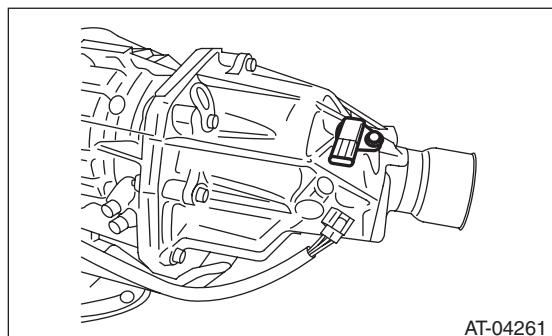

- 2) Connect the rear vehicle speed sensor connector.

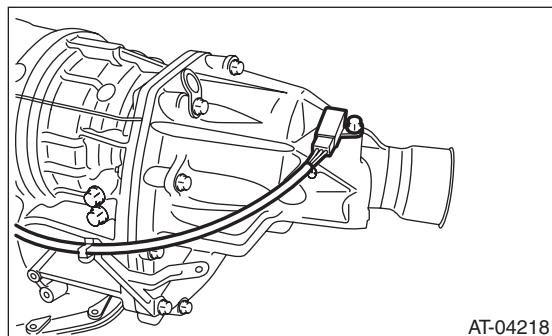


- 3) Install the transmission rear crossmember bolt.

Tightening torque:

75 N·m (7.6 kgf·m, 55.3 ft-lb)

- 4) Install the propeller shaft. <Ref. to DS-11, INSTALLATION, Propeller Shaft.>

- 5) Install the heat shield cover.

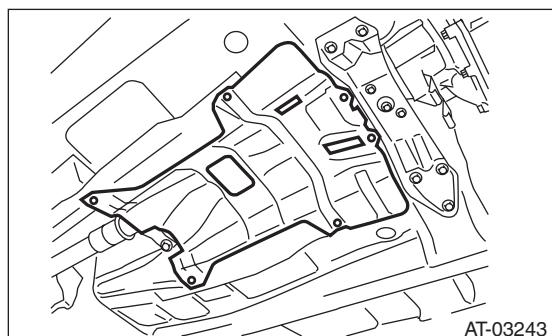

- 6) Install the rear exhaust pipe and muffler. <Ref. to EX(H6DO)-7, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H6DO)-9, INSTALLATION, Muffler.>

- 7) Lower the vehicle.

- 8) Pour ATF from the oil charge pipe. <Ref. to 5AT-29, REPLACEMENT, Automatic Transmission Fluid.>

- 9) Check the level and leaks of ATF. <Ref. to 5AT-29, INSPECTION, Automatic Transmission Fluid.>