


16. Turbine Speed Sensor 1

A: REMOVAL

- 1) Remove the air intake chamber and intake boot.
<Ref. to IN(H6DO)-7, REMOVAL, Air Intake Chamber.>
- 2) Lift up the vehicle.
- 3) Disconnect the turbine speed sensor 1 connector.

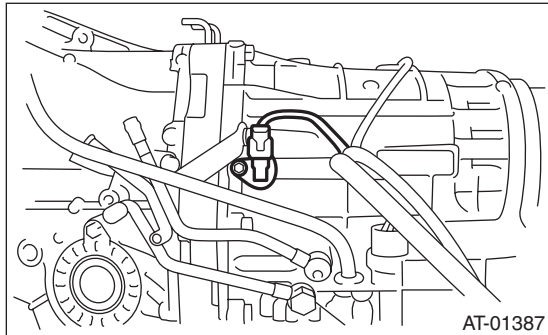

- 4) Remove the turbine speed sensor 1.


B: INSTALLATION

- 1) Install the turbine speed sensor 1.

Tightening torque:

7 N·m (0.7 kgf-m, 5.2 ft-lb)

- 2) Connect the turbine speed sensor 1 connector.

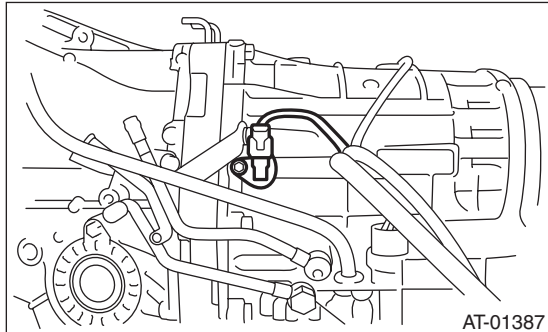

- 3) Lower the vehicle.
- 4) Install the air intake chamber and intake boot.
<Ref. to IN(H6DO)-7, INSTALLATION, Air Intake Chamber.>