

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

Refer to “Subaru Select Monitor” for information about how to obtain and understand DTC. <Ref. to 5AT(diag)-16, OPERATION, Subaru Select Monitor.>