


General Description

CONTROL SYSTEMS

1. General Description

A: COMPONENT

1. AT SELECT LEVER

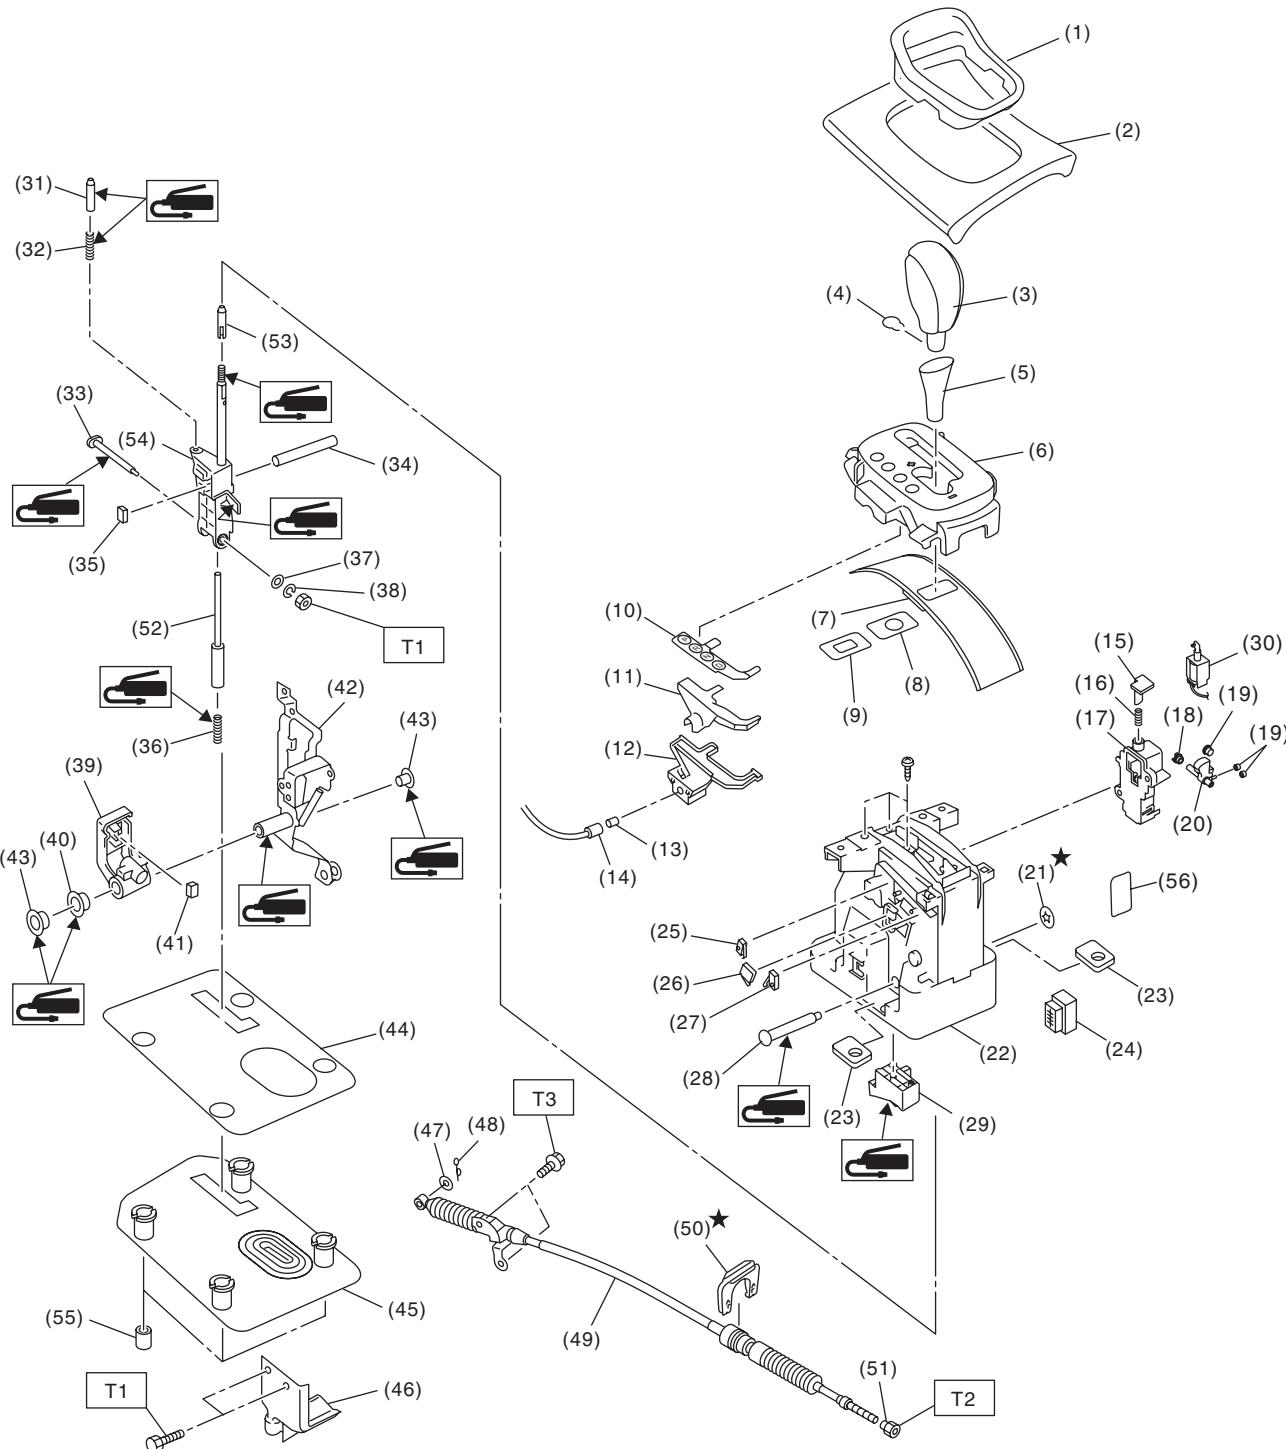

CS-00710

(1) Ring indicator	(22) Base ASSY	(42) Arm ASSY
(2) Front cover	(23) Spacer	(43) Bushing
(3) Grip ASSY	(24) Harness connector	(44) Dust cover bracket
(4) Grip pin	(25) Shift-up switch	(45) Dust cover
(5) Grip cover	(26) "P" range switch	(46) Cable bracket
(6) Indicator ASSY	(27) Shift-down switch	(47) Washer
(7) Shift blind	(28) Shaft	(48) Cotter pin
(8) Blind A	(29) Detent check block	(49) Select cable
(9) Blind B	(30) Shift lock solenoid	(50) Clamp
(10) Position plate	(31) Check sheet pole	(51) Adjusting nut A
(11) Plate light guide	(32) Spring	(52) Button rod
(12) Valve case	(33) Select shaft	(53) Pusher
(13) Indicator bulb	(34) Shift position pin	(54) Selector arm ASSY
(14) Valve harness	(35) Shift button switch	(55) Spacer
(15) Release rod	(36) Spring	(56) Seat
(16) Spring	(37) Washer	
(17) Lock lever bracket	(38) Spring washer	
(18) Lock lever bushing	(39) Tube cross plate	
(19) Bushing	(40) Bushing	
(20) Lock lever	(41) Mode change switch	
(21) Clamp		

Tightening torque:N·m (kgf·m, ft·lb)


T1: 5.1 (0.5, 3.8)

T2: 7.5 (0.8, 5.5)

T3: 18 (1.8, 13.3)

B: PREPARATION TOOL

1. SPECIAL TOOL

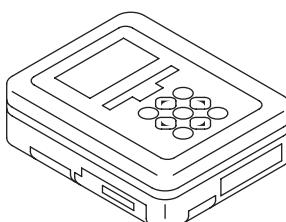ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	1B022XU0 ST1B022XU0	SUBARU SELECT MONITOR III KIT	Troubleshooting for the electrical system.

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Use SUBARU genuine fluid, grease etc. or equivalent. Do not mix fluid, grease, etc. of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Apply grease onto sliding or revolving surfaces before installation.
- Before installing the O-ring or snap ring, apply a sufficient amount of fluid to avoid damage and deformation.
- Before securing a part in a vise, place cushioning material such as wood blocks, aluminum plate or cloth between the part and the vise.
- Before disconnecting electrical connectors, be sure to disconnect the negative terminal from battery.