


### 10. Curtain Airbag Sensor

#### A: REMOVAL

##### CAUTION:

**Do not separate the curtain airbag sensor and bracket. Doing so will cause the airbag system malfunction. If the sensor is removed from the bracket, be sure to replace with a new part.**

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the rear quarter lower trim. <Ref. to EI-46, REMOVAL, Rear Quarter Trim.>
- 4) Remove the nut and disconnect the airbag connector to remove the curtain airbag sensor.

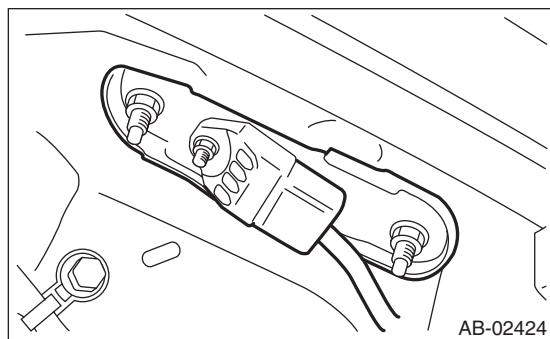

#### B: INSTALLATION

##### CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

##### *Tightening torque:*

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

#### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Mounting bracket or connector of curtain airbag sensor is damaged.
- Curtain airbag is deployed.