


13.Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the front bumper face. <Ref. to EI-22, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the bolt, and then detach the front sub sensor.

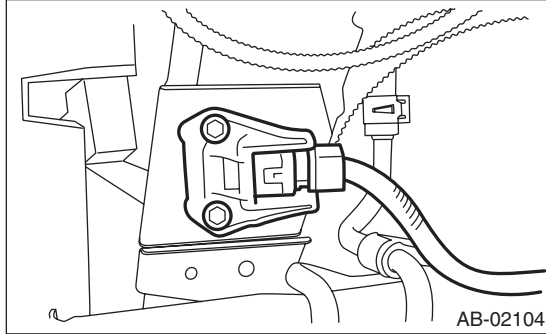

- 5) Disconnect the connector from front sub sensor.

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
 - Always use new bolts and nuts for them.
- Install in the reverse order of removal.

Tightening torque:

13 N·m (1.32 kgf-m, 9.6 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor and connector are damaged.
- Airbag is deployed.

Front Sub Sensor

AIRBAG SYSTEM

AIRBAG SYSTEM (DIAGNOSTICS)

AB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	18
5. Airbag Connector	20
6. Airbag Control Module I/O Signal	21
7. Subaru Select Monitor	23
8. Read Diagnostic Trouble Code (DTC)	28
9. Inspection Mode	29
10. Clear Memory Mode	30
11. Airbag Warning Light Illumination Pattern	31
12. Airbag Warning Light Failure	32
13. List of Diagnostic Trouble Code (DTC)	36
14. Diagnostic Chart with Trouble Code	42