


### 4. Driver's Airbag Module

#### A: REMOVAL


##### CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-4, CAUTION, General Description.>

- 1) Position the front wheels straight ahead. (After moving a vehicle 5 m (16 ft) or more with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead.)
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 4) Using TORX® bit T30 (1), remove the two TORX® bolts on the side of steering wheel.

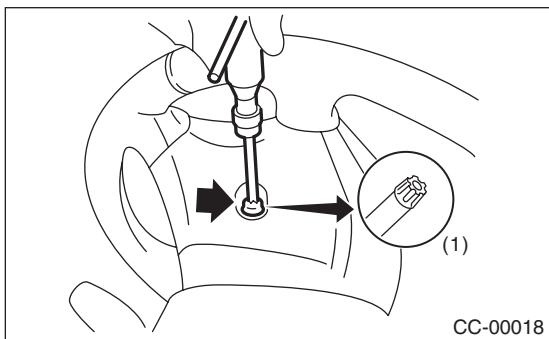

- 5) Disconnect the horn harness.
- 6) Disconnect the airbag connector on the back of airbag module, and then remove the airbag module. <Ref. to AB-8, PROCEDURE, Airbag Connector.>

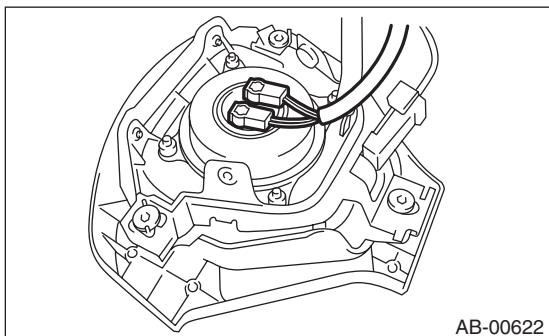

- 7) For handling of the removed airbag module, refer to "CAUTION". <Ref. to AB-4, CAUTION, General Description.>

#### B: INSTALLATION

##### CAUTION:

- Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-4, CAUTION, General Description.>

- To prevent the misconnection, the connector is colored. Connect the harness side connector to the same color of module side connector. Install in the reverse order of removal.

##### *Tightening torque:*

10 N·m (1.0 kgf-m, 7.2 ft-lb)

#### C: INSPECTION

##### CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-4, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts.

- Airbag module, harness, connector and mounting bracket are damaged. <Ref. to AB-11, DRIVER'S AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>