


Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

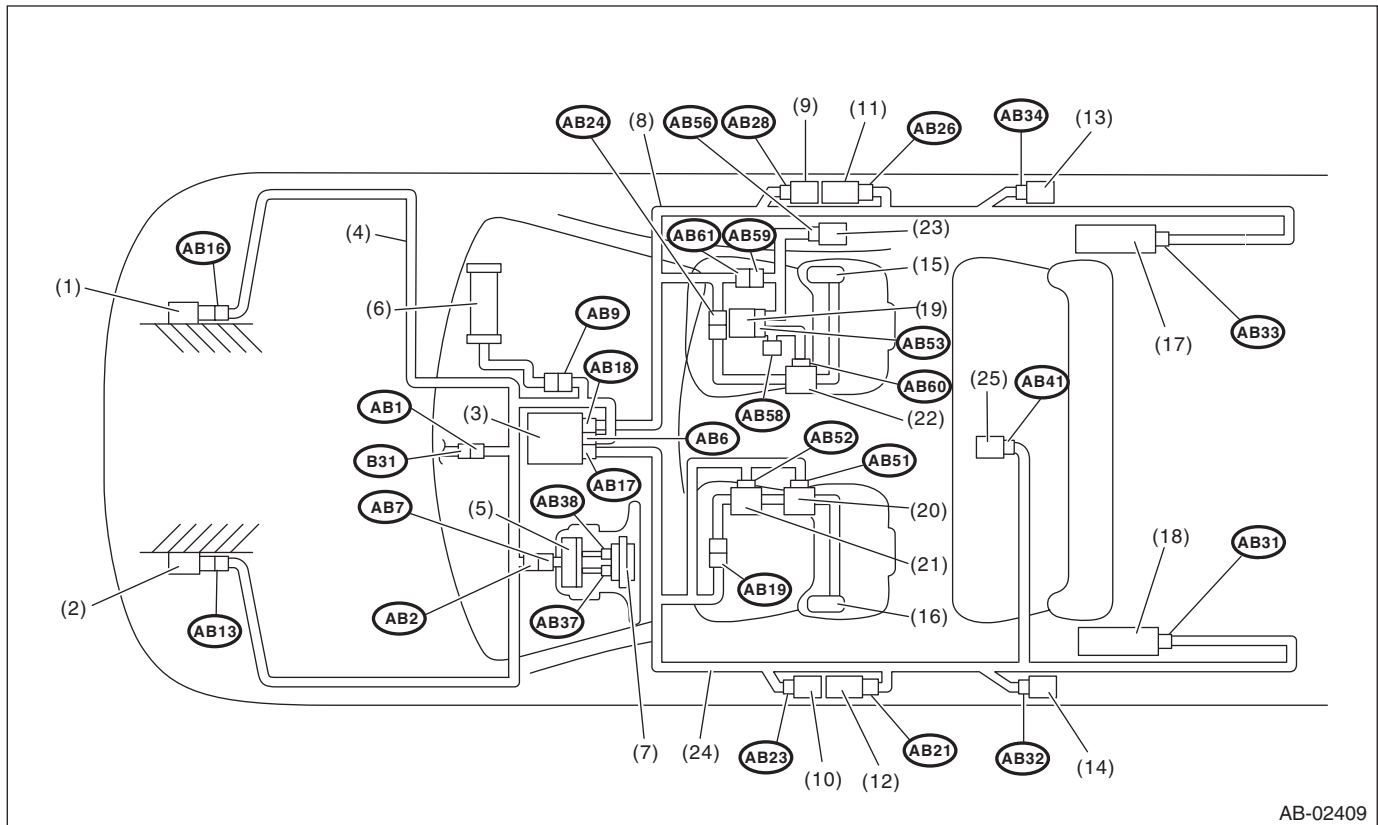

- | | | |
|-------------------------------|----------------------------------|--|
| (1) Front sub sensor (RH) | (9) Side airbag sensor (RH) | (17) Curtain airbag module (RH) |
| (2) Front sub sensor (LH) | (10) Side airbag sensor (LH) | (18) Curtain airbag module (LH) |
| (3) Airbag control module | (11) Seat belt pretensioner (RH) | (19) Occupant detection control module |
| (4) Airbag main harness | (12) Seat belt pretensioner (LH) | (20) Buckle switch (LH) |
| (5) Roll connector | (13) Curtain airbag sensor (RH) | (21) Seat position sensor (LH) |
| (6) Passenger's airbag module | (14) Curtain airbag sensor (LH) | (22) Buckle switch (RH) |
| (7) Driver's airbag module | (15) Side airbag module (RH) | (23) Belt tension sensor |
| (8) Airbag rear harness (RH) | (16) Side airbag module (LH) | (24) Airbag rear harness (LH) |
| | | (25) Satellite safing sensor |

Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	10	4	30	4	4	2	2	24	24	2	2	4
Color	Gray	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Black	Yellow
Male/Female	Female	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB24)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB51)	(AB52)
Pin	2	2	4	2	4	2	4	2	2	2	2	2
Color	Yellow	Black	Yellow	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Yellow	Yellow
Male/Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB53)	(AB56)	(AB58)	(AB59)	(AB60)	(AB61)						
Pin	18	3	3	6	2	6						
Color	Yellow	Brown	Yellow	Gray	Yellow	Gray						
Male/Female	Female	Female	Female	Male	Male	Female						