

Read Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details concerning DTC reading procedure, refer to “Subaru Select Monitor”. <Ref. to AB(diag)-23, Subaru Select Monitor.>