


## 3. Horn

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the left and right headlight assemblies.  
<Ref. to LI-15, REMOVAL, Headlight Assembly.>
- 3) Remove the horn bracket mounting bolt (A).
- 4) Disconnect the harness connector and remove the horn assembly (B).

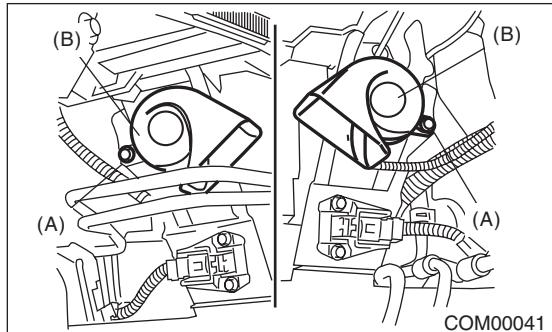

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**

### C: INSPECTION

With 12 V direct current supplied between horn terminals, check that the horn sounds properly.

