


## 21. GPS Antenna

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the combination meter. <Ref. to IDI-11, REMOVAL, Combination Meter.>
- 3) Remove the audio. <Ref. to ET-13, REMOVAL, Audio.>
- 4) Remove the navigation display. <Ref. to ET-26, REMOVAL, Navigation Display.>
- 5) Remove the screw to remove the GPS bracket.

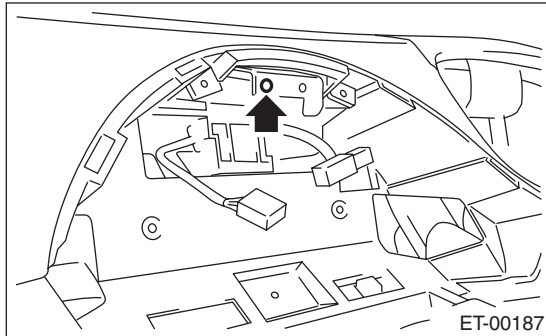

- 6) Remove the GPS antenna cord connector from the steering support beam stay (on the driver's side).

### B: INSTALLATION

Install in the reverse order of removal.