

31. Steering Satellite Switch


A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Set the tire to the straight-ahead position.
- 3) Remove the airbag module. <Ref. to AB-14, REMOVAL, Driver's Airbag Module.>

WARNING:

If there are airbag modules mounted, always refer to "Airbag System" when performing airbag module service. <Ref. to AB-14, INSPECTION, Driver's Airbag Module.>

- 4) Remove the steering wheel. <Ref. to PS-12, REMOVAL, Steering Wheel.>
- 5) Remove the cover from steering wheel.
- 6) Remove 2 satellite switch mounting screws each from the left and right sides.

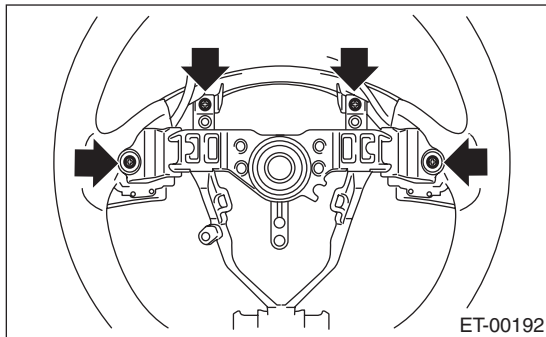


- 7) Remove the satellite switch.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between satellite switch connector terminals.

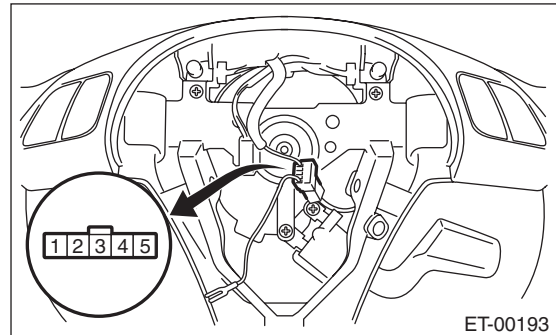

Switch	Area	Terminal No.	Standard
Mute Volume (+) Volume (-) Mode Seek (∧) Seek (∨)	All OFF	1 and 2	Approx. 4.7 kΩ
Mute	ON	1 and 2	Approx. 22 Ω
Volume (+)	ON	1 and 2	Approx. 90 Ω
Volume (-)	ON	1 and 2	Approx. 200 Ω
Mode	ON	1 and 2	Approx. 360 Ω
Seek (∧)	ON	1 and 2	Approx. 690 Ω
Seek (∨)	ON	1 and 2	Approx. 1.5 kΩ

Replace the satellite switch if faulty.

Steering Satellite Switch

ENTERTAINMENT

COMMUNICATION SYSTEM

COM

	Page
1. General Description	2
2. Horn System	3
3. Horn	4
4. Horn Switch	5

