


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. UNDER COVER

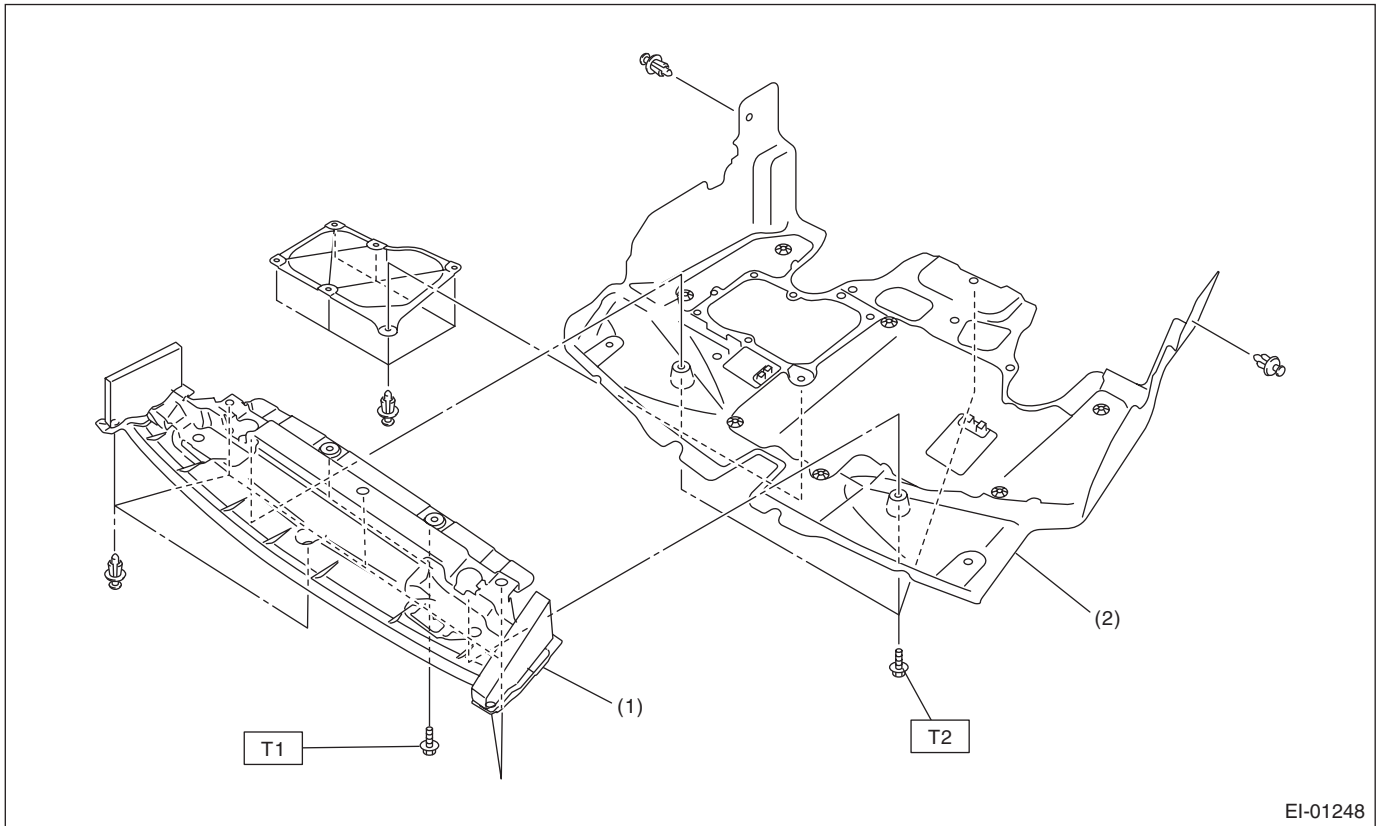

EI-01248

(1) Front lower cover


(2) Under cover

Tightening torque:N-m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 17.5 (1.78, 12.7)

2. UNDER PROTECTOR

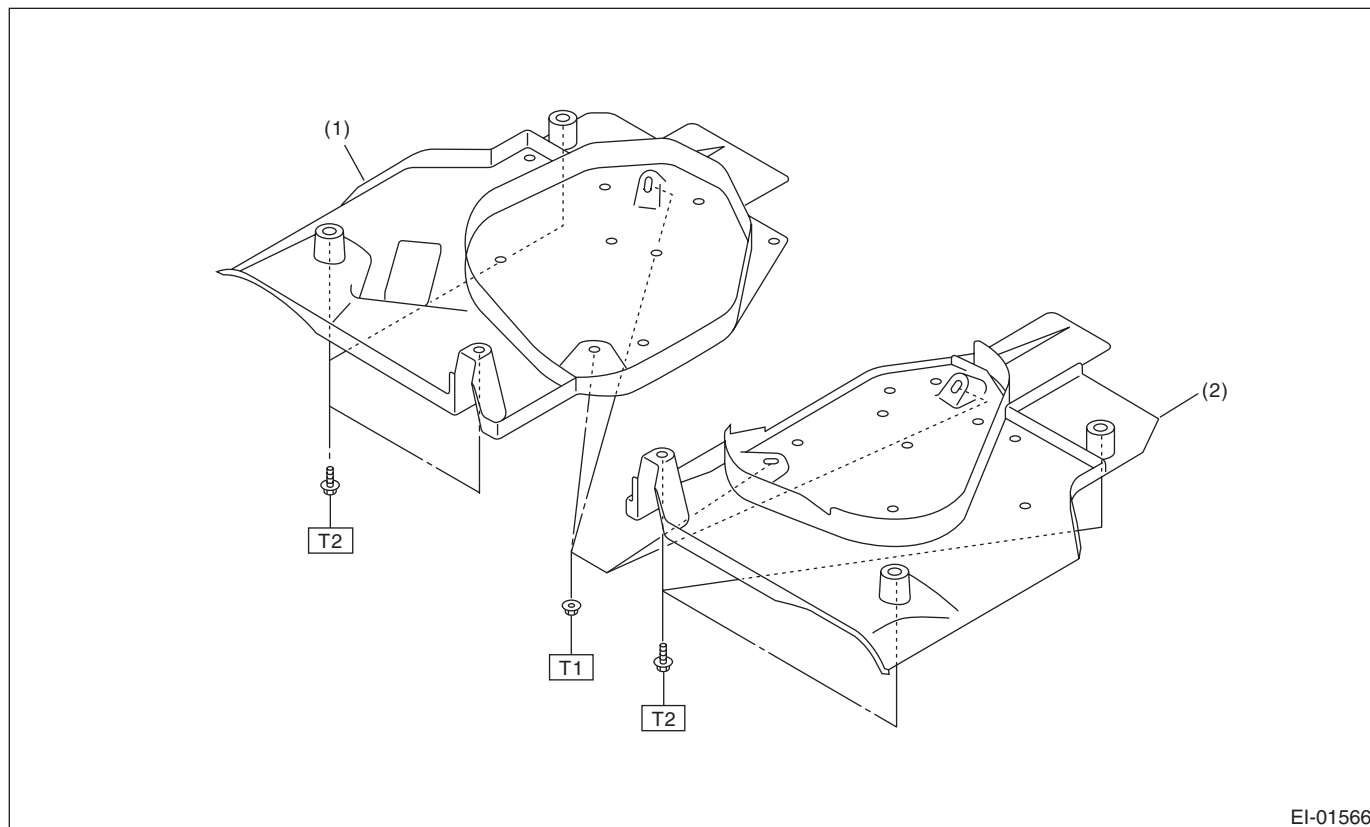

EI-01566

(1) Fuel tank protector RH

(2) Fuel tank protector LH

Tightening torque: N·m (kgf-m, ft-lb)


T1: 9.0 (0.92, 6.6)

T2: 17.5 (1.78, 12.9)

General Description

EXTERIOR/INTERIOR TRIM

3. FRONT BUMPER

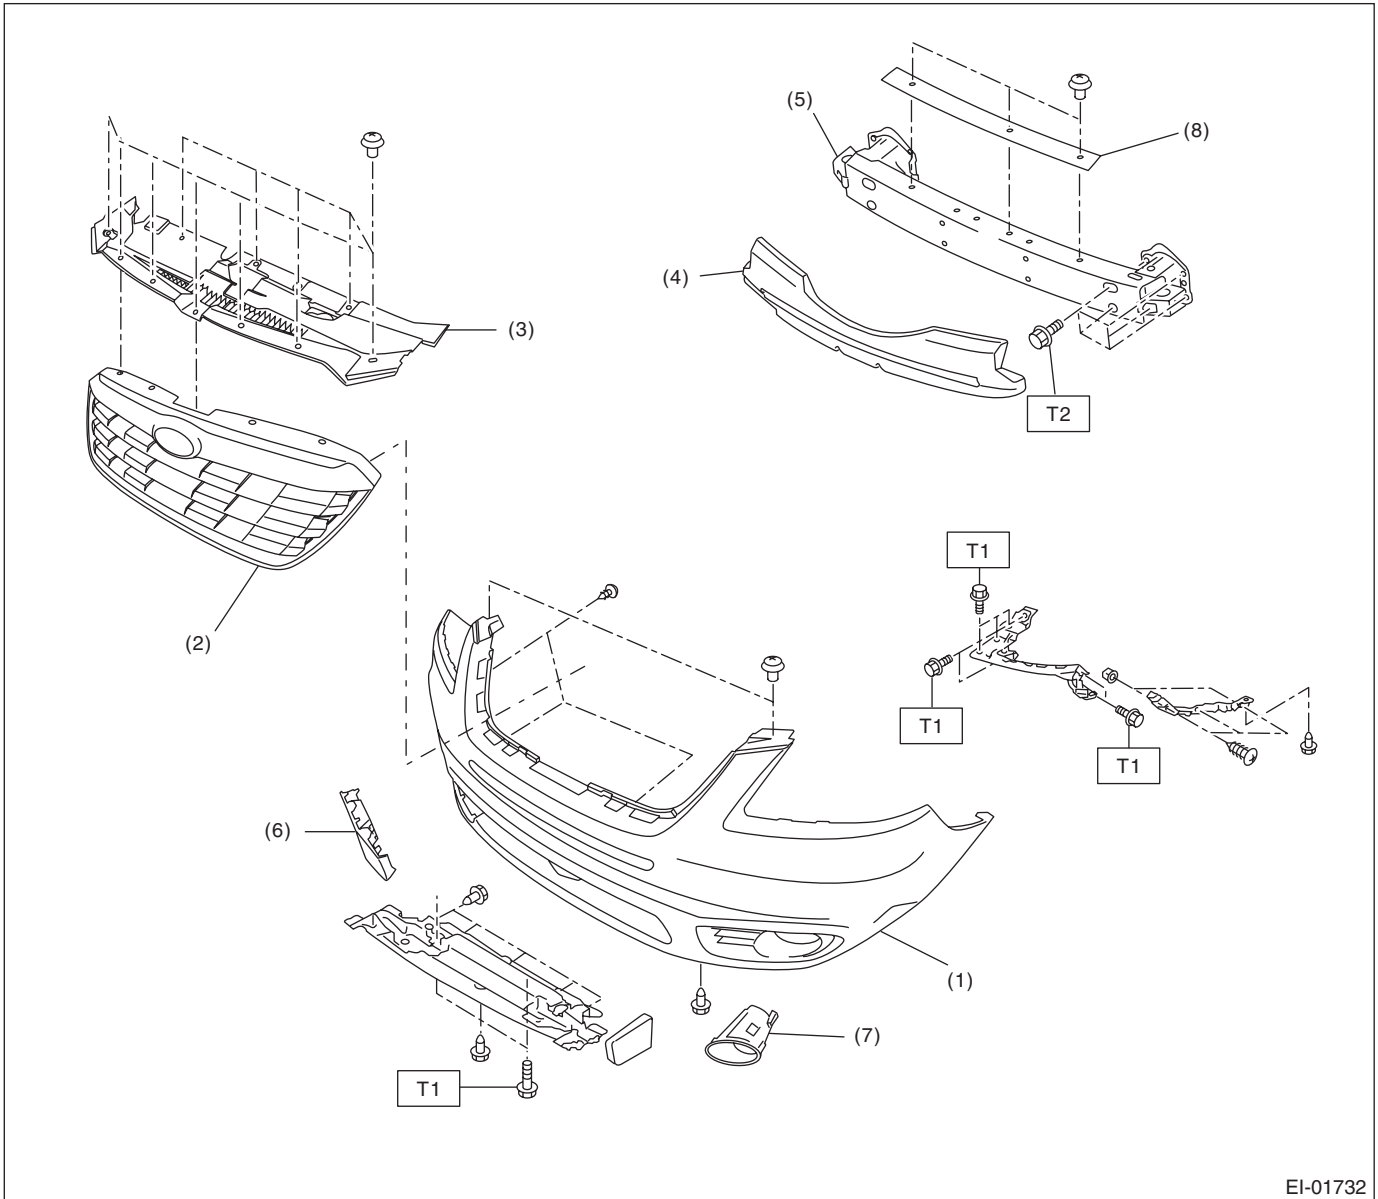

EI-01732


- | | |
|--------------------------|-------------------------------|
| (1) Bumper face | (5) Bumper beam reinforcement |
| (2) Front grille | (6) Towing hook cover |
| (3) Front upper cover | (7) Fog light ASSY |
| (4) Energy absorber foam | (8) Bumper beam cover |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 33 (3.4, 24)

4. REAR BUMPER

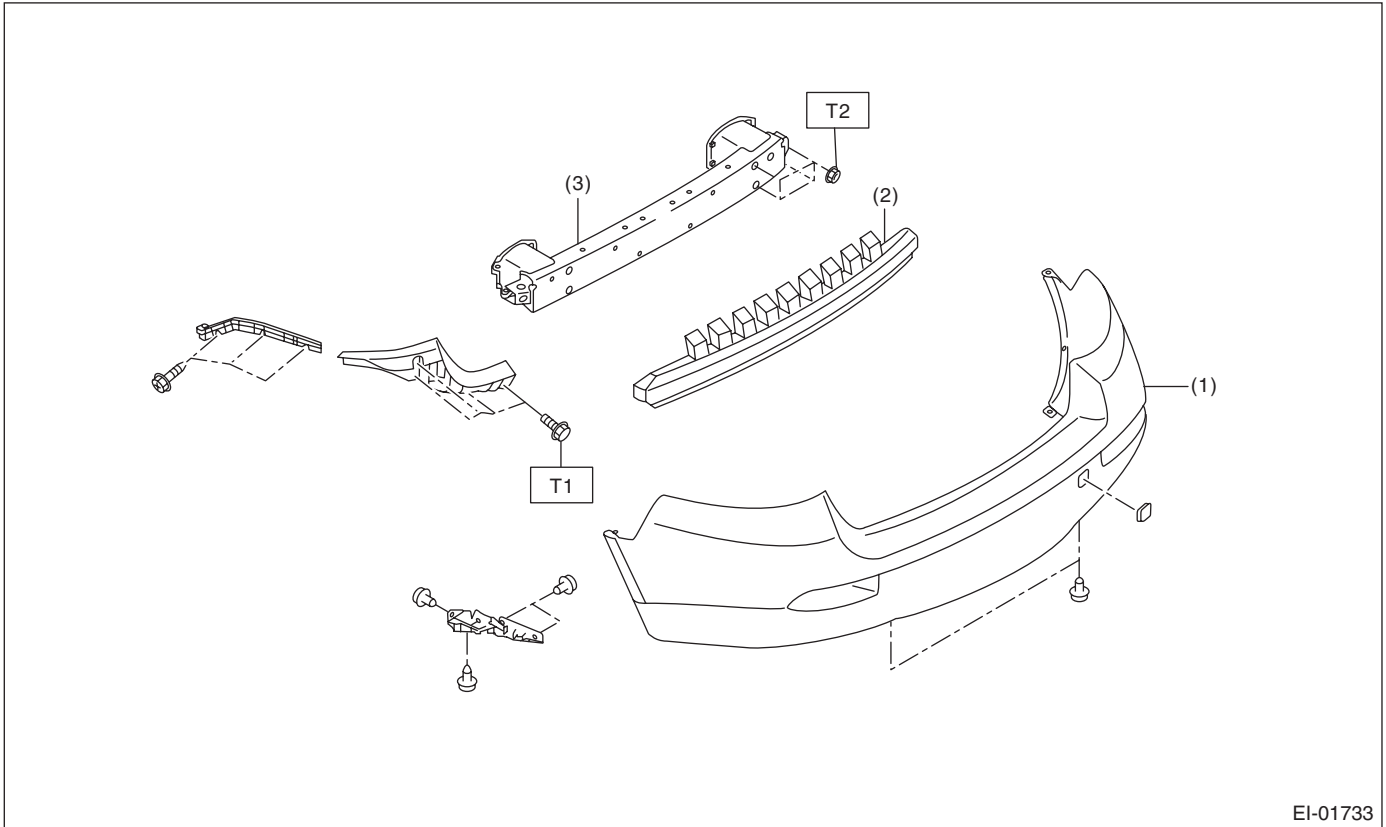

- (1) Bumper face
- (2) Energy absorber foam


- (3) Bumper beam reinforcement

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 53 (5.4, 38)

5. MUD GUARD

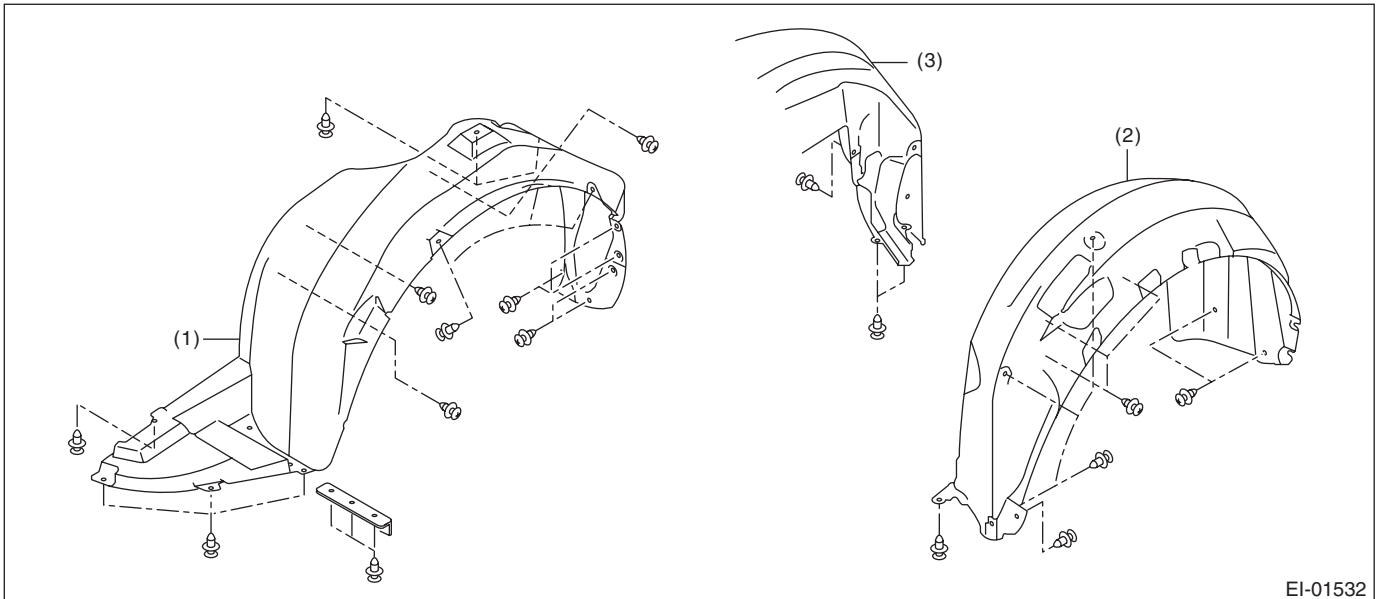

- (1) Front mud guard


- (2) Rear mud guard LH

- (3) Rear mud guard RH

General Description

EXTERIOR/INTERIOR TRIM

6. COWL PANEL

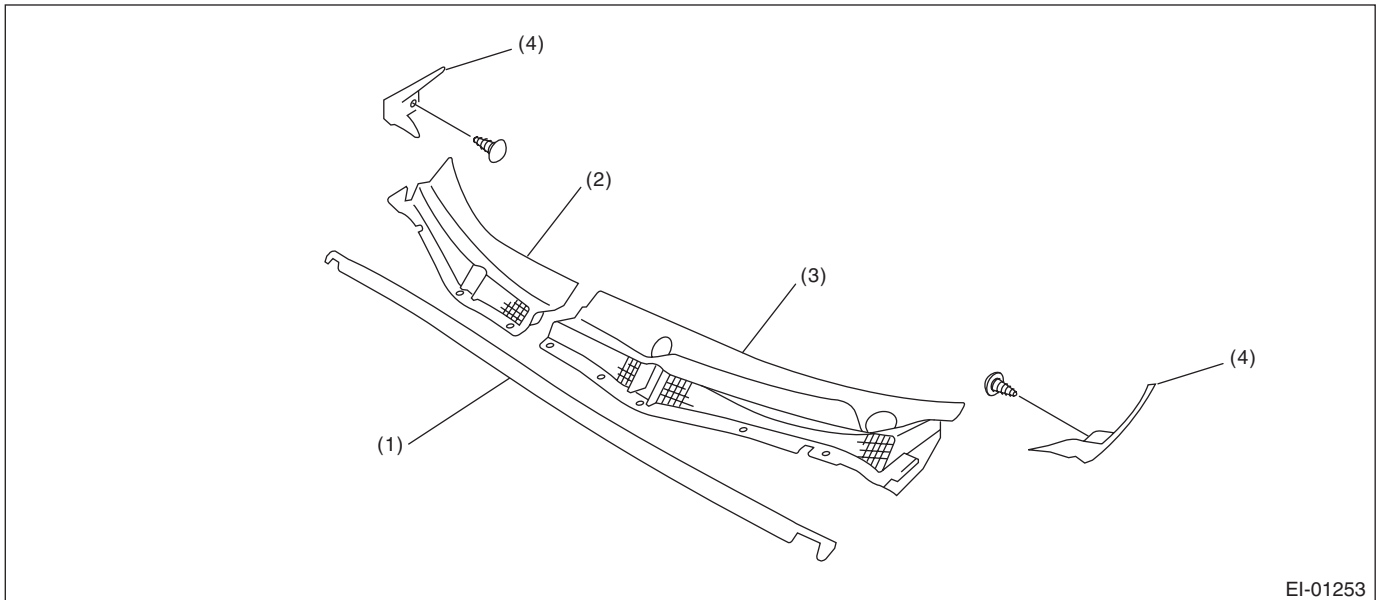


EI-01253

- (1) Weather strip
- (2) Cowl panel RH

(3) Cowl panel LH

(4) Cowl panel side

7. ROOF SPOILER

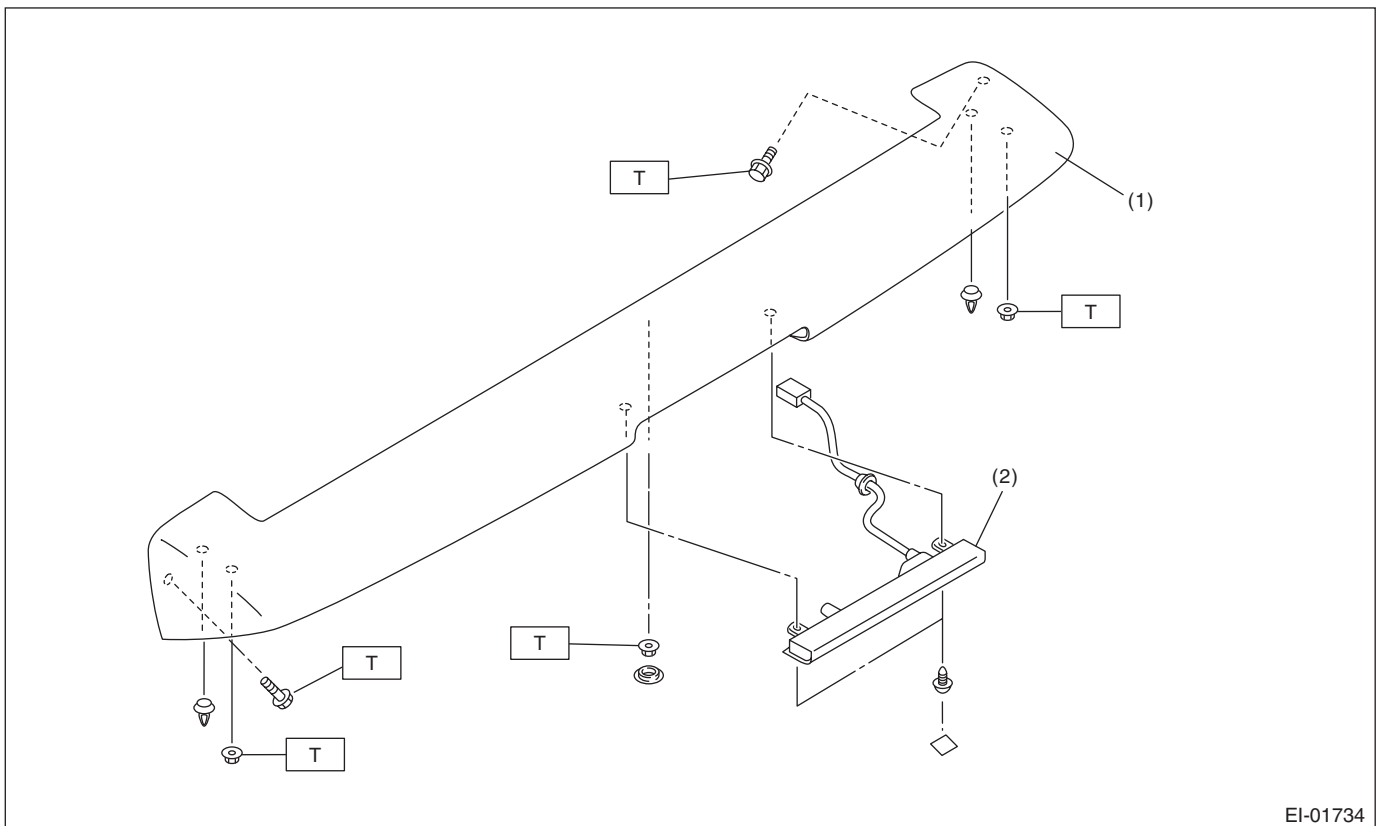


EI-01734

- (1) Roof spoiler
- (2) High-mounted stop light

Tightening torque: N·m (kgf-m, ft-lb)
T: 4.5 (0.46, 3.32)

8. ROOF MOLDING

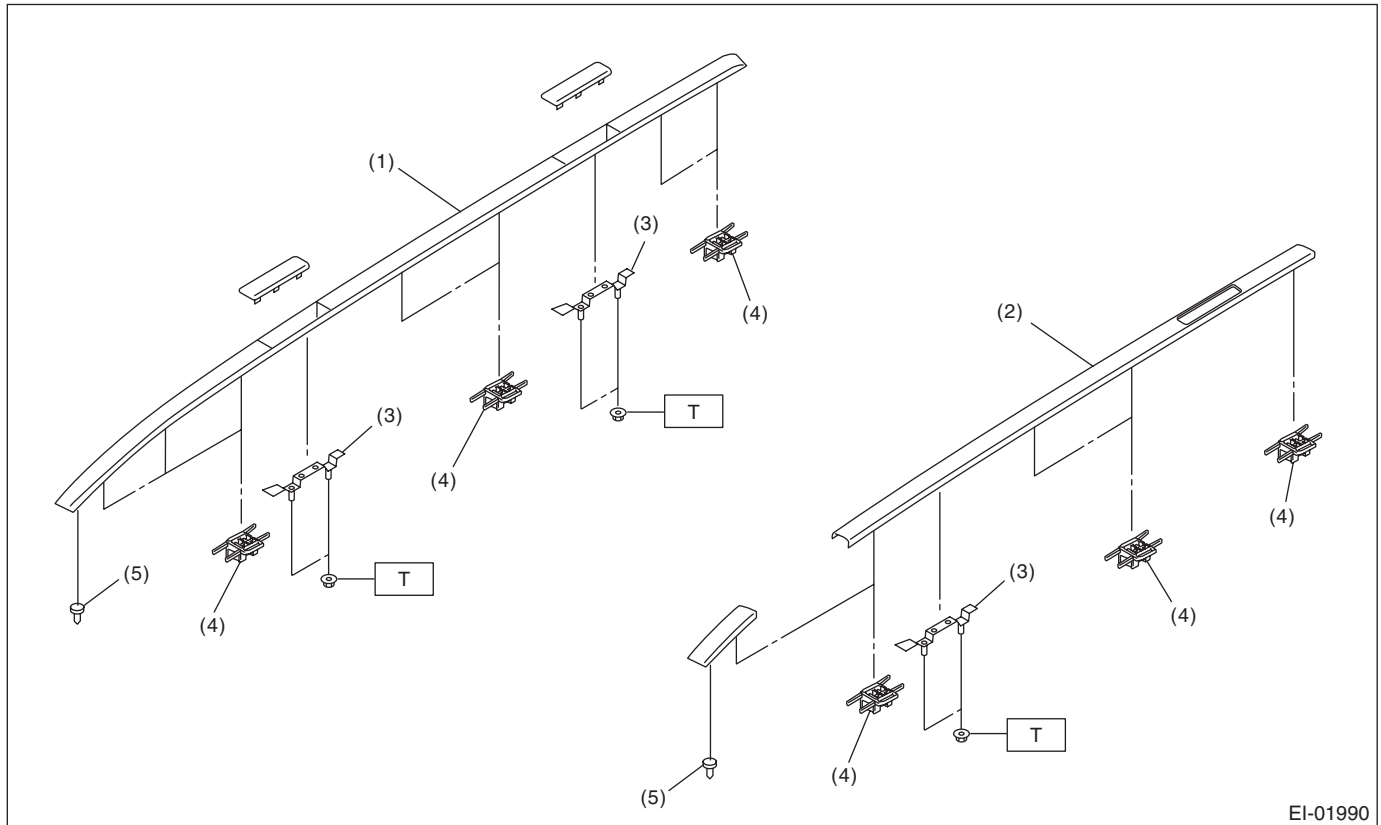

EI-01990


- | | |
|-----------------------------------|-----------|
| (1) Roof molding | (4) Clip |
| (2) Roof molding (with roof rail) | (5) Rivet |
| (3) Roof carrier attachment | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 10 (1.0, 7.23)

General Description


EXTERIOR/INTERIOR TRIM

9. ROOF RAIL

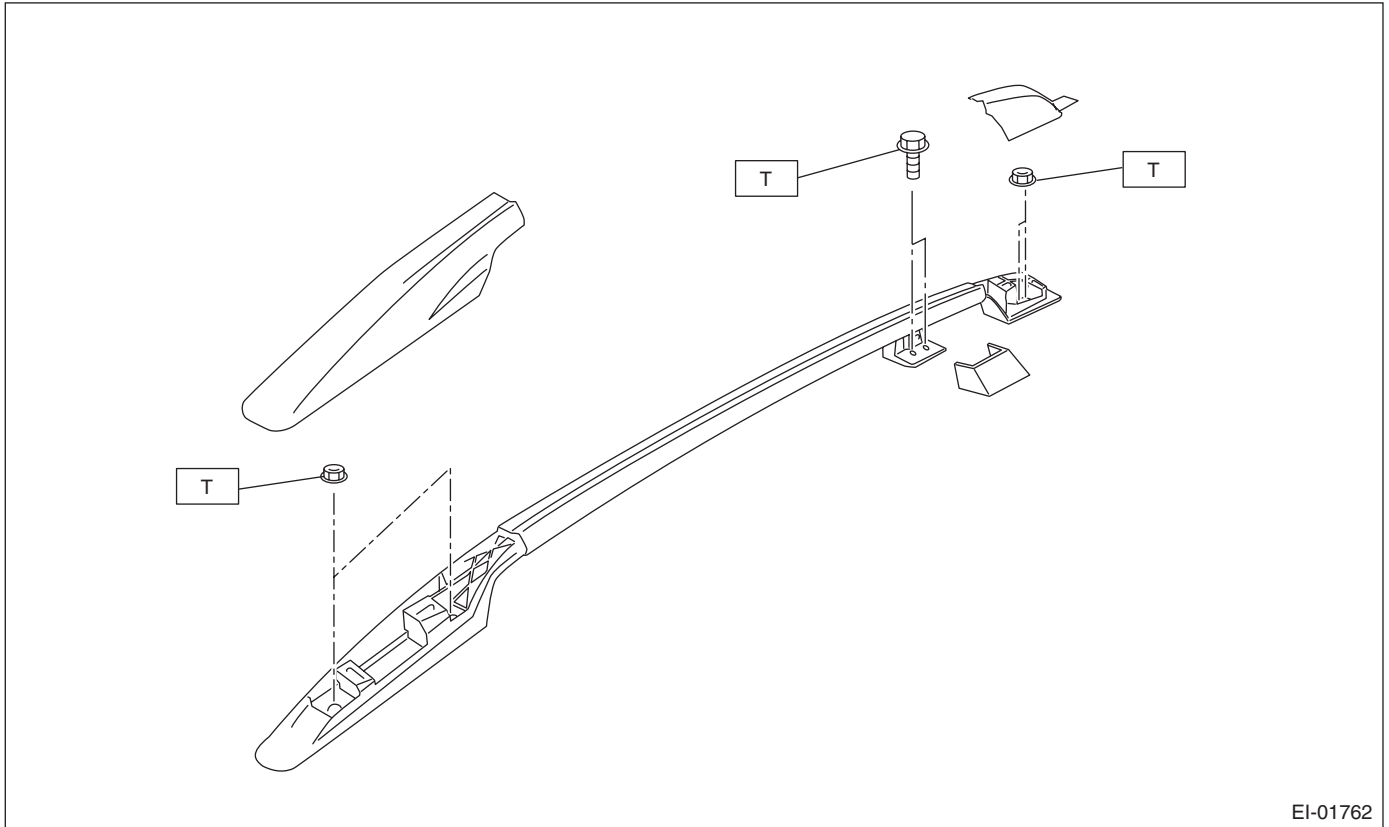

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

10.SIDE GARNISH

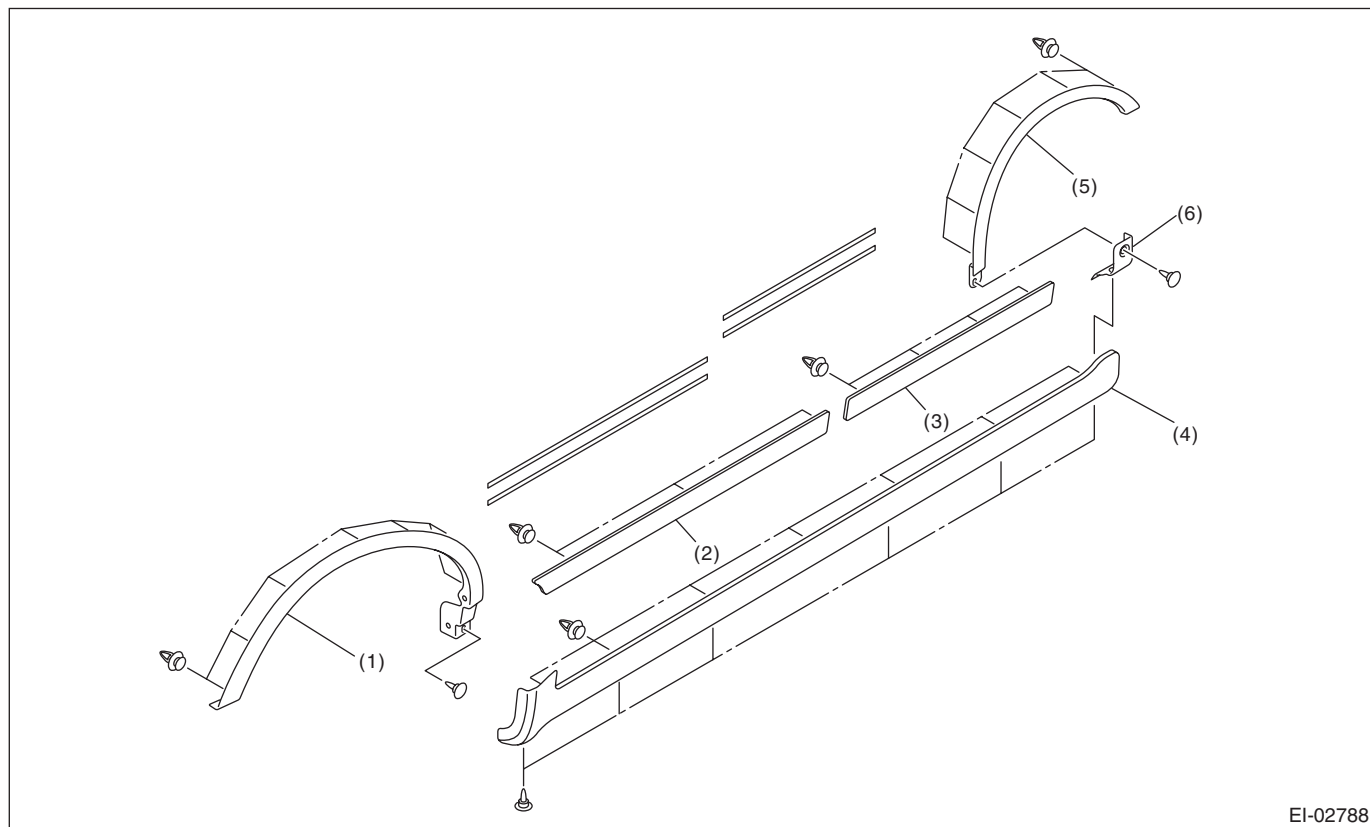

EI-02788

(1) Front fender garnish

(2) Front door garnish

(3) Rear door garnish

(4) Side sill garnish


(5) Rear quarter garnish

(6) Garnish end cover

General Description

EXTERIOR/INTERIOR TRIM


11.DOOR TRIM

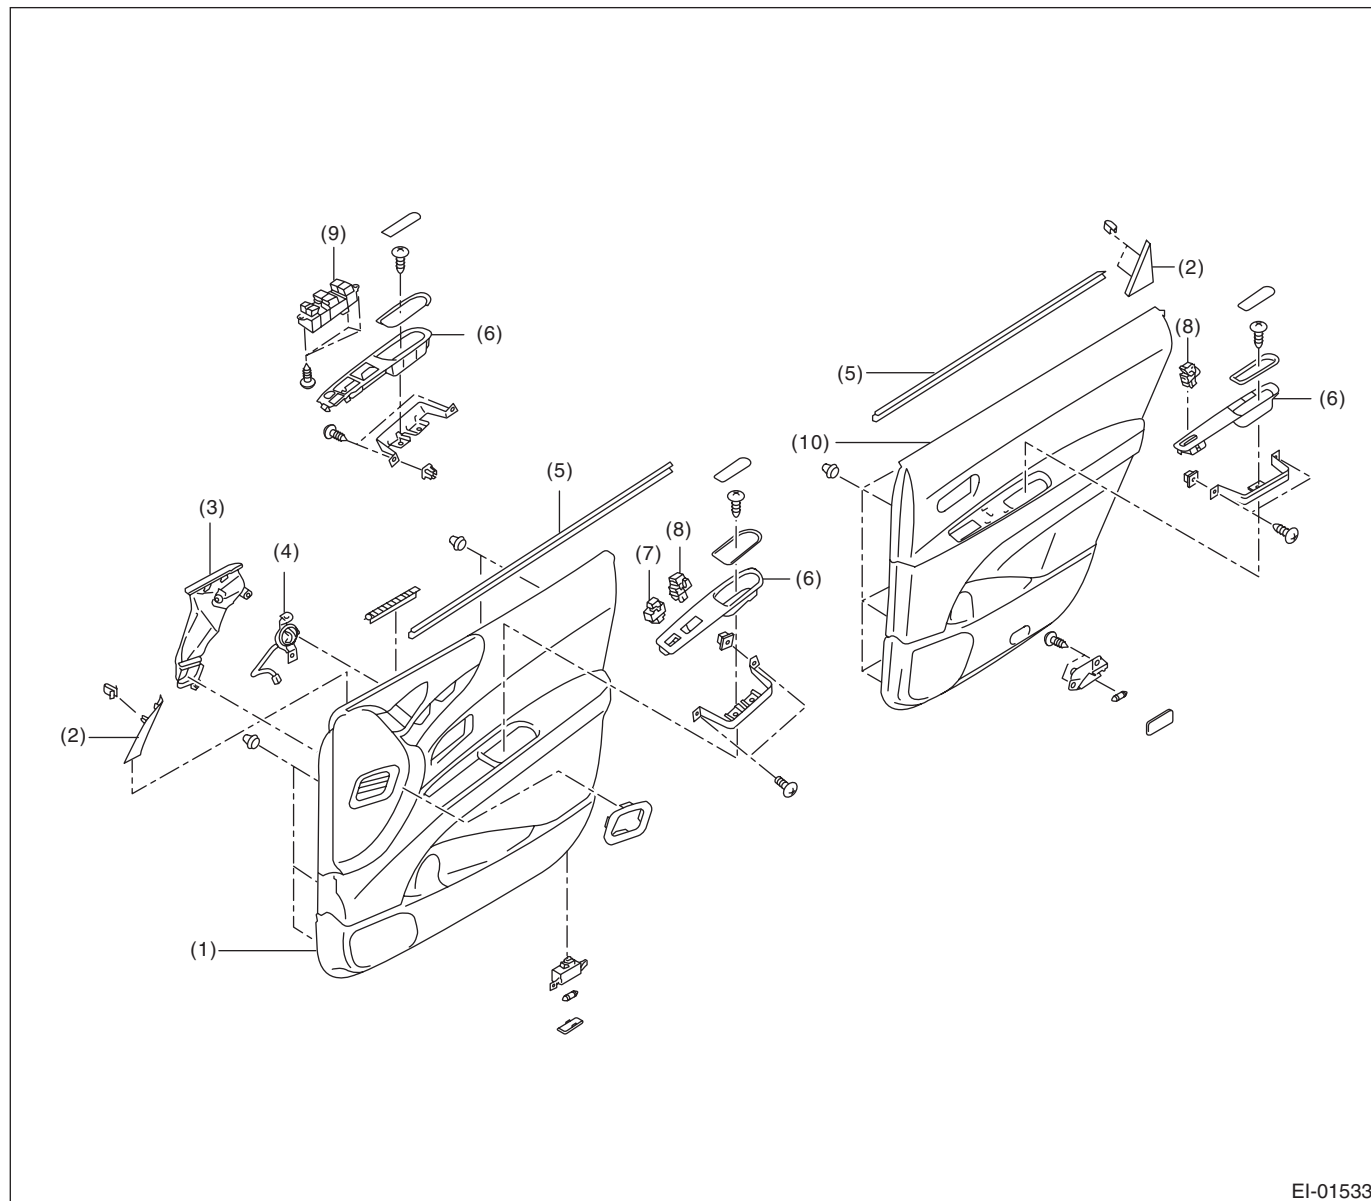

EI-01533

- | | | |
|---------------------|-------------------------------|-----------------------------------|
| (1) Front door trim | (5) Weather strip | (9) Power window main switch ASSY |
| (2) Gusset cover | (6) Power window switch cover | (10) Rear door trim |
| (3) Defroster duct | (7) Door lock switch | |
| (4) Tweeter | (8) Power window sub-switch | |

12.CONSOLE BOX

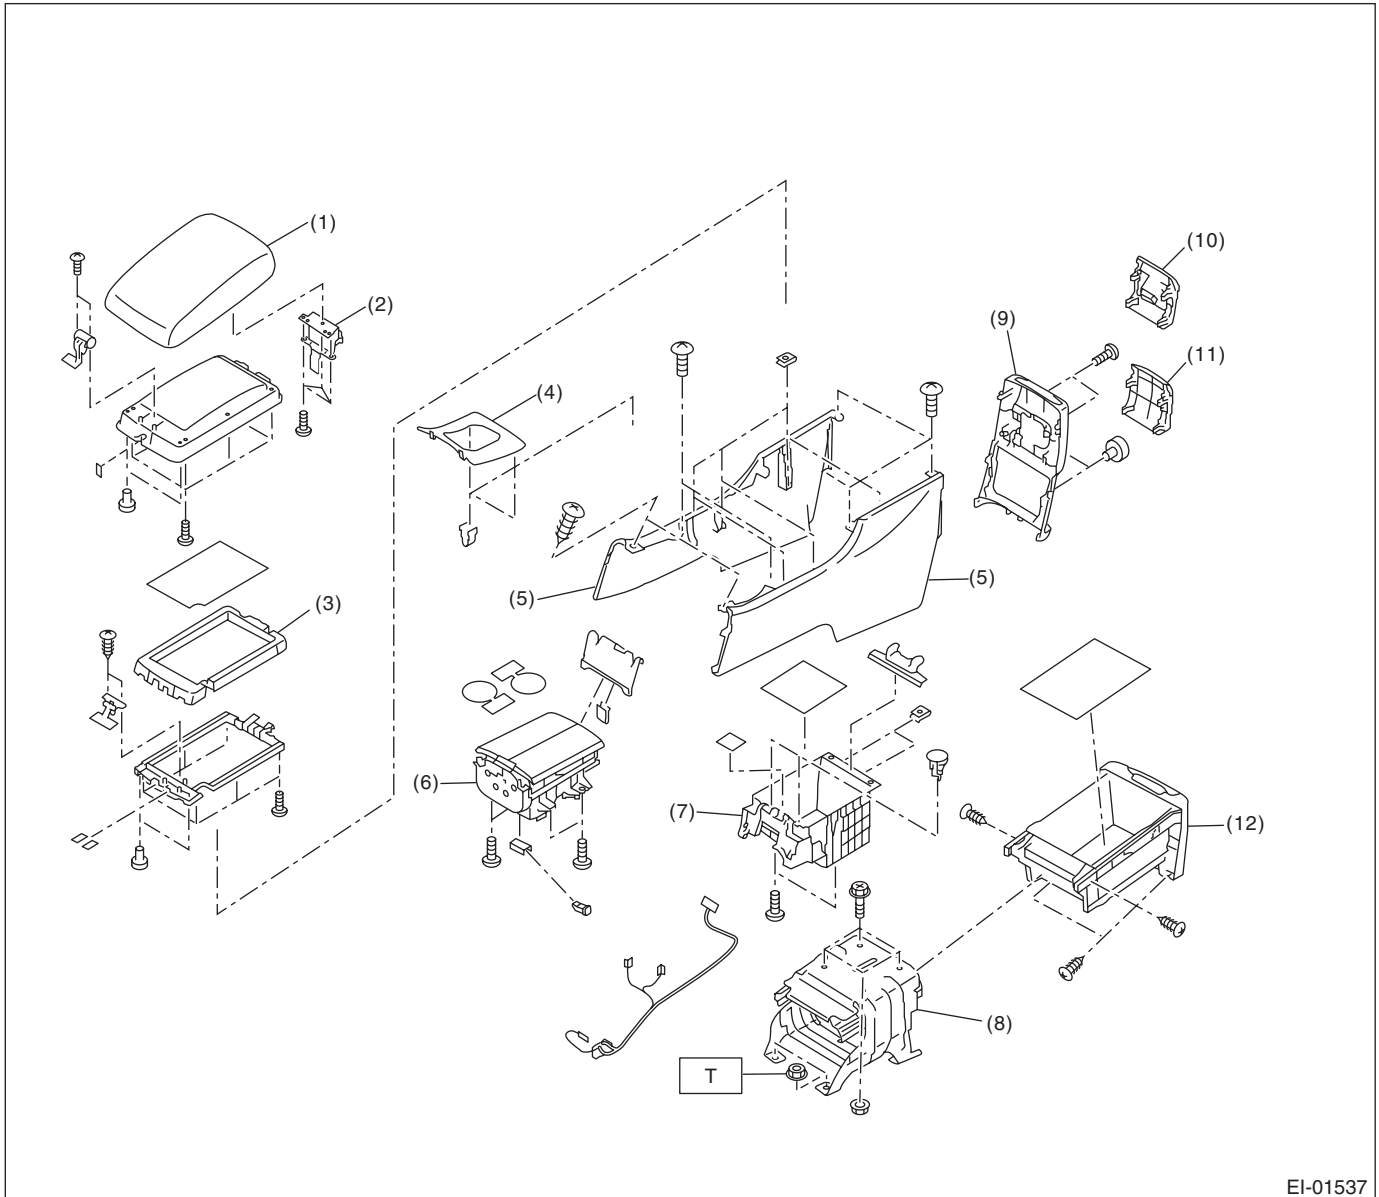

EI-01537

- | | | |
|-------------------------|--|---------------------------|
| (1) Console upper lid | (6) Cup holder ASSY | (11) Rear panel cover |
| (2) Lid hinge | (7) Console pocket | (12) Console lower pocket |
| (3) Console lower lid | (8) Console frame | |
| (4) Console front panel | (9) Console rear panel | |
| (5) Console side panel | (10) Rear panel cover (with rear cooler) | |


Tightening torque: N·m (kgf-m, ft-lb)

T: 6.5 (0.66, 4.79)

General Description


EXTERIOR/INTERIOR TRIM

13. INSTRUMENT PANEL

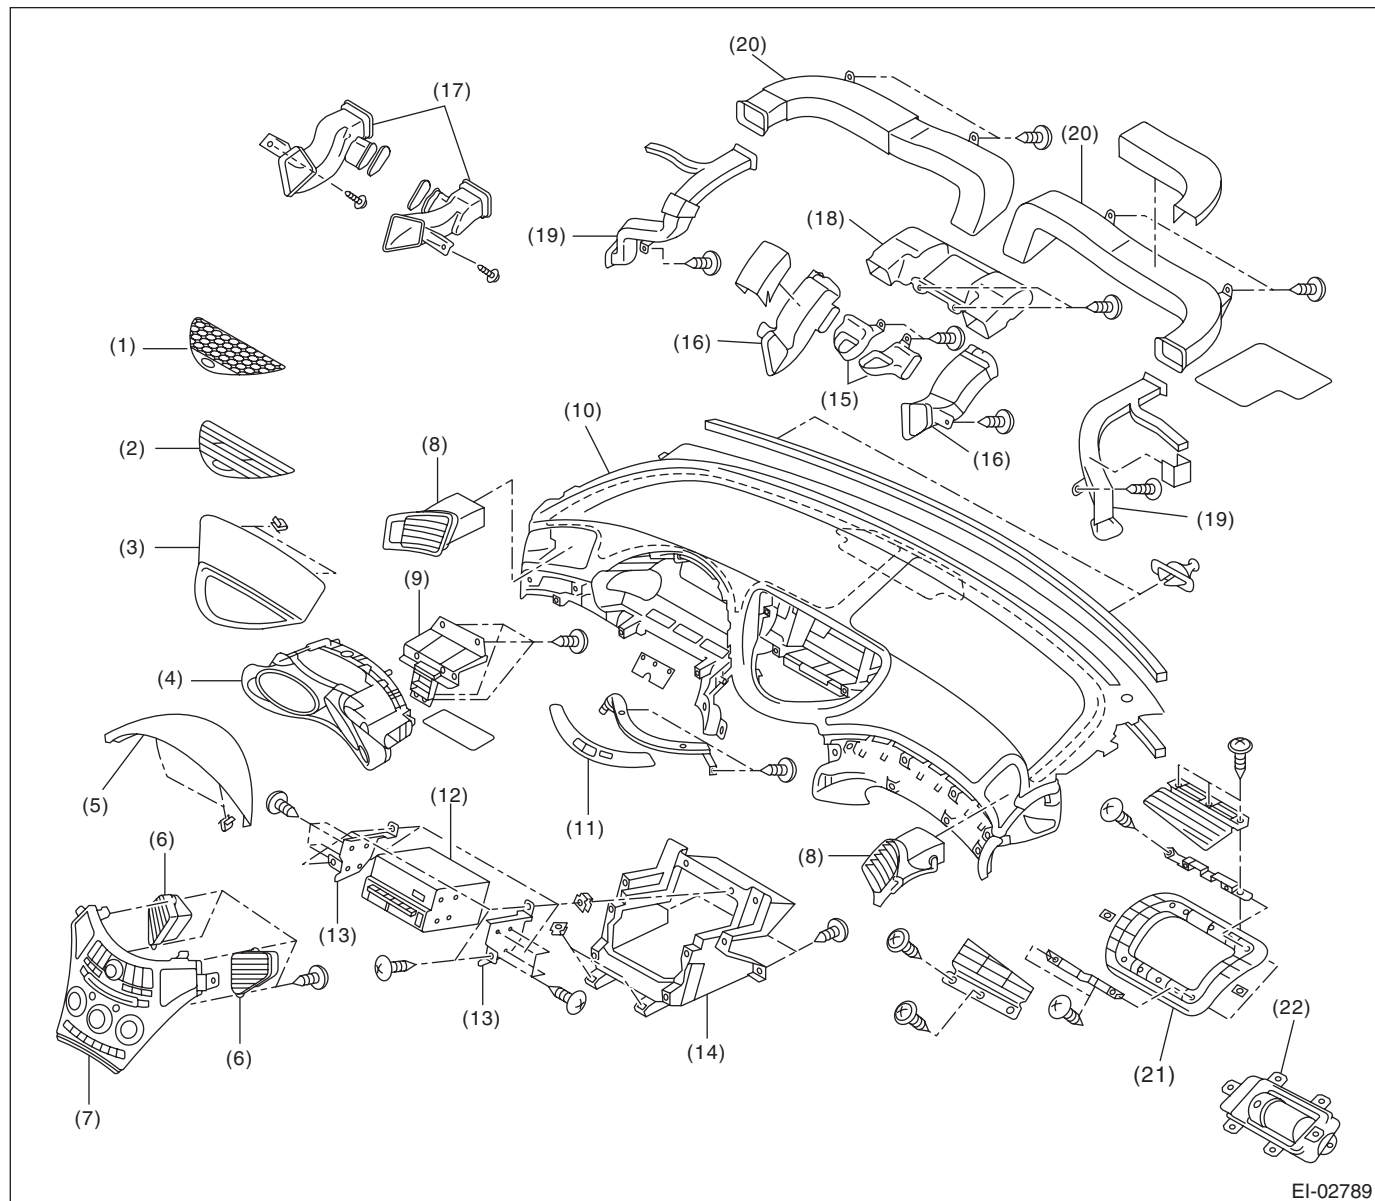

EI-02789

- | | | |
|--|----------------------------------|--|
| (1) Speaker grille (for harman/kardon audio) | (9) Meter stay | (17) Center duct (for harman/kardon audio) |
| (2) Air vent upper grille | (10) Instrument panel upper ASSY | (18) Center ventilation duct |
| (3) Display cover | (11) Upper control switch | (19) Side defroster duct |
| (4) Combination meter ASSY | (12) Audio ASSY | (20) Side ventilation duct |
| (5) Meter visor | (13) Audio bracket | (21) Passenger's airbag stay |
| (6) Air vent center grille | (14) Center console frame | (22) Passenger's airbag module ASSY |
| (7) Control panel | (15) Upper duct | |
| (8) Air vent side grille | (16) Center duct | |

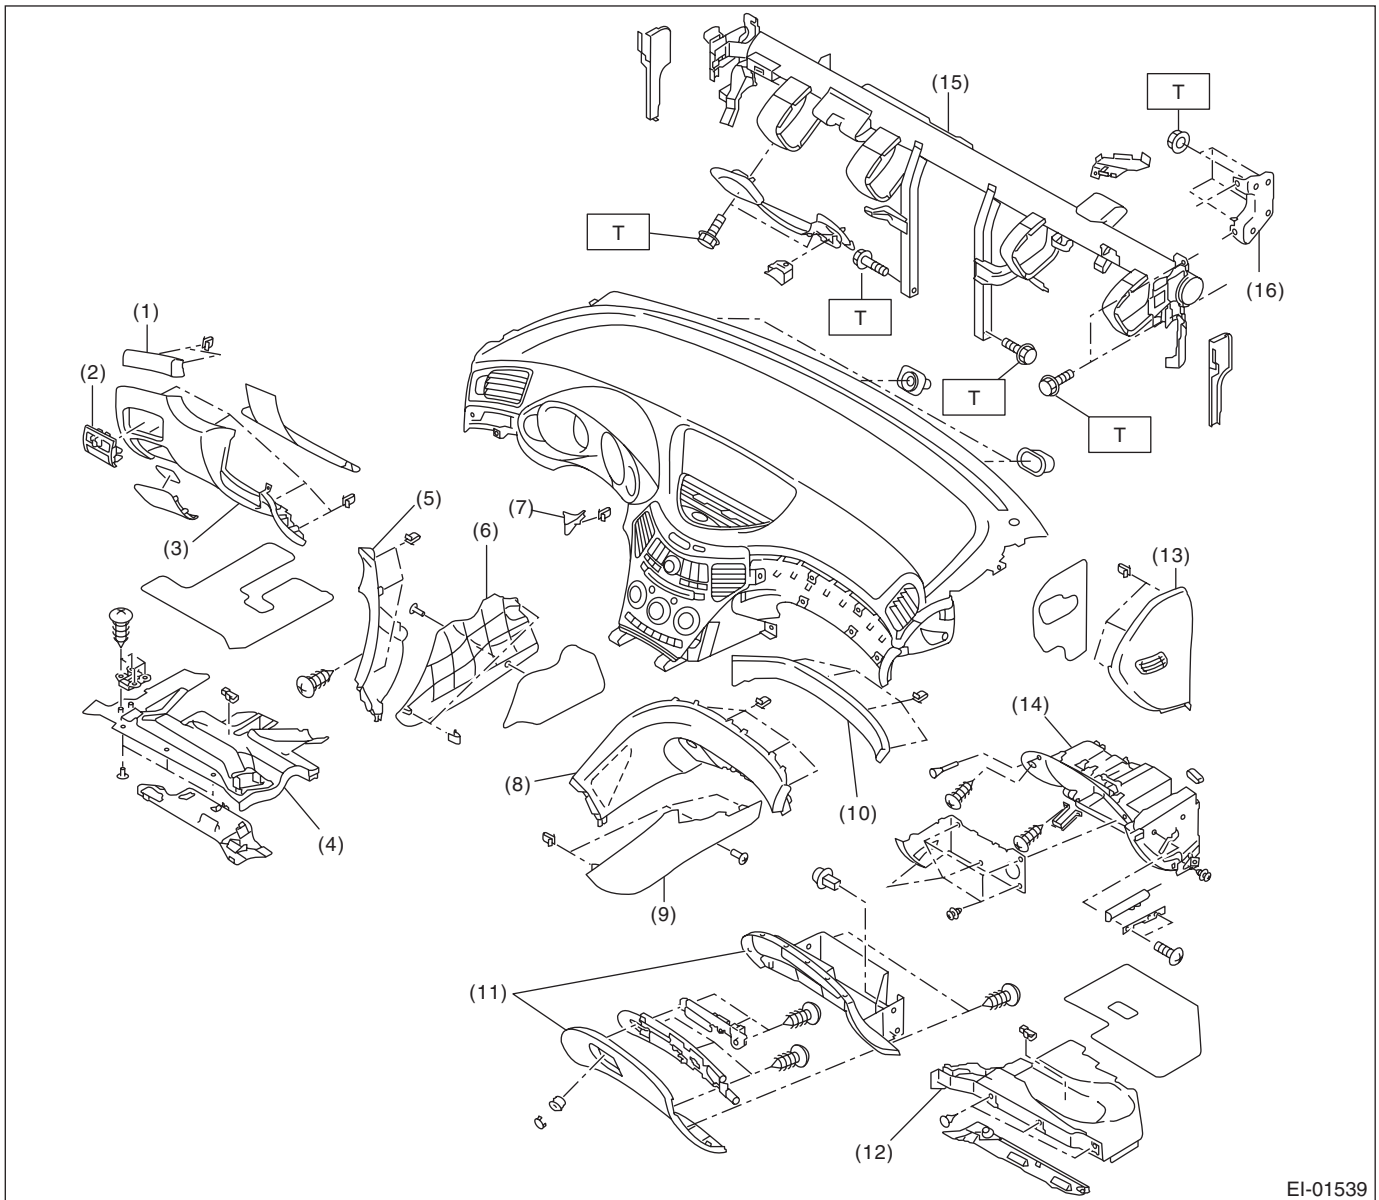

EI-01539

- (1) Garnish LH
- (2) Switch ASSY
- (3) Instrument panel lower cover upper
- (4) Instrument panel lower cover under
- (5) Console side panel upper LH
- (6) Console side panel lower LH
- (7) Garnish CTR

- (8) Console side panel upper RH
- (9) Console side panel lower RH
- (10) Garnish RH
- (11) Glove box lid
- (12) Glove box lower cover
- (13) Instrument panel side cover
- (14) Glove box panel

- (15) Steering support beam ASSY
- (16) Steering support beam bracket


Tightening torque: N·m (kgf-m, ft-lb)

T: 25 (25.5, 18)

General Description

EXTERIOR/INTERIOR TRIM

14.SIDE TRIM

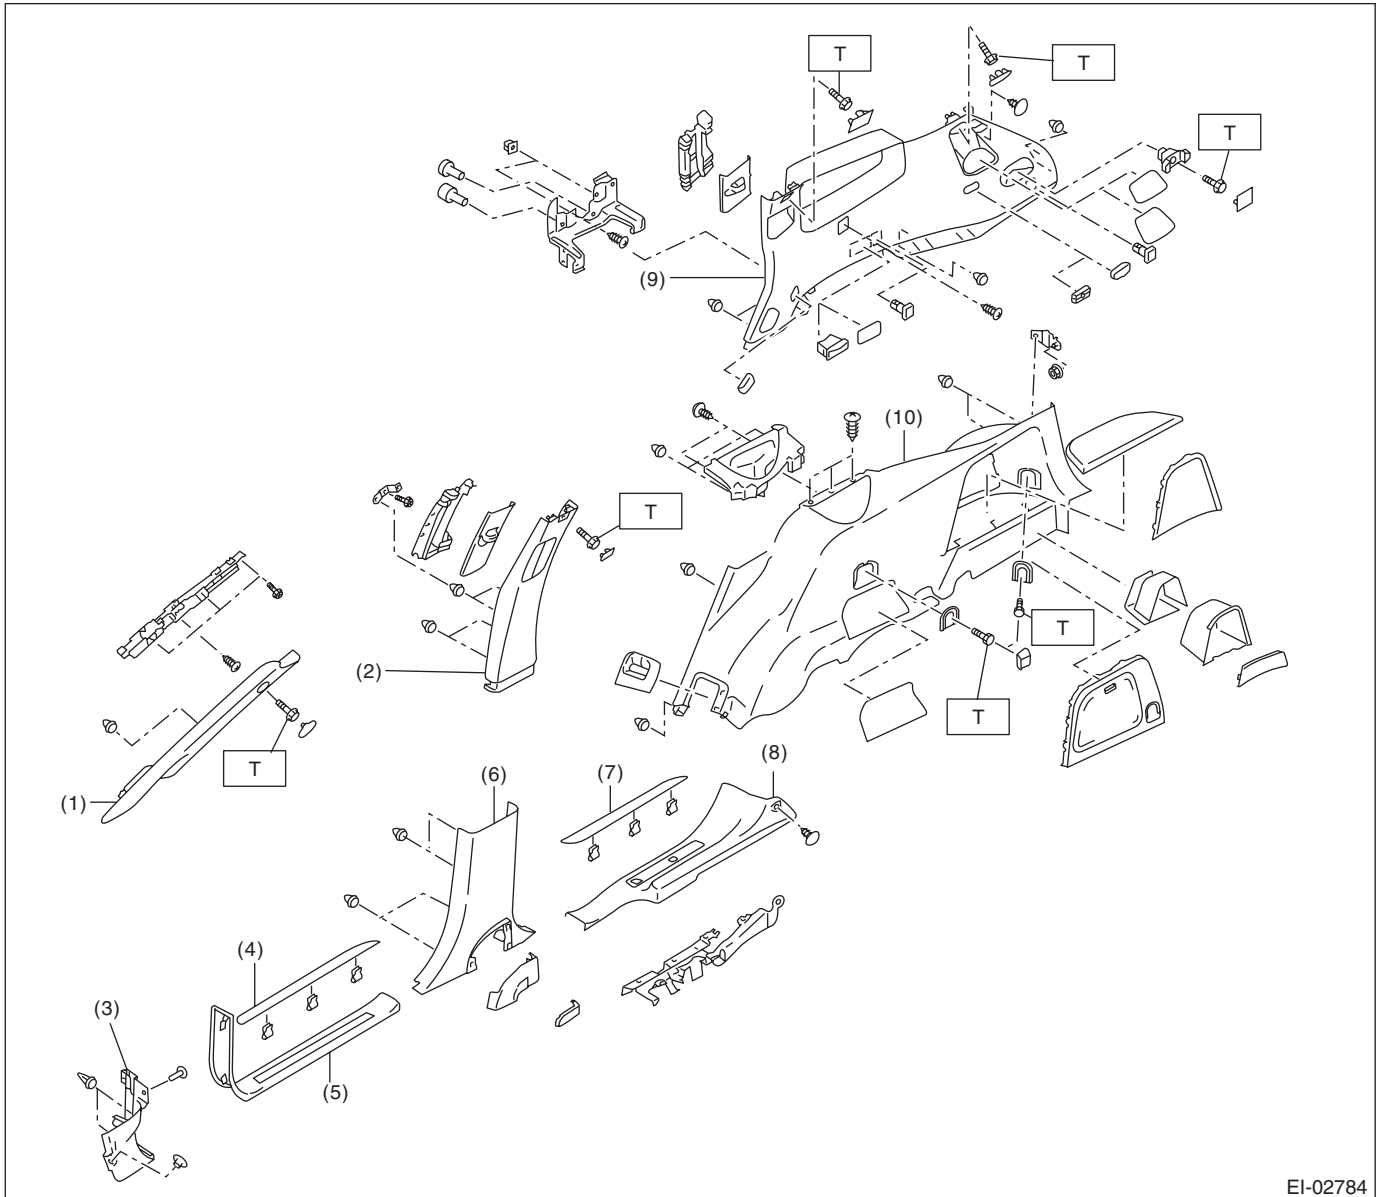

EI-02784


- (1) Front pillar upper trim
- (2) Center pillar upper trim
- (3) Front pillar lower trim
- (4) Front scuff plate
- (5) Front door scuff plate

- (6) Center pillar lower trim
- (7) Rear scuff plate
- (8) Rear door scuff plate
- (9) Rear quarter upper trim

- (10) Rear quarter lower trim

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

15.REAR GATE TRIM

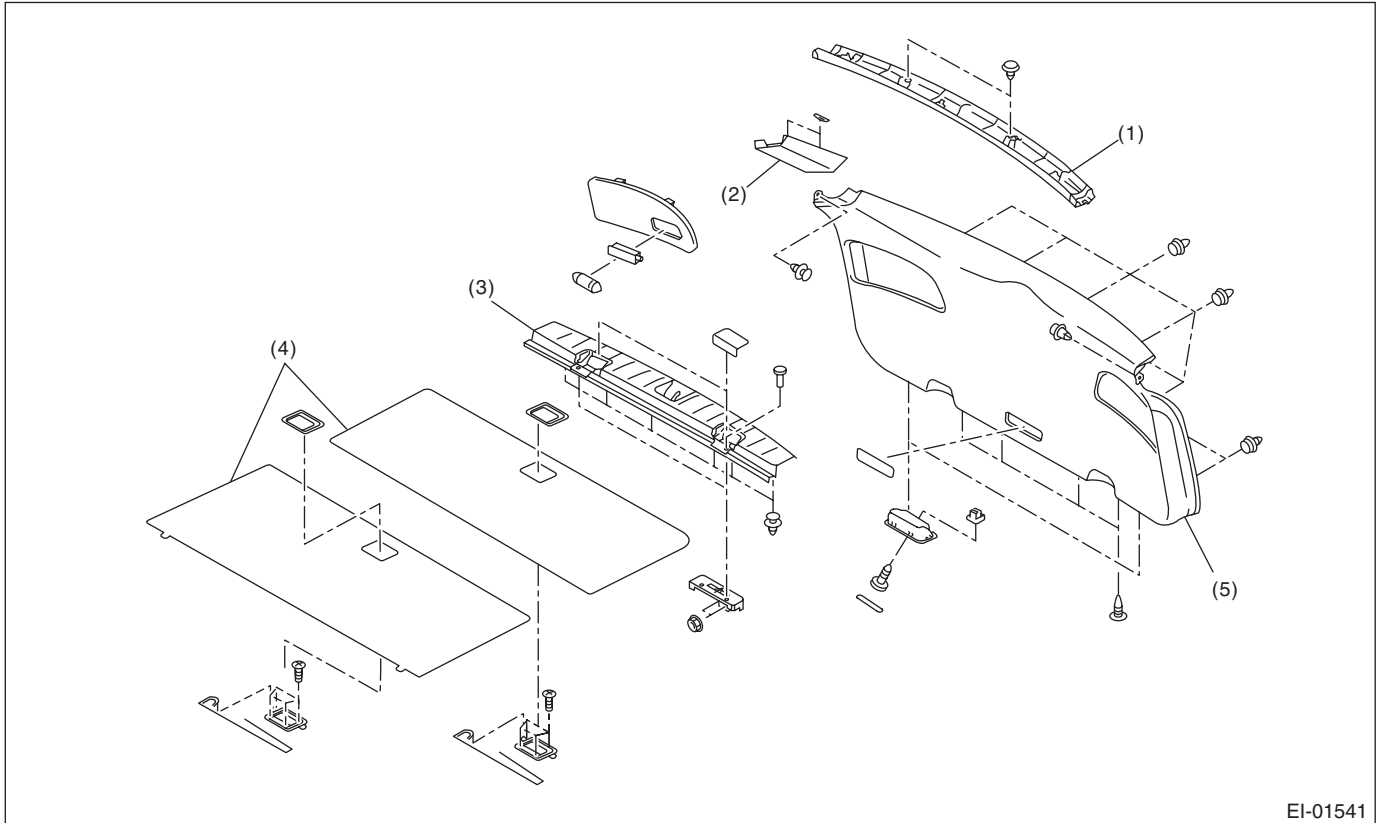


EI-01541

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| (1) Rear gate panel upper trim | (3) Luggage floor end cover | (5) Rear gate panel lower trim |
| (2) Rear gate panel pillar trim | (4) Luggage floor mat | |

General Description


EXTERIOR/INTERIOR TRIM

16.ROOF TRIM

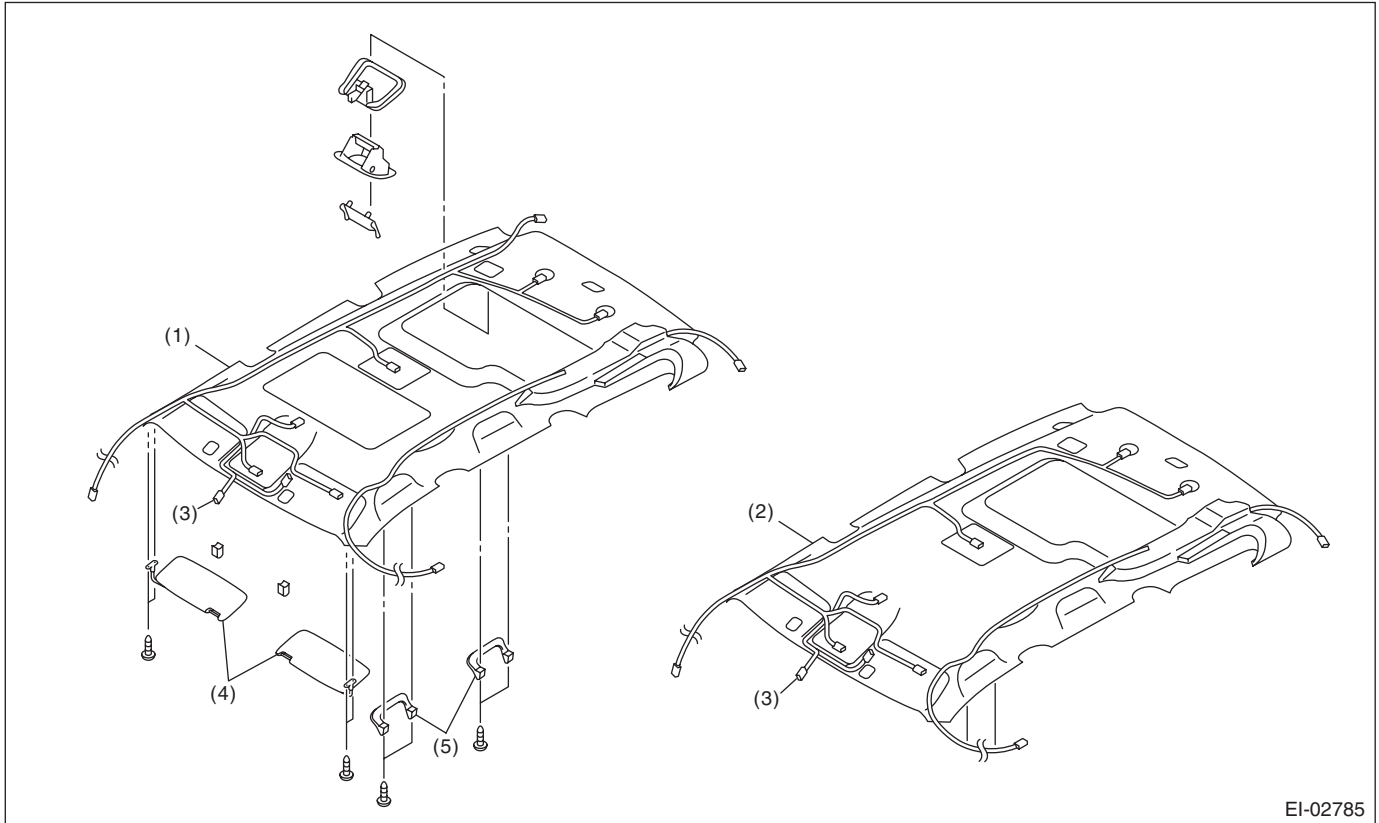

- (1) Roof trim (model with sunroof)
- (2) Roof trim
- (3) RCD mirror code (model with RCD mirror)
- (4) Sun visor
- (5) Assist rail


17.HEAT SHIELD COVER

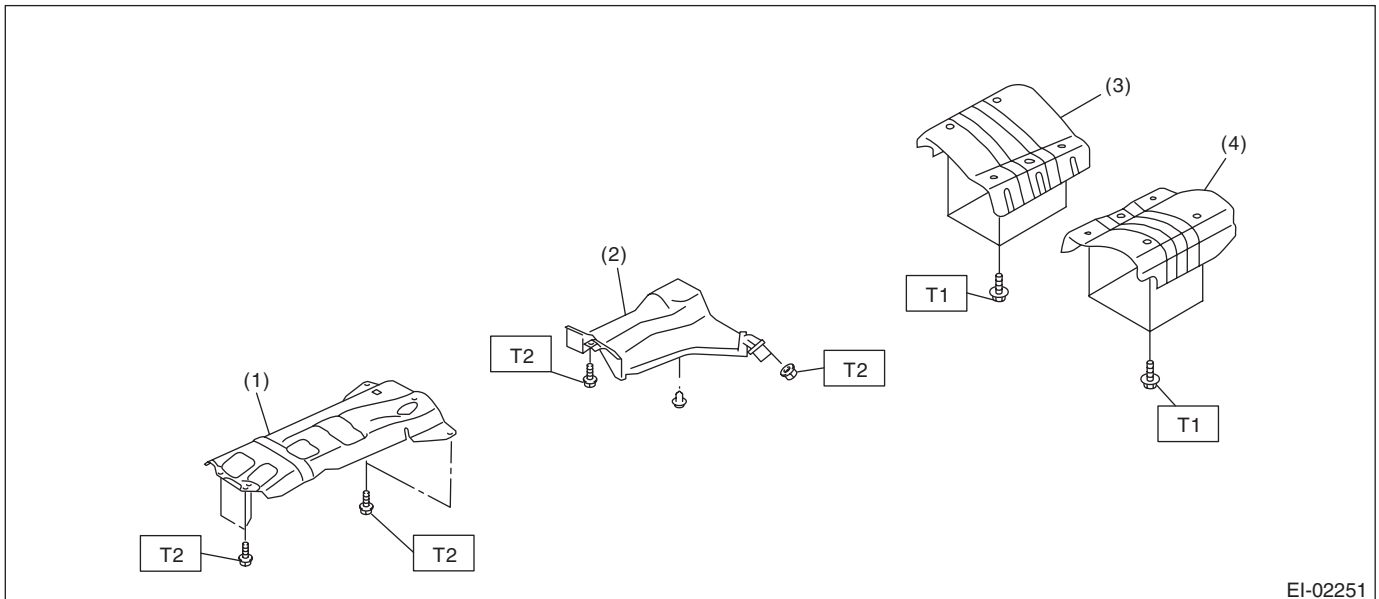

- (1) Front heat shield cover
- (2) Center heat shield cover
- (3) Rear heat shield cover RH
- (4) Rear heat shield cover LH

Tightening torque:N-m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 18 (1.84, 13.3)

18.TRAILER HITCH

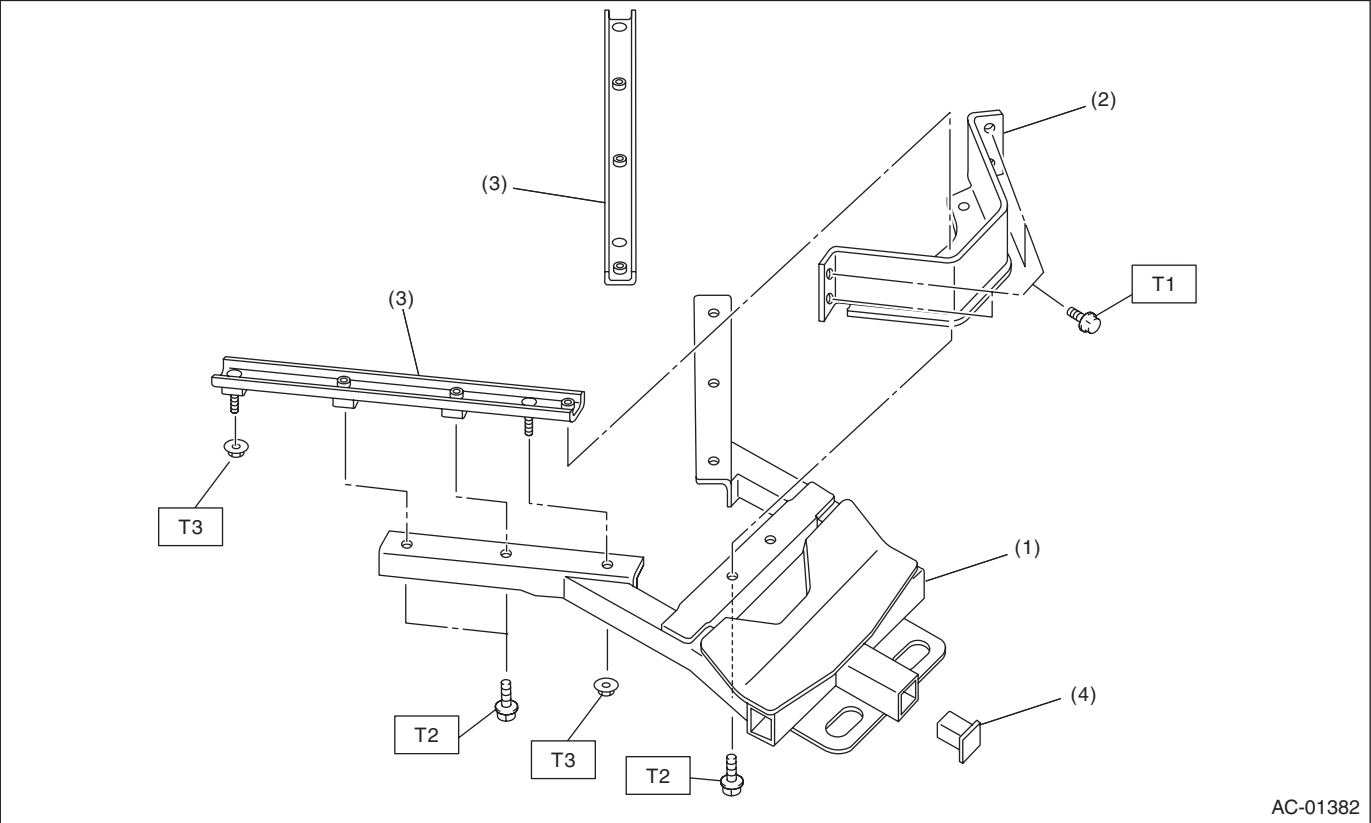

- (1)

Main frame
- (2)

Center frame
- (3)

Side frame
- (4)

Cover

Tightening torque:N·m (kgf-m, ft-lb)
T1: 13 (1.33, 9.4)
T2: 33 (3.37, 23.9)
T3: 53 (5.4 38.3)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.