

21. Wiper Deicer System

A: WIRING DIAGRAM

<Ref. to WI-113, Wiper Deicer System.>

B: INSPECTION

1. SYSTEM INSPECTION

Symptom	Repair order
Wiper deicer does not operate.	<ol style="list-style-type: none">1. Fuse (F/B No. 4, 9)2. Wiper deicer relay3. Wiper deicer switch4. Wiring harness5. Body integrated unit

NOTE:

Wiper deicer system can be customized on the Subaru Select Monitor.

System name	Initial setting	Customize setting
Wiper deicer timer	OFF after 15 min.	Continuous operation*

*: When one of the following conditions occurs, continuous operation is suspended and turned off after 15 min.

- Ambient temperature at 5°C (41°F) or more continues for 10 seconds
- Air conditioner ECO mode ON continues for 10 seconds
- Malfunction occurs on ambient sensor.
- Vehicle speed below 15 km/h (9 MPH) continues 15 min.
- Malfunction occurs in CAN communication.

2. HEAT WIRE INSPECTION

Refer to "HEAT WIRE INSPECTION" of "Rear Window Defogger System".

<Ref. to GW-27, INSPECTION, Rear Window Defogger System.>

NOTE:

For heat wire inspection, removing and installing the instrument panel assembly are required.

C: REPAIR

Refer to "Rear Window Defogger System".

<Ref. to GW-28, REPAIR, Rear Window Defogger System.>

NOTE:

For heat wire repair, removing and installing the instrument panel assembly are required.