


Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION





1. ENGINE COMPARTMENT

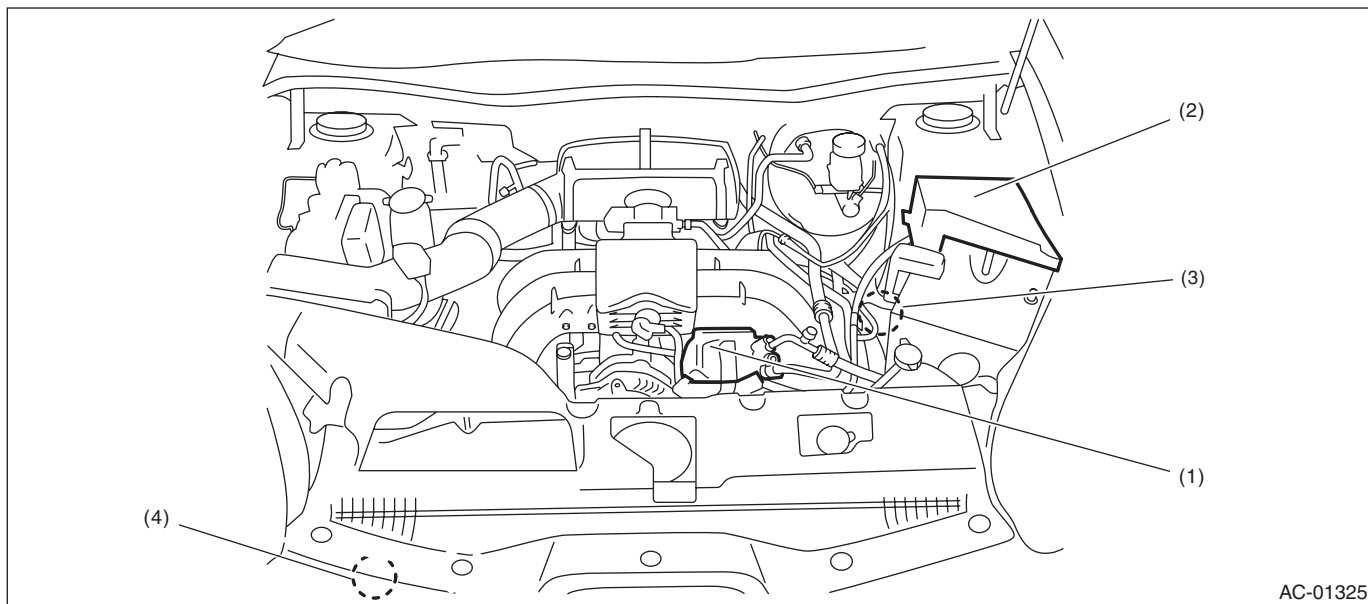

- (1) A/C compressor
(2) A/C relay

- (3) Pressure switch


- (4) Ambient sensor

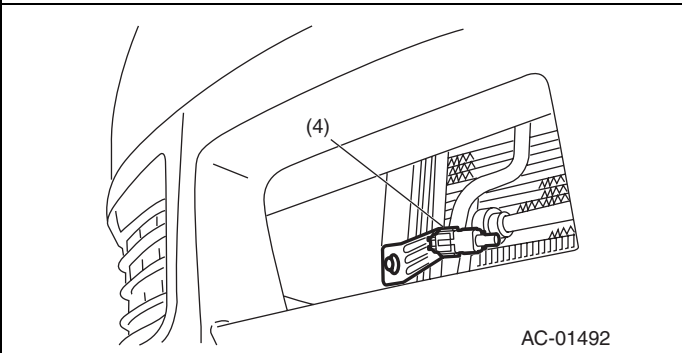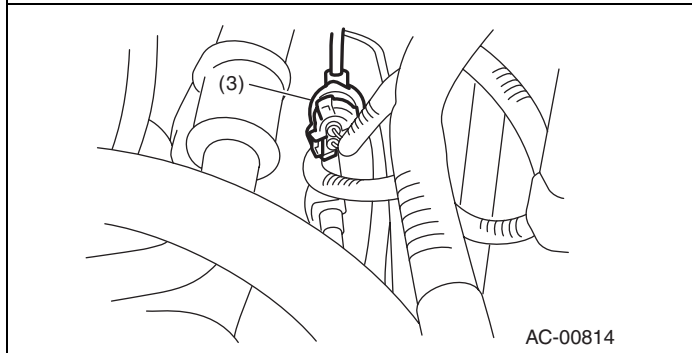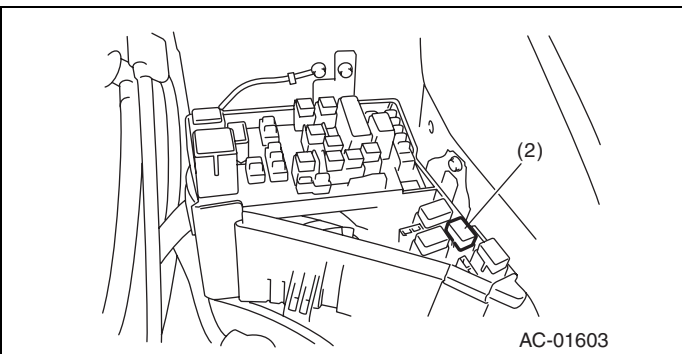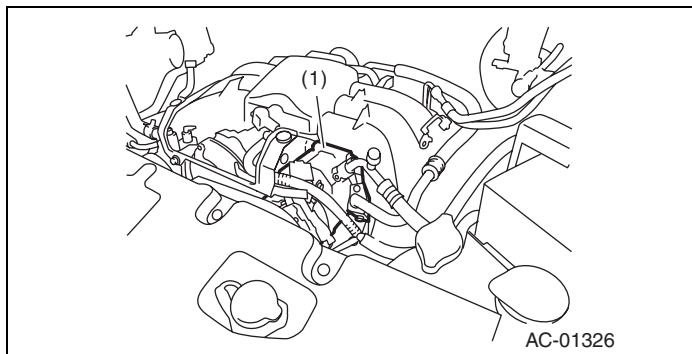

Electrical Component Location


HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. PASSENGER COMPARTMENT

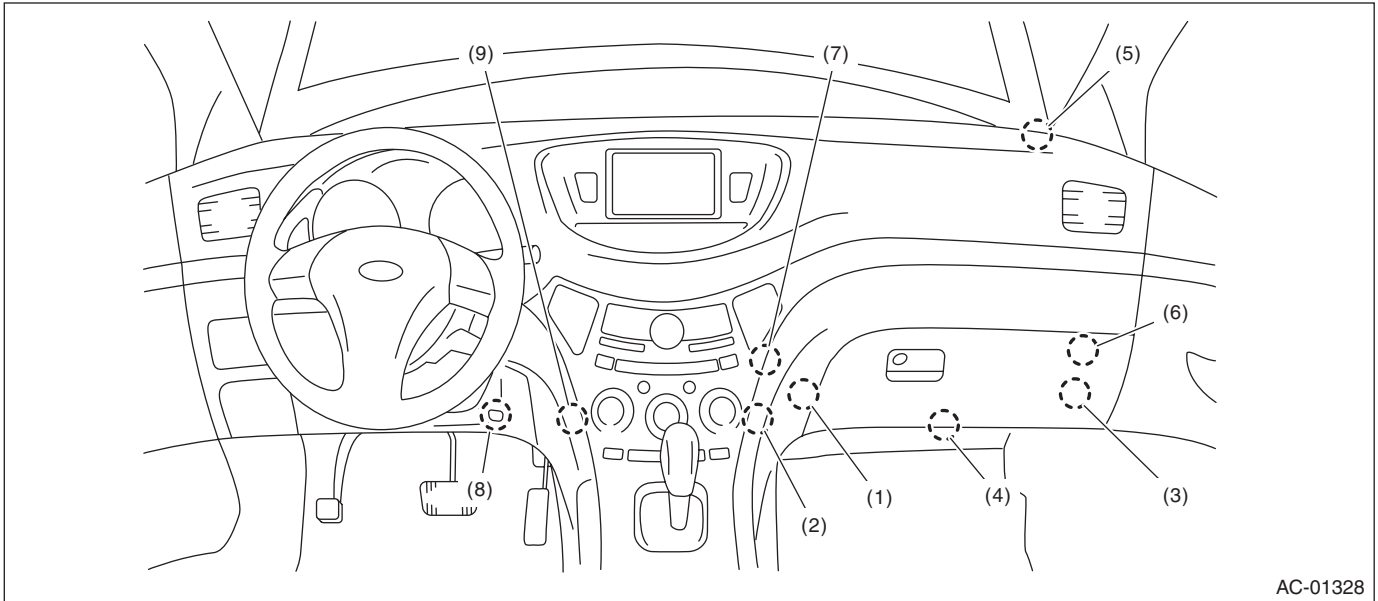


AC-01328


- | | | |
|--|--------------------------|---|
| (1) Evaporator sensor | (4) Blower motor | (7) Mode door actuator |
| (2) Passenger's side air mix door actuator | (5) Sunload sensor | (8) In-vehicle sensor |
| (3) Auto A/C control module | (6) Intake door actuator | (9) Driver's side air mix door actuator |

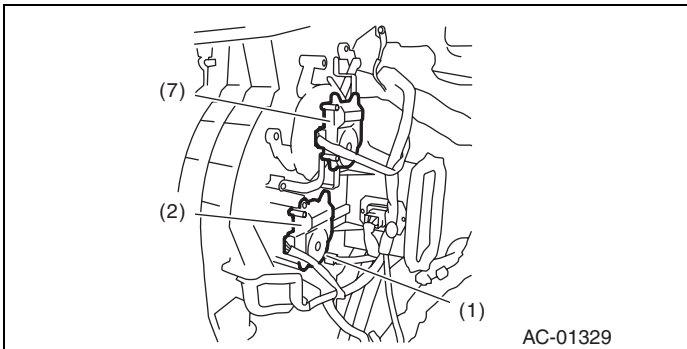


AC-01329

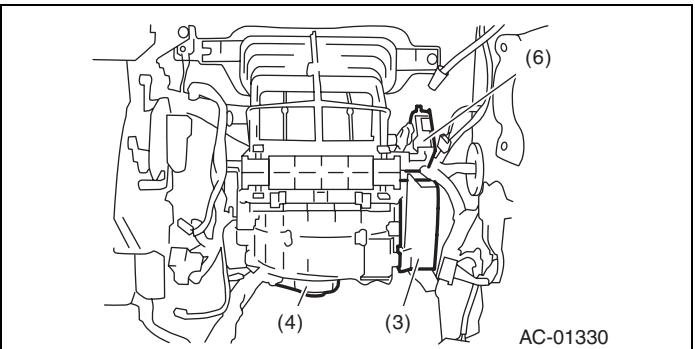

AC-01330

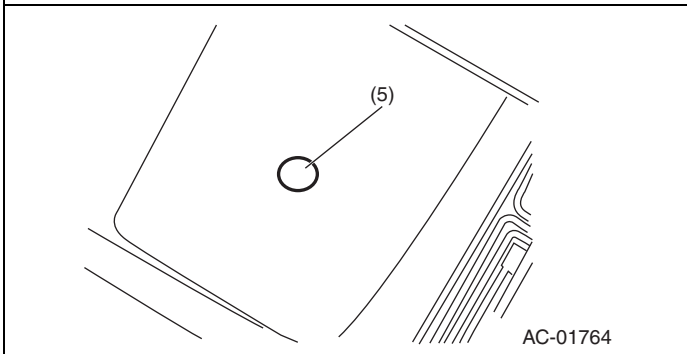

AC-01764

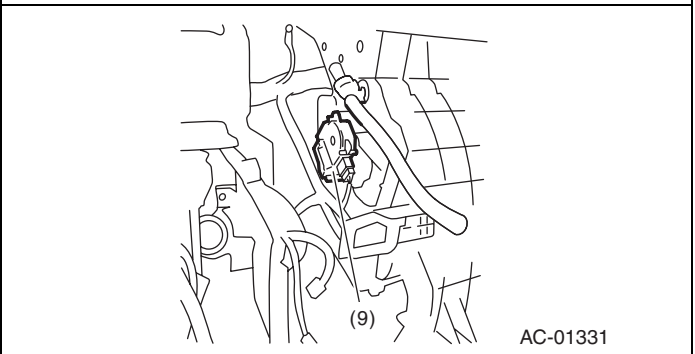

AC-01331